


- ENGINE 271.940 in MODEL 203.042 /242 /742, 209.342 /442
- ENGINE 271.941 in MODEL 211.042 /242
- ENGINE 271.946 in MODEL 203.046 /246 /746
- ENGINE 271.948 in MODEL 203.040 /240 /740
- ENGINE 271.921 in MODEL 203.730
- ENGINE 271.955 in MODEL 209.341 /441
- ENGINE 271.956 in MODEL 211.041 /241
- ENGINE 271.942 in MODEL 203
- ENGINE 271.957 in MODEL 203.741

Shown on model 209 with engine 271

1 Bolt

B6/4 Left intake camshaft Hall sensor
 B6/7 Right exhaust camshaft Hall sensor

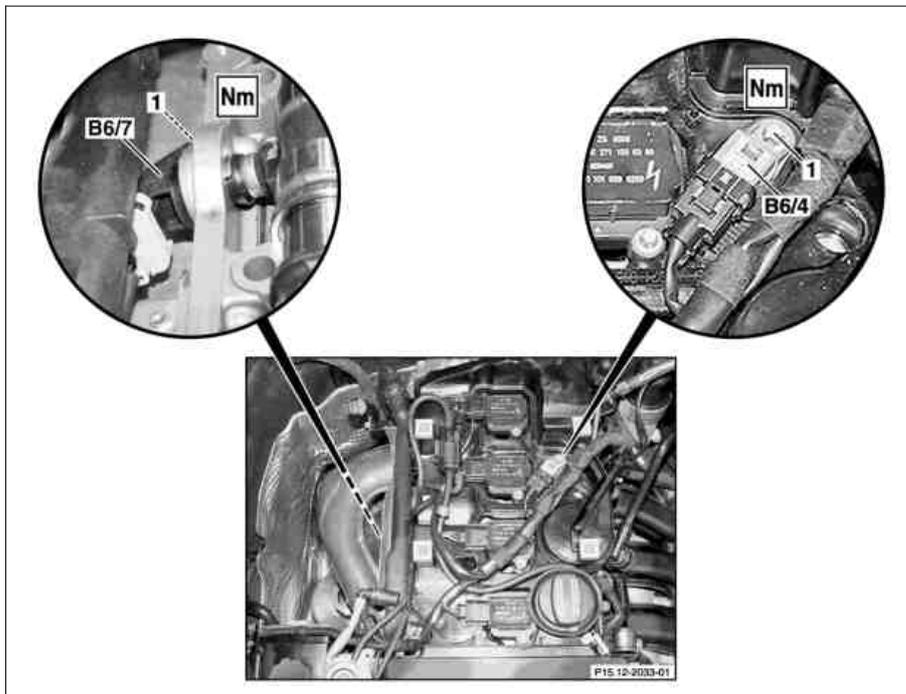

P15.12-2066-06

Modification notes

21.10.05	Camshaft position sensor to cylinder head cover	Engine 271	*BA15.10-P-1002-03D
----------	---	------------	---------------------

		Remove/install	
1	☒ ☒	Open engine hood	Model 203 Model 209 Model 211 AR88.40-P-1000P AR88.40-P-1000Q AR88.40-P-1000T
2		Remove engine trim panel	i Hold the engine cover with both hands and pry it off.
3		Detach the electrical connector at the left intake camshaft Hall sensor (B6/4) or the right exhaust camshaft Hall sensor (B6/7)	
4		Remove bolt (1)	Nm *BA15.10-P-1002-03D
5		Remove left intake camshaft Hall sensor (B6/4) or right exhaust camshaft Hall sensor (B6/7)	i Installation: Replace sealing rings.
6		Install in the reverse order	
7	⚠ Danger!	Risk of accident caused by vehicle starting off by itself when engine is running. Risk of injury caused by contusions and burns during starting procedure or when working near the running engine Check for leaks with engine running	Secure vehicle to prevent it from moving by itself. Wear closed and snug-fitting work clothes. Do not grasp hot or rotating parts. AS00.00-Z-0005-01A

****Nm** Position sensor**

Number	Designation	Engines
		271, 275, 285

BA15.10-P-1002-03D	Camshaft position sensor to cylinder head cover	Nm	8
--------------------	---	----	---