



P32.50-2127-79

A1p13	Left multifunction display	B22/8	Left front level sensor	B24/12	ABC lateral acceleration sensor
A1p15	Right multifunction display	B22/9	Right front level sensor	B24/14	ABC longitudinal acceleration sensor
B4/5	ABC pressure sensor	B22/10	Right rear level sensor	B40/1	ABC oil temperature sensor
B22/1	Left rear plunger travel sensor	B24/3	Front left body acceleration sensor	N51/2	ABC control module
B22/4	Left front plunger travel sensor	B24/4	Front right body acceleration sensor	N72s18	Level adjustment switch
B22/5	Right front plunger travel sensor	B24/5	Rear left body acceleration sensor	N72s20	ABC SPORT switch
B22/6	Right rear plunger travel sensor			Y36/1	ABC front axle valve unit
B22/7	Left rear level sensor			Y36/2	ABC rear axle valve unit
				Y86/1	ABC suction restrictor valve