


## Assignment of rear fuse and relay box

50-77 Fuses  
K40/5 Rear fuse and relay module

Q-U Relay

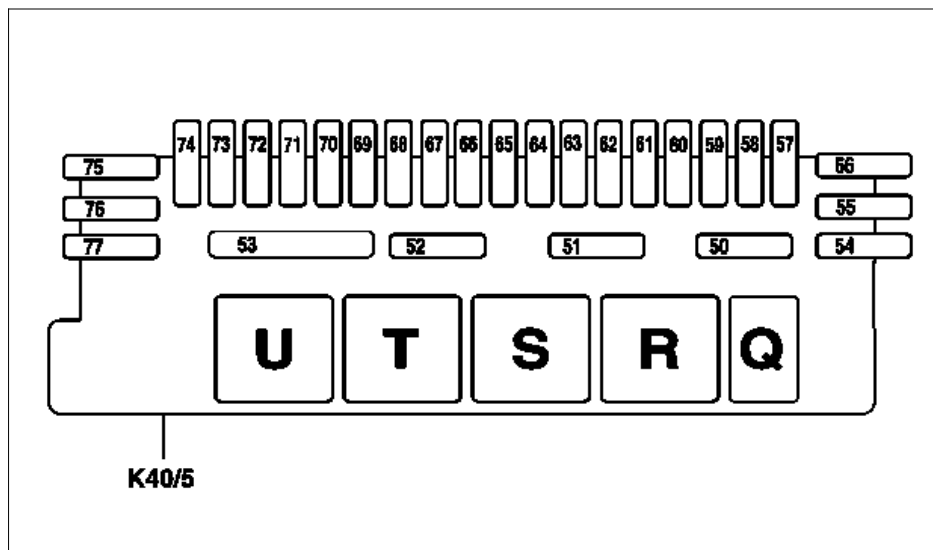

P54.15-2033-05

Fuse	Terminal	Cable ID (cable fused)	Fused function	Rating in amperes (A)
F50	30	-	Reserve relay (K40/5kQ)	-
F51	30	-	<b>Valid for AMG:</b> ● Charge air cooler circulation pump relay (K40/5kR)	40
F52	30	-	Fuel pump relay (K40/5kT)	30
F53	30	-	Heated rear window relay (K40/5kU)	30
F54	30	-	Spare	-
F55	30	0.5 RDWH	<b>Valid for code (228) Stationary heater:</b> ● STH radio remote control receiver (A6/1)	5
F56	30	2.5 RDYE	<b>Valid for code (228) Stationary heater:</b> ● STH control unit (A6n1)	20
F57	30	1.5 RDBU	Fused via circuit 30 connector sleeve (Z4/7): ● Rear shelf antenna amplifier (A2/67) ● Left antenna amplifier module (A2/64)	5
F58	30	GYBK 0.75	<b>Valid for code (889) Keyless Go:</b> fused via circuit 30 connector sleeve (Z7/19): ● Keyless Go control unit (N69/5) ● Keyless go antenna, left door (A2/38) ● Keyless go antenna, right door (A2/40) ● Left door Keyless Go lift solenoid (L12) ● Right door Keyless Go lift solenoid (L12/2)	7.5
F59	30	-	Spare	-
F60	30	RDVT 1.0	<b>Valid for engine 275:</b> ● Charge air cooler circulation pump relay (K60)	7.5
F61	30	RDVT 4.0	Circuit 15R/30 cutoff relay (K75)	30
F62	30	RDPK 2.5	RVC control unit (N52)	5
F63	30	RDBK 2.5	RVC control unit (N52)	25
F64	30	RDBK 0.5	<b>Valid for code (813) voice control system (VCS):</b> ● Voice control system control unit (A35/11)	5
F65	30	-	Spare	-
F66	30	RDYE 2.5	<b>Valid for code (810) sound system:</b> ● Sound amplifier (A2/13)	25
F67	30	BKRD 0.5	<b>Valid for code (220a) Parktronic system (PTS):</b> ● PTS control unit (N62)	5
F68	30	BK 2.5	Roll bar (RB) deployment solenoid (Y57/1)	25
F69	30	RDGN 2.5 RDYE 0.5	RVC control unit (N52)	25
F70	30	RDYE 0.5	<b>Valid for code (475) tire pressure monitor:</b> ● TPM [RDK] control unit (N88)	5

F71	30	RDWH 1.5	Pneumatic control unit with combined functions (A37)	20
F72	30	RDGN 2.5	<b>Valid for code (424) (SEQ) Sequentronic automated manual transmission:</b> <ul style="list-style-type: none"> <li>Automated manual transmission control unit (N15/6)</li> </ul>	10
F73	30	RDWH 4.0	Engine (A7/5m1)	40
F74	30	RDBU 0.5	RVC control unit (N52)	5
	30	RDBU 0.5	<ul style="list-style-type: none"> <li>ATA inclination sensor (B33)</li> </ul>	5
F75	30	-	Spare	-
F76	30	RDBK 1.0	<b>Valid for code (855) TELE AID:</b> Fused via circuit 30 connector sleeve (Z4/3): <ul style="list-style-type: none"> <li>D2B telephone and TELE AID transmitter/receiver (A35/17)</li> </ul>	7.5
			<b>Valid for code (853) MB standard telephone:</b> Fused via circuit 30 connector sleeve (Z4/3): <ul style="list-style-type: none"> <li>D2B telephone transmitter/receiver (A35/13)</li> </ul>	
	30	RDGY 0.75	<b>Valid for code (852) portable telephone preinstallation complete on dome or with code (854) MB portable telephone:</b> <ul style="list-style-type: none"> <li>Telephone interface (A34/4)</li> </ul>	
	30	RDBY 0.75	<ul style="list-style-type: none"> <li>E-net compensator (A28/3)</li> </ul>	
77	30	RDYE 1.5	<b>Valid for code (860) TV tuner:</b> <ul style="list-style-type: none"> <li>TV tuner (A2/42)</li> </ul>	20
	30	RDYE 2.5	<b>Valid for radio (standard):</b> Radio (A2)	