





MERCEDES (BECKER AVUS, AVUS2000, GRAND PRIX)

A.A.	1	2	3	4	A.A.-Power Antenna Turn On
					1-+12 VOLT BATTERY WIRE
					2-Dash Light Dimmer Wire
					3-+12 VOLT IGNITION WIRE
					4-GND

MERCEDES

	A		B	
	4-+12 VOLT BATTERY WIRE	1-Speaker RR+		
	5-Power Antenna Turn On	2-Speaker RR-		
	6-Dash Light Dimmer Wire	3-Speaker RF+		
	7-+12 VOLT IGNITION WIRE	4-Speaker RF-		
	8-GND	5-Speaker LF+		
	-	6-Speaker LF-		
	-	7-Speaker LR+		
-	8-Speaker LR-			

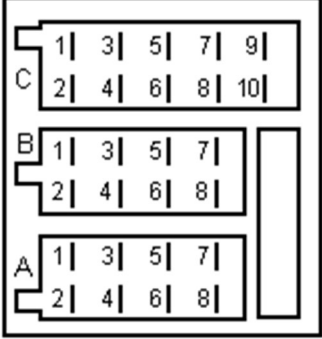
MERCEDES BENZ COMAND 2

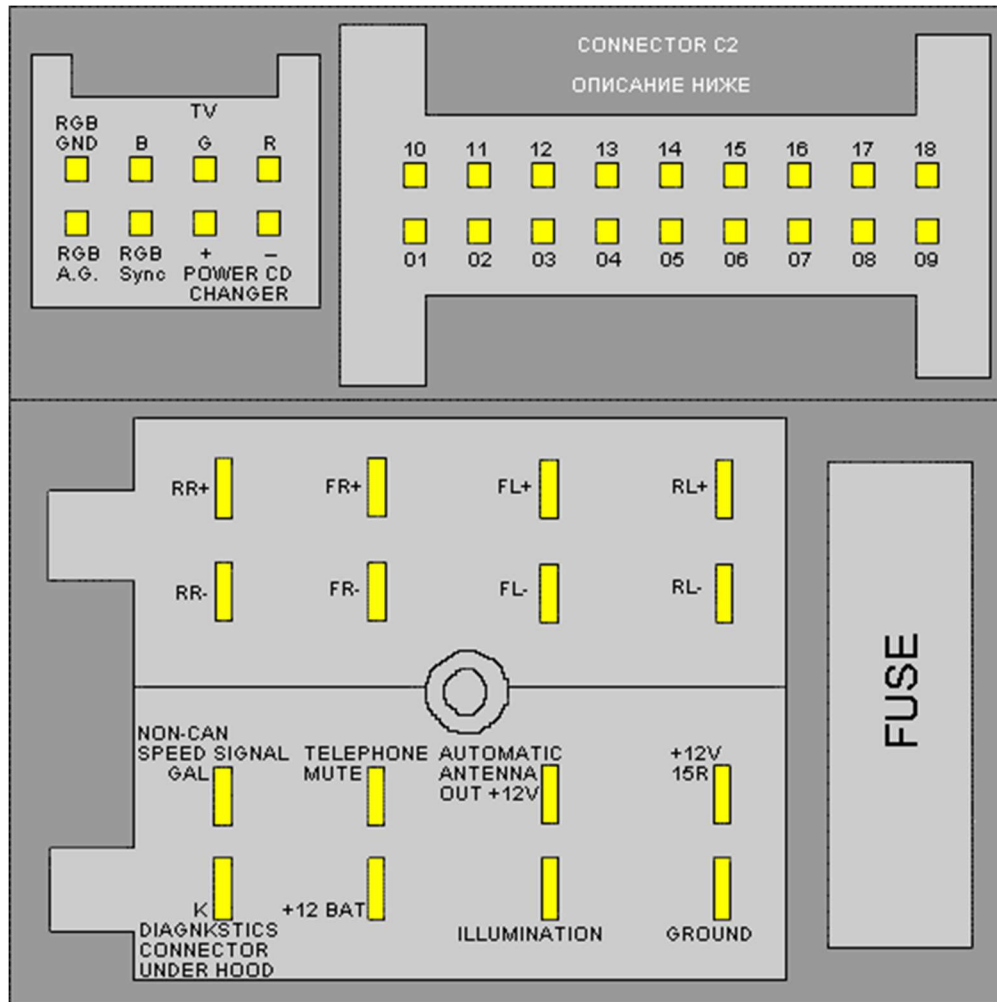


Описание коннектора C2

- | | |
|---|---|
| 01 - Wake up (Robert-Bosch CAN) | 10 - D2B Wake up |
| 02 - Sound TV Right | 11 - Sound TV Left |
| 03 - Sound TV GND | 12 - Sound TV Shield |
| 04 - Aux in Right | 13 - Aux in Left |
| 05 - Aux in GND (Right) | 14 - Aux in Shield (Or aux in Gnd Left) |
| 06 - Speed sensor (Non - CAN) | 15 - Reverse signal |
| 07 - Interior CAN shield | 16 - Robert Bosch CAN Shield |
| 08 - Interior CAN Lo (Buttons on steering wheel, ETC) | 17 - Robert Bosch CAN Lo |
| 09 - Interior CAN Hi (Buttons on steering wheel, ETC) | 18 - Robert Bosch CAN Hi |

MERCEDES BENZ Truckline CC40 no YU3F-18C838-BA

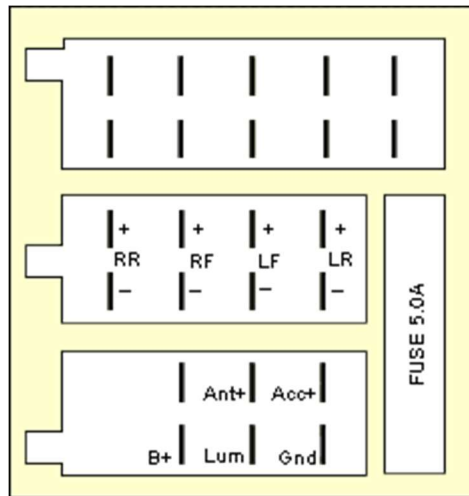


- Mercedes Benz Audio 10 by Becker (BE3100) p/n A 210 820 09 86**
- Mercedes Benz Audio 10 by Becker (BE3200) p/n A 208 820 03 86**
- Mercedes Benz Audio 30 by Becker (BE3307)**
- Mercedes Benz Audio 30 APS (BE4705)**
- Mercedes Benz CD (MF2297) by ALPINE (Japan)**
- Mercedes Benz Truckline CC25 (BE6046)**

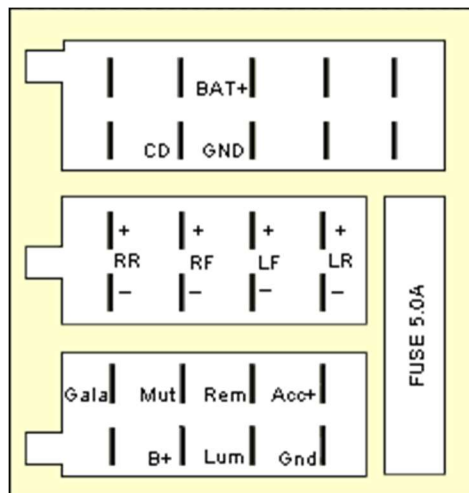

**Mercedes Benz Exquisit by Becker (BE1490)
Mercedes Benz Special by Becker (BE2210, BE1650)**









Mercedes Benz MF2530 (p/n A 203 827 38 42)

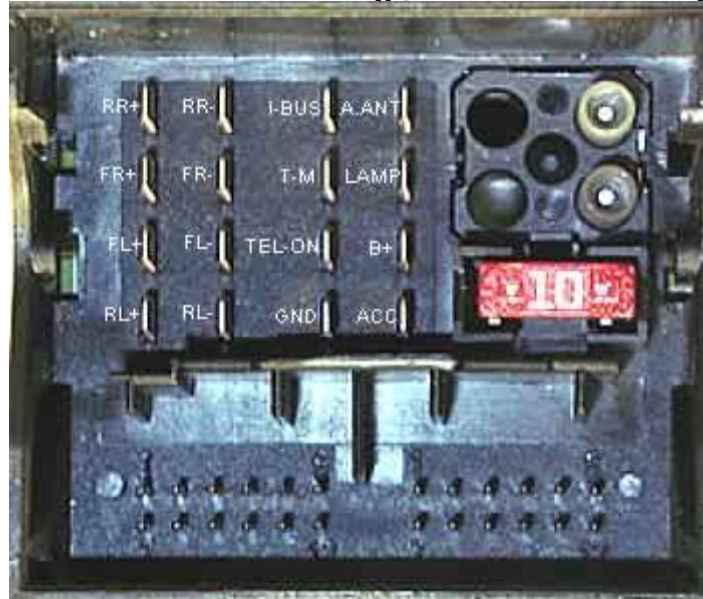

**Mercedes Grundig auto radio Sound 1000, Sound 3000, Sound 4000 Sound 5000 Sound 7000
Sound 8000**

Mercedes	Sound 1000	2 x 5W
Mercedes	Sound 3000	4 x 5W

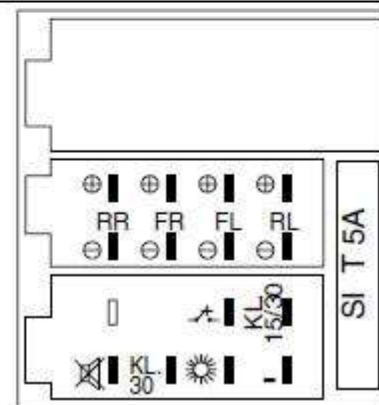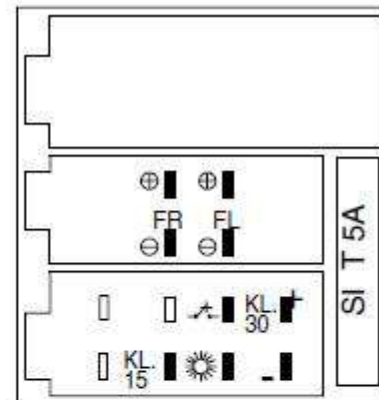

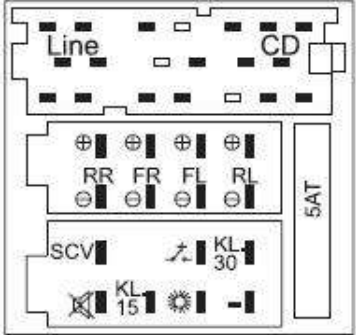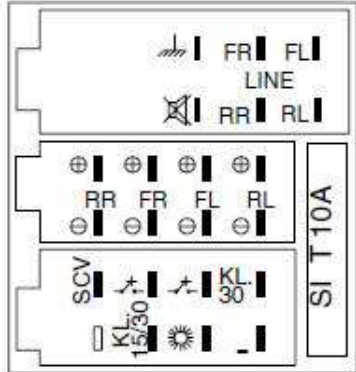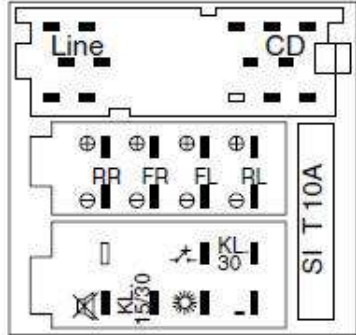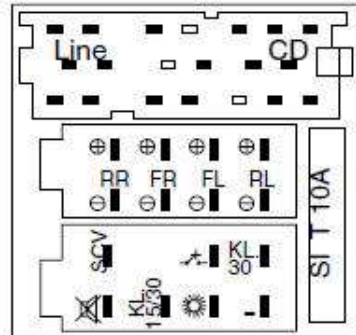Mercedes	Sound 4000	4 x 7W	 <p>Wiring diagram for Mercedes Sound 4000. It shows a 5-pin connector with terminals for Line, CD, RR, FR, FL, RL, SCV, KL 15, and KL 30. The KL 15 terminal is connected to a speaker icon, and the KL 30 terminal is connected to a speaker icon. The diagram is labeled 5AT on the right side.</p>
Mercedes	Sound 5000	4 x 20W	 <p>Wiring diagram for Mercedes Sound 5000. It shows a 5-pin connector with terminals for FR, FL, LINE, RR, RL, SCV, KL 30, and a speaker icon. The KL 30 terminal is connected to a speaker icon. The diagram is labeled SI T 10A on the right side.</p>
Mercedes	Sound 7000 α	4 x 20W	 <p>Wiring diagram for Mercedes Sound 7000 α. It shows a 5-pin connector with terminals for Line, CD, RR, FR, FL, RL, SCV, KL 15, and KL 30. The KL 15 terminal is connected to a speaker icon, and the KL 30 terminal is connected to a speaker icon. The diagram is labeled SI T 10A on the right side.</p>
Mercedes	Sound 8000	4 x 20W	 <p>Wiring diagram for Mercedes Sound 8000. It shows a 5-pin connector with terminals for Line, CD, RR, FR, FL, RL, SCV, KL 15, and KL 30. The KL 15 terminal is connected to a speaker icon, and the KL 30 terminal is connected to a speaker icon. The diagram is labeled SI T 10A on the right side.</p>

MERCEDES BENZ COMAND

COMAND Pinouts

Connector A


- Pin 01 GAL (non-CAN speed signal)
- Pin 02 K (diagnostics connector under hood)
- Pin 03 Telephone Mute
- Pin 04 K. 30 (+12V battery)
- Pin 05 +12V switched output
- Pin 06 K. 58d (illumination)
- Pin 07 K. 15R (ignition)
- Pin 08 K. 31 (ground)

Connector B

- Pin 01 LS rear right +
- Pin 02 LS rear right -
- Pin 03 LS front right +
- Pin 04 LS front right -
- Pin 05 LS front left +
- Pin 06 LS front left -
- Pin 07 LS rear left +
- Pin 08 LS rear left -

Connector C1

- Pin 01 TV Red
- Pin 02 TV Green
- Pin 03 TV Blue
- Pin 04
- Pin 05 - power CD changer
- Pin 06 + power CD changer
- Pin 07
- Pin 08

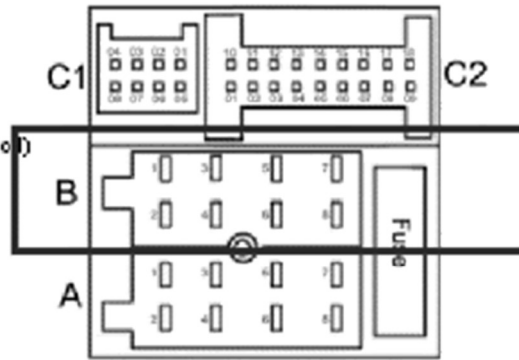

Connector C2

- Pin 01 Wake up (Robert-Bosch CAN)
- Pin 02 sound TV right
- Pin 03 sound TV GND
- Pin 04 aux in right
- Pin 05 aux in GND (right)
- Pin 06 speedsensor (non-CAN)
- Pin 07 interior CAN shield
- Pin 08 interior CAN Lo (buttons on steering wheel, etc)
- Pin 09 interior CAN Hi (buttons on steering wheel, etc)
- Pin 10 D2B Wake up
- Pin 11 sound TV left
- Pin 12 sound TV Shield
- Pin 13 aux in left
- Pin 14 aux in shield (or aux in GND left)
- Pin 15 reverse signal
- Pin 16 Robert-Bosch CAN Shield
- Pin 17 Robert-Bosch CAN Lo
- Pin 18 Robert-Bosch CAN H

I do not have any wires in B, I have 6 wires in what I will call C, but that isn't enough for + and - for 4 speakers. The unit does not have navigation but it does have the optical cd changer connection (6-disc changer in the trunk)

Mercedes Benz Comand 2,5DX

Connector B


- Pin 01 LS rear right +
- Pin 02 LS rear right -
- Pin 03 LS front right +
- Pin 04 LS front right -
- Pin 05 LS front left +
- Pin 06 LS front left -
- Pin 07 LS rear left +
- Pin 08 LS rear left -

Connector C1

- Pin 01 TV Red
- Pin 02 TV Green
- Pin 03 TV Blue
- Pin 04
- Pin 05 - power CD changer
- Pin 06 + power CD changer
- Pin 07
- Pin 08

Connector C2


- Pin 01 Wake up (Robert-Bosch CAN)
- Pin 02 sound TV right
- Pin 03 sound TV GND
- Pin 04 aux in right
- Pin 05 aux in GND (right)
- Pin 06 speedsensor (non-CAN)
- Pin 07 interior CAN shield
- Pin 08 interior CAN Lo (buttons on steering wheel, etc)
- Pin 09 interior CAN Hi (buttons on steering wheel, etc)
- Pin 10 D2B Wake up
- Pin 11 sound TV left
- Pin 12 sound TV Shield
- Pin 13 aux in left
- Pin 14 aux in shield (or aux in GND left)
- Pin 15 reverse signal
- Pin 16 Robert-Bosch CAN Shield
- Pin 17 Robert-Bosch CAN Lo
- Pin 18 Robert-Bosch CAN Hi

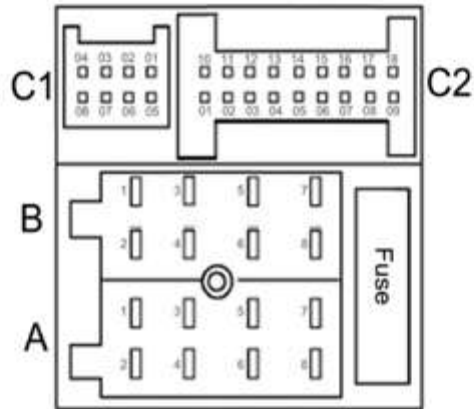

From	To	Colour	Note	Usage
C pin 1	C2 pin 9	Brown/Red	A	CANbus high
C pin 2	C2 pin 8	Brown	A	CANBus low
C pin 5	C1 pin 6	Red/Black		CD Changer +
C pin 6	C1 pin 5	Brown		CD Changer -
C pin 4	C2 pin 10	Blue/Black		D2B Wakeup

Mercedes Benz Command

Steckerbelegung TV-Tuner

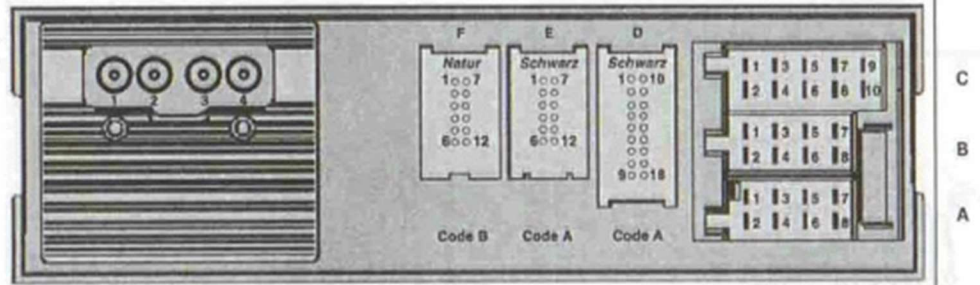

P82.60-2404-04

Pin-Belegung Stecker A Spannungsversorgung

1	GAL
2	K-Leitung
3	-
4	Kl. 30
5	Ausgang + 12 V
6	Kl. 58
7	kl. 15
8	Kl.31

Pin-Belegung Stecker B zum Fonddisplay

1	R GND
2	R
3	G GND
4	G
5	B GND
6	B
7	Sync GND
8	Sync

Pin-Belegung Stecker C zum Fonddisplay

1	TV Audio R
2	TV Audio L
3	TV Audio GND
4	Fond-Vers. +
5	Fond-Vers. -
6	BUS GND
7	F-Bus C
8	F-Bus D
9	RC-Signal
10	RC GND

Pin-Belegung Stecker D zum COMAND

1	Sync
2	B
3	G
4	R
5	GND
6	Bus high
7	Bus GND
8	Audio GND
9	Audio L
10	Sync GND
11	B GND
12	G GND
13	R GND
14	Bus GND
15	Bus Low
16	Bus GND
17	Audio GND
18	Audio R

Pin-Belegung Stecker E AV-1 Eingang

1	FBAS
2	Bus GND
3	RC
4	-
5	Audio GND
6	Audio L
7	FBAS GND
8	-
9	RC GND
10	-
11	Audio GND
12	Audio R



Pin-Belegung Stecker F AV-2 Eingang

1	FBAS / Y
2	Bus GND
3	RC
4	-
5	Audio GND
6	Audio L
7	FBAS GND
8	C
9	RC GND
10	-
11	Audio GND
12	Audio R

Mercedes Benz Command Harman Becker




Steckerbelegung / Pinning

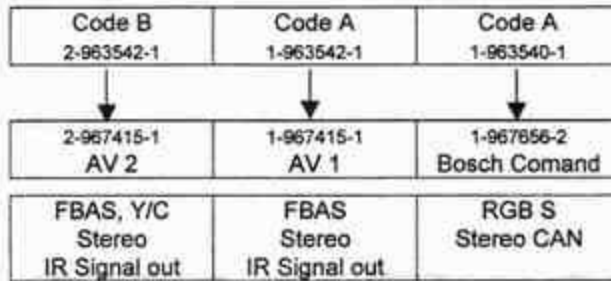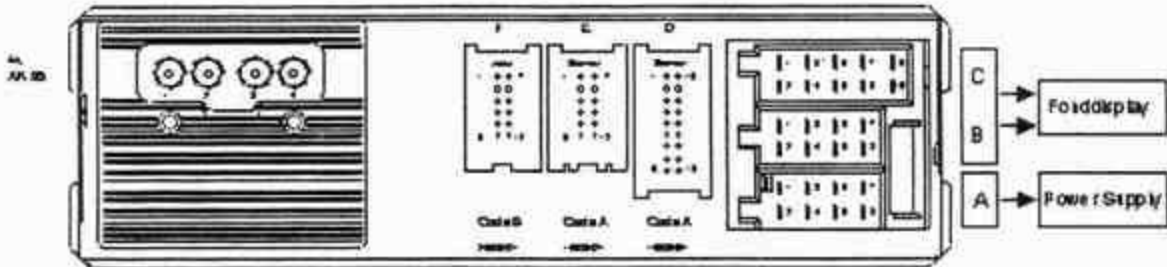

Pin-Belegung

	A	B	C	D	E	F
1	GAL	R GND	TV Audio R	Sync	FBAS	FBAS / C
2	Prod. Bus (K)	R	TV Audio L	B	---	FBAS GND
3	---	G GND	TV Audio GND	G	RC	RC
4	Klemme 30	G	Fond Vers. +	R	---	---
5	Steuerausg. 12 V	B GND	Fond Vers. -	Schirm	Audio GND	Audio GND
6	58 D <i>Li, Li</i>	B	Bus GND	CAN H	Audio L	Audio L
7	Klemme 15 <i>2w, w</i>	Sync GND	F Bus C	---	FBAS GND	FBAS GND
8	Klemme 31	Sync	F Bus D	Schirm	FBAS GND	Y
9			RC Sign.	Audio L	RC GND	RC GND
10			RC GND	S GND	---	---
11				B GND	Audio GND	Audio GND
12				G GND	Audio R	Audio R
13				R GND		
14				---		
15				CAN L		
16				GND		
17				Audio GND		
18				Audio R		

Mercedes Benz W220

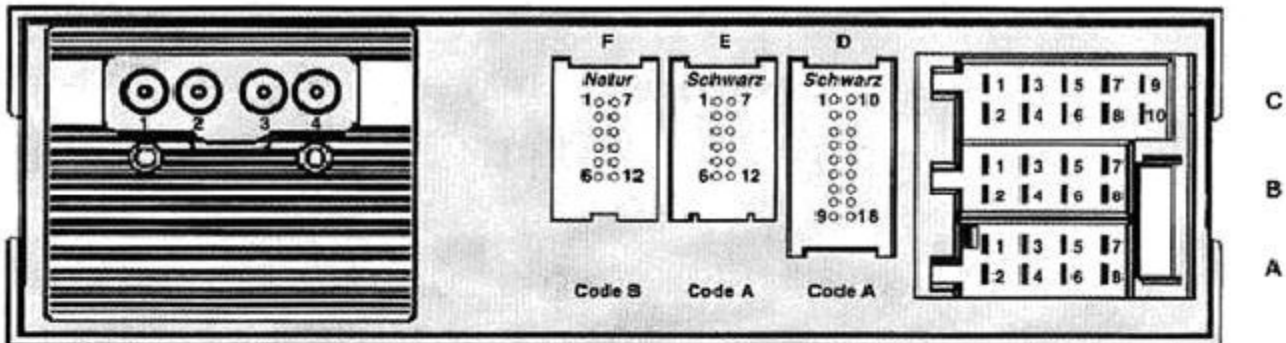

Pin-Belegung Stecker D zum COMAND

1	Sync
2	B
3	G
4	R
5	GND
6	Bus high
7	Bus GND
8	Audio GND
9	Audio L
10	Sync GND
11	B GND
12	G GND
13	R GND
14	Bus GND
15	Bus Low
16	Bus GND
17	Audio GND
18	Audio R

Pin-Belegung Stecker E AV-1 Eingang

1	FBAS
2	Bus GND
3	RC
4	—
5	Audio GND
6	Audio L
7	FBAS GND
8	—
9	RC GND
10	—
11	Audio GND
12	Audio R

Pin-Belegung Stecker F AV-2 Eingang

1	FBAS / Y
2	Bus GND
3	RC
4	—
5	Audio GND
6	Audio L
7	FBAS GND
8	C
9	RC GND
10	—
11	Audio GND
12	Audio R

Pin-Belegung Stecker A Spannungsversorgung

1	GAL
2	K-Leitung
3	—
4	Kl. 30
5	Ausgang + 12 V
6	Kl. 58
7	kl. 15
8	Kl. 31


Pin-Belegung Stecker B zum Fonddisplay

1	R GND
2	R
3	G GND
4	G
5	B GND
6	B
7	Sync GND
8	Sync

Pin-Belegung Stecker C zum Fonddisplay

1	TV Audio R
2	TV Audio L
3	TV Audio GND
4	Fond-Vers. +
5	Fond-Vers. -
6	BUS GND
7	F-Bus C
8	F-Bus D
9	RC-Signal
10	RC GND

Mercedes Benz W245 Comand

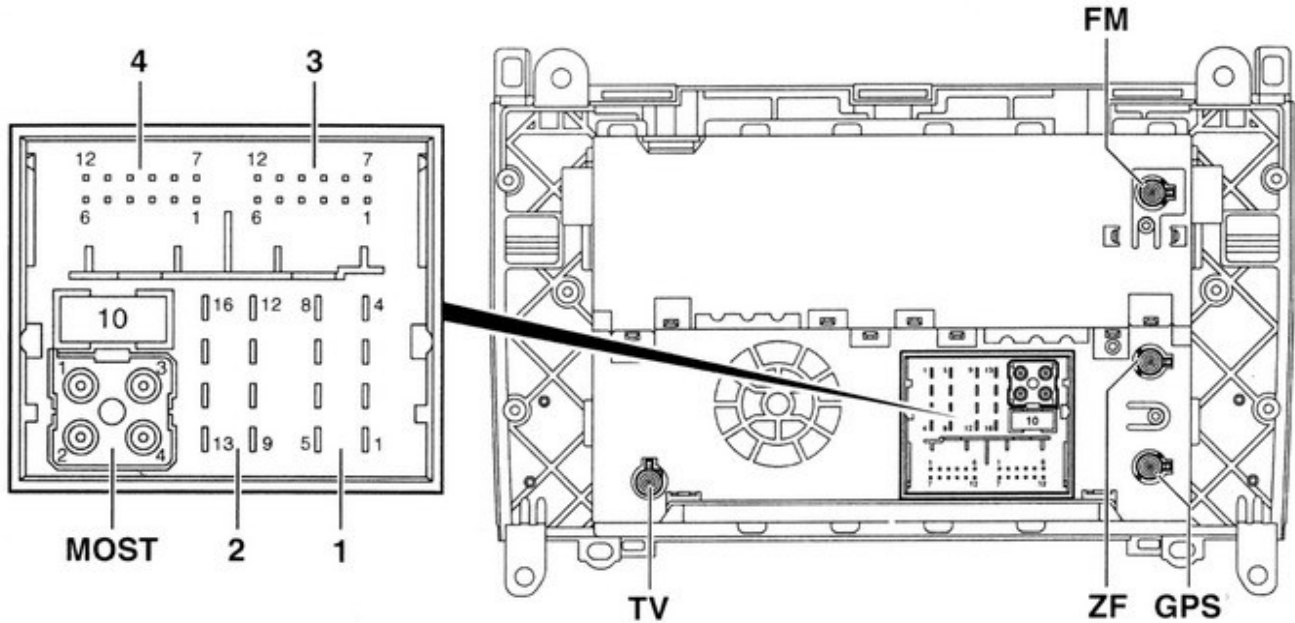

Stecker 1

- PIN 1 NF-Ausgang HR + (Lautsprecher)
- PIN 2 NF-Ausgang VR + (Lautsprecher)
- PIN 3 NF-Ausgang VL + (Lautsprecher)
- PIN 4 NF-Ausgang HL + (Lautsprecher)
- PIN 5 NF-Ausgang HR - (Lautsprecher)
- PIN 6 NF-Ausgang VR - (Lautsprecher)
- PIN 7 NF-Ausgang VL - (Lautsprecher)
- PIN 8 NF-Ausgang HL - (Lautsprecher)

Stecker 2

- PIN 9 CAN-LOW
- PIN 10 Telefon MUTE
- PIN 11 CAN-HIGH
- PIN 12 Kl. 31
- PIN 13 Antenne
- PIN 14 nicht belegt
- PIN 15 Kl. 30
- PIN 16 Wake-up

Stecker 3

- PIN 1 FAN - (externe Lüfter)
- PIN 2 nicht belegt
- PIN 3 nicht belegt
- PIN 4 nicht belegt
- PIN 5 AUX-Shield
- PIN 6 AUX Left Channel (Handschuhfach)
- PIN 7 FAN + (externe Lüfter)
- PIN 8 nicht belegt
- PIN 9 nicht belegt
- PIN 10 nicht belegt
- PIN 11 AUX-GND (Handschuhfach)
- PIN 12 AUX Right Channel (Handschuhfach)

Stecker 4

- PIN 1 Voice Audio + (von Tel. I/F Box Japan)
- PIN 2 Voice Audio - (von Tel. I/F Box Japan)
- PIN 3 Audio GND
- PIN 4 Mikrophon MUTE
- PIN 5 Remote (Wake-up Tel. I/F Box Japan)
- PIN 6 U_{ART} RX Signal GND
- PIN 7 U_{ART} RX +
- PIN 8 U_{ART} RX -
- PIN 9 U_{ART} TX Signal GND
- PIN 10 U_{ART} TX +
- PIN 11 U_{ART} TX -
- PIN 12 nicht belegt

Stecker MOST

- PIN 1 RX-LWL (MOST-Input)
- PIN 2 TX-LWL (MOST-Output)

Stecker GPS

- PIN X Antenne GPS
- PIN S Shield

Stecker ZF

- PIN X IF Output
- PIN S Shield


Stecker FM

- PIN X Antenne Input
- PIN S Shield

Stecker TV

- PIN X FBAS Input
- PIN S Shield

Mercedes Benz W246 Audio 20

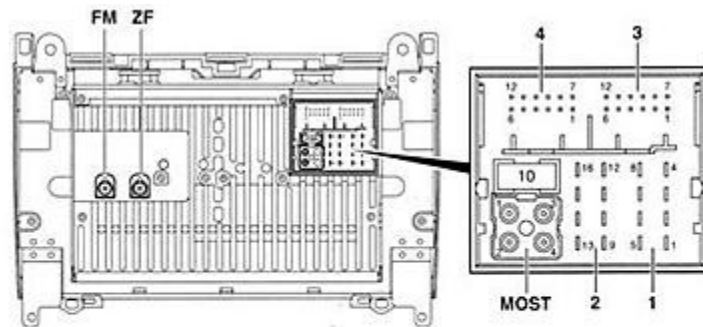

Steckerbelegung

Stecker 1

PIN 1 NF-Ausgang HR + (Lautsprecher)
 PIN 2 NF-Ausgang VR + (Lautsprecher)
 PIN 3 NF-Ausgang VL + (Lautsprecher)
 PIN 4 NF-Ausgang HL + (Lautsprecher)
 PIN 5 NF-Ausgang HR - (Lautsprecher)
 PIN 6 NF-Ausgang VR - (Lautsprecher)
 PIN 7 NF-Ausgang VL - (Lautsprecher)
 PIN 8 NF-Ausgang HL - (Lautsprecher)

Stecker 3

PIN 1 nicht belegt
 PIN 2 nicht belegt
 PIN 3 nicht belegt
 PIN 4 AUX-MUTE (im Handschuhfach)
 PIN 5 AUX-Shield (im Handschuhfach)
 PIN 6 AUX-Left Channel (im Handschuhfach)
 PIN 7 nicht belegt
 PIN 8 nicht belegt
 PIN 9 nicht belegt
 PIN 10 nicht belegt
 PIN 11 AUX-GND (im Handschuhfach)
 PIN 12 AUX-Right Channel (im Handschuhfach)

Stecker MOST

PIN 1 MOST Receiver IN
 PIN 2 MOST Transmitter OUT

Stecker ZF

PIN X ZF-OUT
 PIN 5 Shield

Stecker 2

PIN 9 CAN-LOW
 PIN 10 Telefon MUTE
 PIN 11 CAN-HIGH
 PIN 12 Kl. 31
 PIN 13 Antenne
 PIN 14 nicht belegt
 PIN 15 Kl. 30
 PIN 16 Wake-up

Stecker 4 (nur Japan)

PIN 1 Voice Audio + (von Tel. I/F Box Japan)
 PIN 2 Voice Audio - (von Tel. I/F Box Japan)
 PIN 3 Audio GND
 PIN 4 Mikrophon MUTE
 PIN 5 Remote (Wake-up Tel. I/F Box Japan)
 PIN 6 U_{AKT} RX Signal GND
 PIN 7 U_{AKT} RX +
 PIN 8 U_{AKT} RX -
 PIN 9 U_{AKT} TX Signal GND
 PIN 10 U_{AKT} TX +
 PIN 11 U_{AKT} TX -
 PIN 12 nicht belegt


Stecker FM

PIN X Antenne RF Input
 PIN 5 Shield

Mercedes W204 Comand

Pin-/terminal assignment Headunit

Plug area 1, MQS 40 (electrical) + 2-PIN MOST (optical)

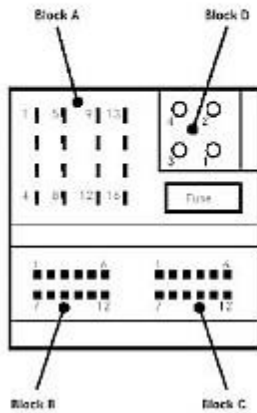

Block A1, 16-PIN, coding A

PIN	Signal/Signal information
1	RR+ (AF rear right +)
2	FR+ (AF front right +)
3	FL+ (AF front left +)
4	RL+ (AF rear left +)
5	RR - (AF rear right -)
6	FR - (AF front right -)
7	FL - (AF front left -)
8	RL - (AF rear left -)

Block A2, 16-PIN, Kodierung A

PIN	Signal/Signalinfo
9	CAN_B_LOW (Innenraum-CAN (BODY-CAN))
10	N.C. (nur Audio 20: Telefon Mute)
11	CAN_B_HIGH (Innenraum-CAN (BODY-CAN))
12	Ubat - (terminal 31)
13	Cradle / Compensator on / off
14	N.C.
15	Ubat + [switched] (terminal 30*)
16	Electrical Wake Up for Media Oriented System Transport (MOST)

Block B, 12-PIN, Kodierung B

PIN	Signal/Signalinfo
1	Microphon 1 In +
2	Microphon 2 In +
3	Microphon Shield
4	Microphon out +
5	Aux 1-S (Aux-AF-Shield)
6	Aux 1-L (Aux-AF-left)
7-8	N.C.
9	Microphon Ground
10	Microphon out -
11	AUX 1-Gnd (Aux-AF-Ground)
12	AUX 1-R (Aux-AF-right)

Block C, 12-PIN, Kodierung B

PIN	Signal/Signalinfo
1	Fan control line (external Fan)
2	Fan - (external Fan)
3-4	N.C.
5	CAN_HU_Low (Telematik-CAN (HEADUNIT-CAN))
6	CAN_HU_High (Telematik-CAN (HEADUNIT-CAN))
7	Diag-Fan (Diagnosis ext. Fan)
8	Fan + (external Fan)
9-12	N.C.

Block D, Stecker LWL


PIN	Signal/Signalinfo
1	MOST IN
2	MOST OUT
3	N.C.
4	N.C.

Standard loudspeaker system:

The impedance of the door loudspeakers front and rear is 4 Ω.


Audio 20, Model no. MF2311
A211 870 12 89
W211, E270 CDI -04

pin 12, aux, right
pin 11, ground
pin 6, aux, left

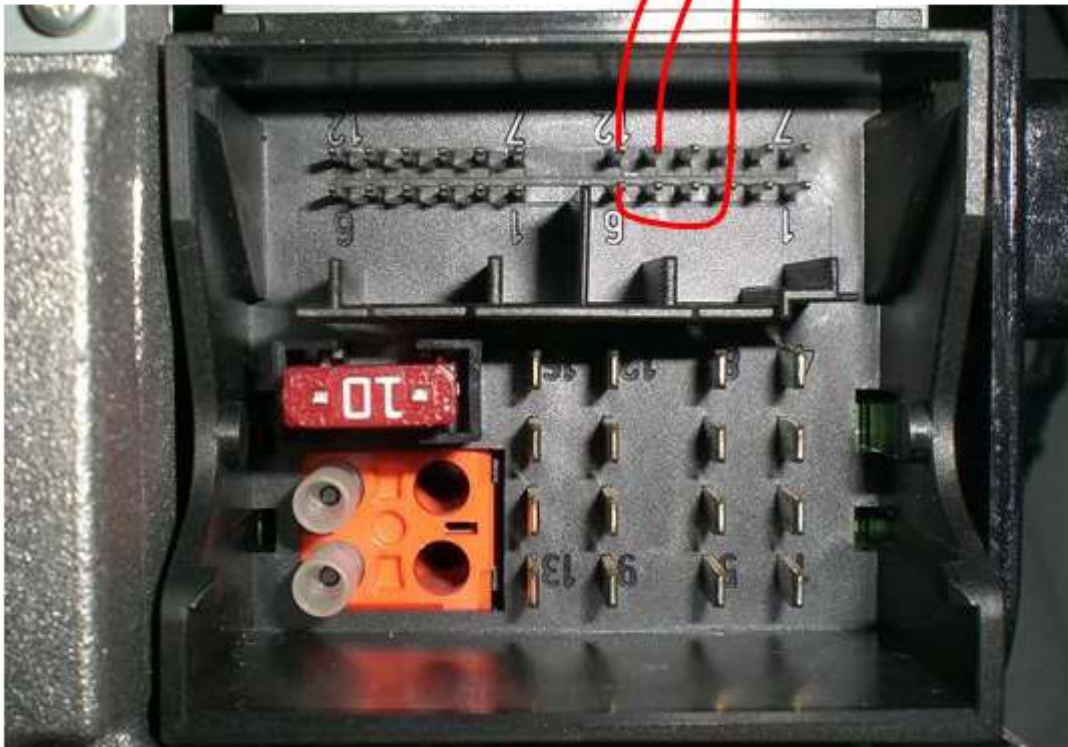

Mercedes W204 Comand stereo wiring 2


Plug E, Central display connection
(digital LVDS 21:3), coding B

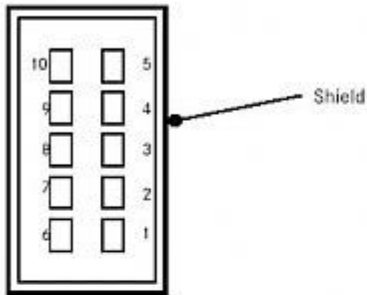

PIN	Signal/Signalinfo
1	Data channel 2 -
2	Data channel 2 +
3	Clock -
4	Clock +
5	Ground
6	Data channel 1 +
7	Data channel 1 -
8	Data channel 0 +
9	Data channel 0 -
10	Ground
cover	shield

Plug FM, Antenna input (Radio)

Single FAKRA: Code B (colour coding: white)

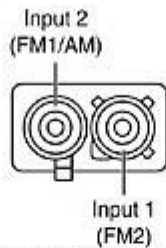


Input 1	
PIN	Signal/Signalinfo
1	FM2
S1	Shield
Input 2	
2	FM1/AM
S2	Shield

Plug GPS, antenna output (Bluetooth) and antenna input (GPS)
(Only COMAND)

Input 1 (BT), Single FAKRA, Code C (colour coding: blue)

Input 2 (GPS), Single FAKRA, Code C (colour coding: blue)

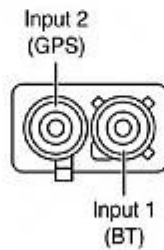

Input 1 (BT)	
PIN	Signal/Signalinfo
1	Bluetooth
S1	Shield
Input 2 (GPS)	
2	GPS
S2	Shield

Plug BTE (only Audio 20)



PIN	Signal/Signalinfo
X	Bluetooth
S	Shield

- Mercedes B Class, W245 2005 Audio50
- Mercedes B Class, W245 2005 Comand
- Mercedes C Class 1999 2004 all
- Mercedes C Class, W203 2004 2007 Audio20
- Mercedes C Class, W203 2004 2007 Audio50
- Mercedes C Class, W203 2004 2007 Comand
- Mercedes CL Class 1999 2004 all
- Mercedes CL Class, W216 2005 Audio20
- Mercedes CL Class, W216 2005 Audio50
- Mercedes CL Class, W216 2005 Comand
- Mercedes CLK Class 1999 2004 all
- Mercedes CLK Class, W209 2005 Audio50
- Mercedes CLK Class, W209 2005 Comand
- Mercedes CLS Class, W219 2004 2007 Audio20
- Mercedes CLS Class, W219 2004 2007 Audio50
- Mercedes CLS Class, W219 2004 2007 Comand
- Mercedes E Class 1999 2002 all
- Mercedes E Class, W211 2003 2007 Audio20
- Mercedes E Class, W211 2003 2007 Audio50.
- Mercedes E Class, W211 2003 2007 Comand
- Mercedes G Class 1999 2005 all
- Mercedes G Class, W463 2005 Audio20
- Mercedes G Class, W463 2005 Audio50
- Mercedes G Class, W463 2005 Comand
- Mercedes GL Class, X164 2005 Audio20
- Mercedes GL Class, X164 2005 Audio50
- Mercedes GL Class, X164 2005 Comand
- Mercedes M Class 1999 2004 all
- Mercedes M Class, W164 2005 Audio20
- Mercedes M Class, W164 2005 Audio50
- Mercedes M Class, W164 2005 Comand
- Mercedes R Class, V251 2005 Audio20
- Mercedes R Class, V251 2005 Audio50
- Mercedes R Class, V251 2005 Comand 6
- Mercedes S Class 1999 2003 all
- Mercedes S Class, W220 2003 2007 Comand
- Mercedes SL Class 1999 2004 all
- Mercedes SL Class, R230 2005 2007 Comand
- Mercedes SLK Class 1999 2004 all
- Mercedes SLK Class, R171 2006 Comand
- Mercedes SLR Class, C199 2005 Comand

MERCEDES	BENZ	BECKER	SAB80C535-N	85C82	
MERCEDES	BENZ	BECKER	PCF80C31BH-3	BAW574252	T
MERCEDES	BENZ	BECKER	SAB83C515A-5N	85C82 smd	
MERCEDES	BENZ	BECKER	SAB80C515-N	85C82 smd	
MERCEDES	BENZ	BECKER	SAB80C515-N	85C82 smd	T
MERCEDES	BENZ	BECKER			
MERCEDES	BENZ	BECKER			
MERCEDES	BENZ	BECKER			
MERCEDES	BENZ	BECKER			
MERCEDES	BENZ CD wide panel	BECKER		24LC02 smd	
MERCEDES	BENZ	BECKER		24LC04 smd	
MERCEDES	BENZ	BECKER			
MERCEDES	BENZ	BECKER			
MERCEDES	BENZ	BECKER			
MERCEDES	BENZ	BECKER	MB90F594A	24LC04 smd	T
MERCEDES	BENZ	BECKER	MB90F546GS K19	24LC08 smd	
MERCEDES	BENZ	MATSUSHITA	D75108GFT68	AM162512	
MERCEDES	BENZ	MATSUSHITA	M30612MC216FP	93C66 smd	T
MERCEDES	BENZ	MATSUSHITA	D78014GC791	93C46 smd	
MERCEDES	BENZ PA9400		D75116GF + D75108GF		
MERCEDES	BENZ PA9811	MATSUSHITA	D78014GC791	93C46 smd	A
MERCEDES	BENZ	MATSUSHITA	YEAMH3397F01	93C46 smd	A
MERCEDES	BENZ CM1330	ALPINE		24C04 smd	
MERCEDES	BENZ DF701	PHILIPS			
MERCEDES	BENZ MF2310 AL2310	ALPINE	D70F3089YGJ Y07	24C08 smd	T
MERCEDES	BENZ MF2311	ALPINE	D70F3089YGJ	24C08 smd	T
MERCEDES	BENZ AUDIO 5 PA9715	MATSUSHITA	YEAMH8339F01	93C46 smd	A
MERCEDES	BENZ AUDIO 5 PA9715	MATSUSHITA	YEAMH3397F02	93C46 smd	A
MERCEDES	BENZ AUDIO 5	MATSUSHITA	D178P018AGCV27	93LC46 smd	
MERCEDES	BENZ AUDIO 5 PA9926	MATSUSHITA	C2BBHF000051	93C46	
MERCEDES	BENZ AUDIO 5	MATSUSHITA		93C46	
MERCEDES	BENZ AUDIO 10	BECKER	SAF-C515C-LM AA	24LC04 smd	T
MERCEDES	BENZ AUDIO 10	BECKER	SAF-C515C-LM AA	24LC04 smd	T
MERCEDES	BENZ AUDIO 10	BECKER	SAF-C515C-LM AA	24LC04 smd	T
MERCEDES	BENZ AUDIO 10	BECKER	SAF-C515C-LM AA	24LC04 smd	T
MERCEDES	BENZ AUDIO 10	BECKER		24LC02 smd	
MERCEDES	BENZ AUDIO 10	BECKER	D78P0308GF	24LC02 smd	
MERCEDES	BENZ AUDIO 10	BECKER	SAFC161CI-32F-16F + MB90F594A	24LC04 smd	T
MERCEDES	BENZ AUDIO 10 EXPORT wide panel	BECKER	SAFC161CI-32FF	24LC04 smd	T
MERCEDES	BENZ AUDIO 10 ECE wide panel	BECKER	SAFC161CI-32F	24LC04 smd	T
MERCEDES	BENZ AUDIO 10	BECKER	SAFC161JC-32RF	24LC04 smd	T
MERCEDES	BENZ AUDIO 10	BECKER	MB90F594A	24LC04 smd	T
MERCEDES	BENZ AUDIO 10 CD	BECKER		24LC04 smd	
MERCEDES	BENZ AUDIO 10 CD	BECKER	MB90F594A	24LC04 smd	T
MERCEDES	BENZ AUDIO 10 CD MF2910	ALPINE	51T3562Y01-9937 + 51T25597Y02-521	24C04 smd	T
MERCEDES	BENZ AUDIO 10 CD MF2199	ALPINE	51T15340Y01 MB89689 106 + 51T15341Y01 MB89689 107	24C04 smd	T
MERCEDES	BENZ AUDIO 20	BECKER			
MERCEDES	BENZ AUDIO 20 MF2531	ALPINE	D70F3089YGJ	24C08 smd	
MERCEDES	BENZ AUDIO 20 MF2540	ALPINE	D70F3089YGJ	24C08 smd	T
MERCEDES	BENZ AUDIO 30 CM1010	ALPINE	MB90F594A0017 Z84 + D78F4216AGF	24C04 smd	T
MERCEDES	BENZ AUDIO 30 CM1011	ALPINE		24C04	

MERCEDES	BENZ AUDIO 30 CM2299	ALPINE	51T95317W01 (MB89689 114) + 51T95318W01 (MB89636R 556)	24C02 smd	
MERCEDES	BENZ AUDIO 30 ECE	BECKER	SAF-C515C-LM	24LC04 smd	TF
MERCEDES	BENZ AUDIO 30	BECKER	SAF-C515C-LM	24LC04 smd	TF
MERCEDES	BENZ AUDIO 30	BECKER	SAF-C515C-LM	24LC04 smd	TF
MERCEDES	BENZ AUDIO 30 APS	BECKER	SAF-C515C-LM	24LC04 smd	TF
MERCEDES	BENZ AUDIO 30 APS	BECKER		24LC04 smd	
MERCEDES	BENZ AUDIO 30	BECKER	SAF-C515C-LM	24LC04 smd	TF
MERCEDES	BENZ AUDIO 30 APS	BECKER		24LC04 smd	
MERCEDES	BENZ AUDIO 30 APS	BECKER	SAFC161CI32F-16F	24LC04 smd	TF
MERCEDES	BENZ AUDIO 30 APS	BECKER	SAFC161CI32F-16F	24LC04 smd	TF
MERCEDES	BENZ AUDIO 30 APS CD	BECKER	SAFC161CI32F-16F	24LC04 smd	TF
MERCEDES	BENZ AUDIO 30 APS CD	BECKER	SAFC161CI32F-16F	24LC04 smd	TF
MERCEDES	BENZ AUDIO 30 APS CD	BECKER	ST10F269-T6	24LC04 smd	
MERCEDES	BENZ AUDIO 30 APS	BECKER	SAFC161CI32F-16FBD	24LC04 smd	
MERCEDES	BENZ AUDIO 30 APS	BECKER		24LC04 smd	
MERCEDES	BENZ AUDIO 30 APS SMART	BECKER	D78P0308GF		
MERCEDES	BENZ AUDIO 30	BECKER	SAF-C515C-LM AA	24LC04 smd	TF
MERCEDES	BENZ AUDIO 30 APS BT-2 BO1100	BOSCH	FIS		
MERCEDES	BENZ AUDIO 30 APS BT-2 BO1150	BOSCH	FIS (8638348807A02 or 8638340560A02)		
MERCEDES	BENZ APS BT-2 BO5042	BOSCH	FIS (8638348807A02)		TF
MERCEDES	BENZ BASIC 24v	BECKER	SAB80C535-N	85C82 smd	LA
MERCEDES	BENZ BASIC 24v	BECKER	SAB80C535-N	85C82 smd	LA
MERCEDES	BENZ CLASSIC RDS	BECKER	SAB80C535-N	85C82 smd	TA
MERCEDES	BENZ CLASSIC RDS	BECKER	SAB80C535-N	85C82 smd	
MERCEDES	BENZ CLASSIC RDS	BECKER	SAB80C515-N	85C82	
MERCEDES	BENZ CLASSIC RDS 24v	BECKER	SAB80C535-N	85C82	
MERCEDES	BENZ CLASSIC	BECKER	SAB80C535-N	24LC02B smd	TF
MERCEDES	BENZ CLASSIC	BECKER	SAB80C515-N	24LC02B smd	
MERCEDES	BENZ CD	ALPINE	D78P058GC	24C02	
MERCEDES	BENZ CD	ALPINE	51T85526W01	24C02 smd	TF
MERCEDES	BENZ CK1211	ALPINE	D70F3033AGC	24C02 smd	N
MERCEDES	BENZ CM1020	ALPINE	MB90F594A	24LC04 smd	
MERCEDES	BENZ CM1030	ALPINE	MB90F594A0130K48 + D78F4216AGF	24C04 smd	
MERCEDES	BENZ CM1031	ALPINE	MB90F594A	24C04 smd	
MERCEDES	BENZ CM1120	ALPINE		24C04	
MERCEDES	BENZ CM1121	ALPINE		24C04	
MERCEDES	BENZ CM1910	ALPINE	D78F4216AGF 9945PX001 + MB90F594A 9945Z42	24C04	TF
MERCEDES	BENZ CM2190	ALPINE	51T73216F03		
MERCEDES	BENZ CM2191	ALPINE	51T26011W01 544	S2445 smd	TA
MERCEDES	BENZ CM2294	ALPINE	51T55194W02 + HD6473724F	S2445 smd	TA
MERCEDES	BENZ CM2296	ALPINE	51T75284W01	S24S4 smd	TA
MERCEDES	BENZ CM2396	ALPINE	51T85499W01	S2445 smd	
MERCEDES	BENZ CM2991	ALPINE			
MERCEDES	BENZ COMAND 2.5-E BO1160	BOSCH	FIS (8638340559A01)		TF
MERCEDES	BENZ COMAND APS DVD MP3	BECKER			
MERCEDES	BENZ COMAND APS DVD MP3	BECKER			
MERCEDES	BENZ RA4110 navigation	ALPINE	MB90F594A-0111-K56-Y39 + D78F4216AGF-Y21	24C04 smd	TF
MERCEDES	BENZ RA4110 navigation	ALPINE		24C04 smd	
MERCEDES	BENZ RA4210 navigation	ALPINE	MB90F594A	24C04 smd	
MERCEDES	BENZ RA4310 AL4310	ALPINE	MB90F594A	24C04 smd	
MERCEDES	BENZ RA4910 CC navigation	ALPINE	MB90F594A-9932-Y11 + D78F4216GF-Y25	24C04 smd	TF
MERCEDES	BENZ RA4910 CC+CD navigation	ALPINE	MB90F594A-9931-Y11 + D78F4216GF-Y25	24C04 smd	TF

MERCEDES	BENZ BOSE	MATSUSHITA			
MERCEDES	BENZ BOSE	MATSUSHITA	D78014GC791	93C46 smd	N
MERCEDES	BENZ BOSE PA9612	MATSUSHITA	YEAMH3397F01	93C46 smd	N
MERCEDES	BENZ BOSE	MATSUSHITA	YEAMH3397F01	93C46 smd	Al
MERCEDES	BENZ BOSE PA9810	MATSUSHITA	D78014GC791	93C46 smd	
MERCEDES	BENZ BOSE	MATSUSHITA	YEAMH3397F01	93C46 smd	N
MERCEDES	BENZ BOSE	MATSUSHITA		93C46 smd	
MERCEDES	BENZ EXQUISIT PA1320	MATSUSHITA	YEAMH3536F01 (6435368F10 A32) + D75108GFT68	AM162512	Ta
MERCEDES	BENZ EXQUISIT	MATSUSHITA	D78014GC791	93C46 smd	Al
MERCEDES	BENZ EXQUISIT PA9401	MATSUSHITA	D75108GF T68 + YEAMH3536F03 6435368F10 B17	AM162512	Ta
MERCEDES	BENZ EXQUISIT	BECKER	SAB80C535-N T40/85	85C82 smd	Ta
MERCEDES	BENZ EXQUISIT	BECKER		85C82 smd	
MERCEDES	BENZ EXQUISIT	BECKER	SAB83C515A-5N	85C82 smd	
MERCEDES	BENZ EXQUISIT	BECKER	SAB80C515-N	85C82 smd	Ta
MERCEDES	BENZ MEXICO 2000	BECKER	L1350429 143X 4890	85C82	N
MERCEDES	BENZ MID HEADUNIT	HARMAN/BECKER		AM162512	
MERCEDES	BENZ PA9611	MATSUSHITA		AM162512	
MERCEDES	BENZ RDS AVUS small panel	BECKER	SAB80C535-N	24C02	Ta
MERCEDES	BENZ SOUND 5	BECKER		24LC08 smd	
MERCEDES	BENZ SOUND 10 wide panel	BECKER	D78P0308GF	24LC02 smd	Ta
MERCEDES	BENZ SOUND 10	BECKER	D78P0308GF	24LC02 smd	Ta
MERCEDES	BENZ SOUND 10	BECKER	MB90F548GS	24LC04 smd	Ta
MERCEDES	BENZ SOUND 10	BECKER	MB90F548GS K22	24LC04 smd	
MERCEDES	BENZ SOUND 20	BECKER	D78P0308GF	24LC02 smd	
MERCEDES	BENZ SOUND 30 CD wide panel	BECKER	D78P0308GF	24LC02 smd	Ta
MERCEDES	BENZ SOUND 30 CD	BECKER	D78P0308GF	24LC02 smd	Ta
MERCEDES	BENZ SOUND 30 APS CD	BECKER	SAFC161CI32F-16F	24LC04 smd	Ta
MERCEDES	BENZ SOUND 30 APS CD	BECKER	ST10F269-T6	24LC04 smd	Ta
MERCEDES	BENZ SOUND 30 CD	BECKER	MB90F548GS	24LC04 smd	Ta
MERCEDES	BENZ SOUND 1000	GRUNDIG	D17003AGFE14	24C01 smd	Ta
MERCEDES	BENZ SOUND 3000	GRUNDIG	D17006AGFE31 or E47	GRN007 (GRX008)	Ta
MERCEDES	BENZ SOUND 4000	GRUNDIG	MC68HC11KA4 (ZC439148CFN WKC5L MC-05 or ZC439111CFN WKC5L MC-04)		Ta
MERCEDES	BENZ SOUND 4000A	GRUNDIG	MC68HC11KA4 (ZC439148CFN WKC5L MC-05)		Ta
MERCEDES	BENZ SOUND 2024 BP5002 24v	BLAUPUNKT	TMP47C847-G471	24C01 smd	Ta
MERCEDES	BENZ SOUND 4024 BP5001 24v	BLAUPUNKT	MC68HC05B16 (ZC99298CFN 8925901868)		Ta
MERCEDES	BENZ SOUND 4024 BP7005 24v	BLAUPUNKT	MC68HC05B16 (8925901645)		
MERCEDES	BENZ SOUND 5000	GRUNDIG	MC68HC11KA4		
MERCEDES	BENZ SOUND 5000	GRUNDIG	D17005GFE29	24C04 or GRN006	Ta
MERCEDES	BENZ SOUND 5000	GRUNDIG	D17005GFE29	24C04 or GRN006	Ta
MERCEDES	BENZ SOUND 6024 BP5000 24v	BLAUPUNKT	MC68HC05B16 (8925901644)		Ta
MERCEDES	BENZ SOUND 7000	GRUNDIG	MC68HC11E9 (WKC38X0 v2.2)		Ta
MERCEDES	BENZ SOUND 7000	GRUNDIG	MC68HC11E20 (WKC6X00-01)		
MERCEDES	BENZ SOUND 7000A	GRUNDIG	MC68HC11E20 (WKC6X00-01)		
MERCEDES	BENZ SOUND 8000	GRUNDIG	MC68HC11KA4 (WKC5L MC-04 or 05)		Ta
MERCEDES	BENZ SPECIAL	BECKER	SAB80C535-N	85C82 smd	Ta
MERCEDES	BENZ SPECIAL 24v	BECKER	SAB80C535-N	85C82	
MERCEDES	BENZ SPECIAL	BECKER	SAB80C535-N	85C82 smd	Ta
MERCEDES	BENZ SPECIAL 24v	BECKER	SAB80C535-N	85C82 smd	Ta
MERCEDES	BENZ SPECIAL	BECKER	SAB80C535-N	24LC02B smd	Ta
MERCEDES	BENZ SPECIAL APS BP4902	BLAUPUNKT	MC68HC705B16 (8612200991)		Ta
MERCEDES	BENZ TRUCKLINE CC10 24v	BLAUPUNKT		M92256 smd + 24C01	
MERCEDES	BENZ TRUCKLINE CC20 24v	VISTEON	760105BFKC401		Ta
MERCEDES	BENZ TRUCKLINE CC25 BE6046 24v	BECKER	MB90F548GS 0239 K48 or 0323 K33	24C04 smd	La

MERCEDES	BENZ TRUCKLINE CC30 BE6047 24v	BECKER	MB90F548GS	24C04 smd
MERCEDES	BENZ TRUCKLINE CC40 24v	VISTEON	MD760105BFKC401 or 7601300FKCCWC	
MERCEDES	BENZ TRUCKLINE CC60 24v	VISTEON	N760105BFKC441	
MERCEDES	BENZ TRUCKLINE CC65 BE6054 24v	BECKER	MB90F548GS	24LC04 smd
MERCEDES	BENZ TRUCKLINE CC65 BE7043 24v	BECKER	MB90548GS-335	24LC04 smd
MERCEDES	BENZ TRUCKLINE CC70 BE7044 24v	BECKER	MB90F548GS	24LC04 smd
MERCEDES	BENZ TRUCKLINE CD60 24v	VISTEON	760105BFKC421	
MERCEDES	BENZ TRUCKLINE CD65 BE6054 24v	BECKER	MB90F548GS 0241 K61	24C04 smd
MERCEDES	BENZ TRUCKLINE CD70 BE6053 24v	BECKER		

Car radio	Model autoradio	Manufacturer	MCU	EEPROM
MERCEDES	BENZ	BECKER		BAW574252
MERCEDES	BENZ	MATSUSHITA	D75108GF T68	AM162512
MERCEDES	BENZ	MATSUSHITA	D78014GC 791	93C46
MERCEDES	BENZ	MATSUSHITA	YEAMH3397F01	93C46
MERCEDES	BENZ	MATSUSHITA	D78014GC 791	93C46 smd
MERCEDES	BENZ	MATSUSHITA	D78	93C46 smd
MERCEDES	BENZ AUDIO 10	BECKER	SAF-C161CI32F CAN-BUS	24C04
MERCEDES	BENZ AUDIO 10	BECKER	SAF-C515-LM+EPROM	24C04 smd
MERCEDES	BENZ AUDIO 10	BECKER		24C04 smd
MERCEDES	BENZ AUDIO 10	BECKER		
MERCEDES	BENZ AUDIO 10	BECKER	D78P0308GF	24LC02B smd
MERCEDES	BENZ AUDIO 10	BECKER	SAF-C161CI32F-16FBB	24LC04 smd
MERCEDES	BENZ AUDIO 10	BECKER	MB90F549A CAN-BUS	24LC04 smd
MERCEDES	BENZ AUDIO 10	BECKER	D78P0308GF	24LC02B smd
MERCEDES	BENZ AUDIO 10	BECKER	D78P0308GF	24LC02B smd
MERCEDES	BENZ AUDIO 10 C	BECKER		24LC04 smd
MERCEDES	BENZ AUDIO 10 CD	BECKER		24C04 smd
MERCEDES	BENZ AUDIO 10 CD	ALPINE	51T3562Y01+51T25597Y02 (D75P308GF) + (MB90F594A)	24C04
MERCEDES	BENZ AUDIO 10 CD	ALPINE	51T15341Y02 MB89P689-9816-Z49	24C04
MERCEDES	BENZ AUDIO 10 ECE	BECKER	SAF-C515C-LM AA	24C04 smd
MERCEDES	BENZ AUDIO 20	BECKER	D78P0308GF	24C02
MERCEDES	BENZ AUDIO 30 APS	BECKER		
MERCEDES	BENZ AUDIO 30 APS	BECKER		24LC04 smd
MERCEDES	BENZ AUDIO 30 APS	BECKER		24LC04 smd
MERCEDES	BENZ AUDIO 30 APS	BECKER	SAF-C161CI32F-16F	24LC04 smd
MERCEDES	BENZ AUDIO 30 APS	BECKER		
MERCEDES	BENZ AUDIO 30 APS	BECKER	SAF-C161CI32F-16F CAN-BUS	24LC04 smd
MERCEDES	BENZ AUDIO 30 APS	BECKER	SAF-C161CI32F-16F CAN-BUS	24LC04 smd
MERCEDES	BENZ AUDIO 30 APS	BECKER	ST10F269-T6 CAN-BUS	24LC04 smd
MERCEDES	BENZ AUDIO 30 APS	BECKER		
MERCEDES	BENZ AUDIO 30 APS BT-2 BO1150 navigation	BLAUPUNKT	FIS (8638348807)+MC68HC705C4A (8612201955)	
MERCEDES	BENZ AUDIO 30 APS BT-2 BO1160 navigation	BLAUPUNKT	FIS	24C32 w FIS
MERCEDES		BLAUPUNKT		
MERCEDES	BENZ AUDIO 30 APS BT-2 BO1100 navigation	BLAUPUNKT		
MERCEDES	BENZ AUDIO 30 ECE	BECKER	SAF-C515C-LM	24LC04 smd
MERCEDES	BENZ AUDIO 5	MATSUSHITA	D178P018AGC V27	93LC46 smd
MERCEDES	BENZ AUDIO 5 PA9715	MATSUSHITA	YEAMH8339F01	93C46
MERCEDES	BENZ AUDIO 5 PA9819			93C46
MERCEDES	BENZ AUDIO 5 PA9926	MATSUSHITA	C2BBHF000051	93C46
MERCEDES	BENZ AUDIO 50 APS			
MERCEDES	BENZ BOSE	MATSUSHITA	YEAMH3397F01	93C46 smd
MERCEDES	BENZ BOSE	MATSUSHITA		
MERCEDES	BENZ BOSE	MATSUSHITA		93C46
MERCEDES	BENZ BOSE	MATSUSHITA	D78014GC791	93C46

MERCEDES	BENZ BOSE	MATSUSHITA		
MERCEDES	BENZ BOSE	MATSUSHITA	D78014GC 791	93C46 smd
MERCEDES	BENZ CD	ALPINE	51T85526W01	24C026 (24C02)
MERCEDES	BENZ CD	ALPINE	D78P058GC	24C02
MERCEDES	BENZ BASIC 24v	BECKER	SAB80C535-N	85C82
MERCEDES	BENZ CLASSIC	BECKER	SAB80C535-N	24LC02B smd
MERCEDES	BENZ CLASSIC	BECKER		
MERCEDES	BENZ CLASSIC RDS	BECKER	SAB80C535-N T40/85 (346)	85C82 smd
MERCEDES	BENZ CLASSIC RDS	BECKER	SAB80C535-N T40/85	85C82 smd
MERCEDES	BENZ CLASSIC RDS	BECKER		
MERCEDES	BENZ CM 1010	ALPINE	MB90F594A + D78F4216AGF	24C04
MERCEDES	BENZ CM 1020	ALPINE	MB90F594A CAN-BUS	24C04
MERCEDES	BENZ CM 1031	ALPINE	MB90F594A CAN-BUS	24C04
MERCEDES	BENZ CM 2190	ALPINE		
MERCEDES	BENZ CM 2191	ALPINE	51T26011W01	S24S45
MERCEDES	BENZ CM 2294	ALPINE		S24S45
MERCEDES	BENZ CM 2296	ALPINE	51T75284W01	S24S4 smd
MERCEDES	BENZ CM 2297 CD	ALPINE		24C026 (24C02)
MERCEDES	BENZ CM 2396	ALPINE	51T85499W01	S2445 smd
MERCEDES	BENZ CM 2991	ALPINE		
MERCEDES	BENZ COMAND 2.0	BOSH		
MERCEDES	BENZ COMAND 2.0E	BOSH		
MERCEDES	BENZ COMAND 2.0DX	BOSH		
MERCEDES	BENZ COMAND 2.5D	BOSH		
MERCEDES	BENZ EXQUISIT	MATSUSHITA		
MERCEDES	BENZ EXQUISIT	MATSUSHITA		
MERCEDES	BENZ EXQUISIT	BECKER	SAB80C535-N T40/85 (342)	85C82 smd
MERCEDES	BENZ EXQUISIT	BECKER		85C82 smd
MERCEDES	BENZ EXQUISIT	BECKER	SAB83C515A-5N	85C82 smd
MERCEDES	BENZ EXQUISIT PA9401	MATSUSHITA	D75108GFT68 + YEAMH3536F03	AM162512
MERCEDES	BENZ NAVIGATION	BECKER		
MERCEDES	BENZ PA9611	MATSUSHITA		AM162512
MERCEDES	BENZ PA9813	MATSUSHITA	YEAMH3397F01	93C46 smd
MERCEDES	BENZ RA4910 RGB display navigation	ALPINE	MB90F594A	24C04 smd
MERCEDES	BENZ SOUND 1000	GRUNDIG	D17003AGFE14	24C01
MERCEDES	BENZ SOUND 10	BECKER	D78P0308GF	24LC02B
MERCEDES	BENZ SOUND 2024 BP5002	BLAUPUNKT		
MERCEDES	BENZ SOUND 30	BECKER	D78P0308GF	24LC02 smd
MERCEDES	BENZ SOUND 3000	GRUNDIG	D17006AGF E31	GRN007 24C04
MERCEDES	BENZ SOUND 3000	GRUNDIG	D17006AGF E47	GRN007 24C04
MERCEDES	BENZ SOUND 4000	GRUNDIG	ZC439111CFN MC68HC11KA4 WKC5LMC-04	
MERCEDES	BENZ SOUND 4000	GRUNDIG	ZC439148CFN MC68HC11KA4 WKC5LMC-04	
MERCEDES	BENZ SOUND 4000A	GRUNDIG	ZC439148CFN MC68HC11KA4 WKC5LMC-05	
MERCEDES	BENZ SOUND 4024 BP5001 24v	BLAUPUNKT	ZC99298CFN MC68HC05B32 (8925901868)	MCU
MERCEDES	BENZ SOUND 5000	GRUNDIG	MC68HC11KA4	
MERCEDES	BENZ SOUND 5000	GRUNDIG	D17005GFE 29	GRN006 24C08
			ZC99201CFN MC68HC05B (8925901644)	
MERCEDES	BENZ SOUND 6024 BP7005 24v	BLAUPUNKT	R50633FNA (8925901608) RDS	MCU
MERCEDES	BENZ SOUND 7000	GRUNDIG	MC68HC11E9 (WKC38X0 V2.2)	MCU
MERCEDES	BENZ SOUND 7000	GRUNDIG	MC68HC11E20 (WKC6X00-01)	
MERCEDES	BENZ SOUND 8000	GRUNDIG	ZC439148CFN MC68HC11KA4 (WKC5L MC-05)	MCU
MERCEDES	BENZ SOUND 8000	GRUNDIG	ZC439111CFN MC68HC11KA4 (WKC5L MC-04)	MCU
MERCEDES	BENZ SPECIAL	BECKER	SAB80C535-N T40/85 (342)	85C82 smd

MERCEDES	BENZ SPECIAL	BECKER	SAB 80C535-N T40/85	85C82 smd
MERCEDES	BENZ SPECIAL	BECKER		85C82 smd
MERCEDES	BENZ SPECIAL	BECKER	SAB80C535-N T40/85	85C82 smd
MERCEDES	BENZ SPECIAL	BECKER	SAB80C535-N T40/85	24LC02B smd
MERCEDES	BENZ SPECIAL 24v	BECKER	SAB80C535-N	85C82
MERCEDES	BENZ SPECIAL APS BP4902	BLAUPUNKT	MC68HC705B16CFN+27C256 MC68HC11F1	MCU
MERCEDES	BENZ TRUCK LINE CC10 24v	BLAUPUNKT		ST92256+24C01
MERCEDES	BENZ TRUCK LINE CC20 24v	VISTEON	N760130BFKC401	
MERCEDES	BENZ TRUCK LINE CC20 24v	VISTEON	N760105BFKC401	
MERCEDES	BENZ TRUCK LINE CC40 24v	VISTEON	N760130BFKCCWC	
MERCEDES	BENZ TRUCK LINE CC40 24v	VISTEON	N760105BFKC401	
MERCEDES	BENZ TRUCK LINE CC60 24v	VISTEON	N760105BFKC441	
MERCEDES	BENZ TRUCK LINE CD60 24v	VISTEON		