



MODEL 203.7 with CODE (413) Panoramic glass roof with top sliding roof

MODEL 211.0 with CODE (413) Panoramic glass roof with top sliding roof

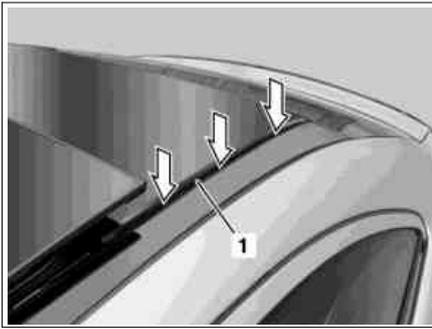

P77.50-2042-01

1 Outer guide rail

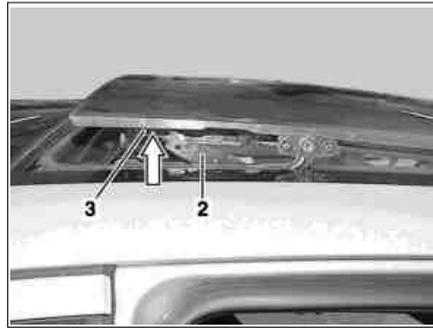


P77.20-2217-01

2 Release lever
3 Cover connection



P77.50-2043-01

4 Outer duct at bottom

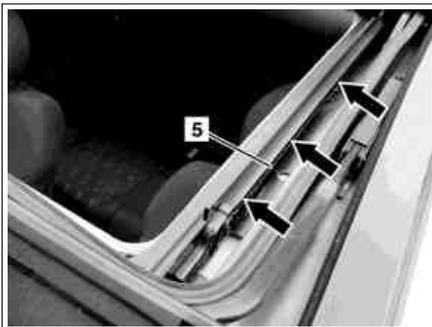

P77.50-2044-01

5 Inner upper duct



P77.50-2045-01

6 Shift gate



P77.50-2046-01

7 Wind deflector pivot arm

Clean and lubricate			
1	Lubricate outer guide rail (1)	i Drip one drop of antifriction agent each at the points marked with arrows in the guide rail. Special sliding roof antifriction agent	*BR00.45-Z-1055-06A
2	Open tilting/sliding roof panel	i Only open until the release lever (2) lowers.	
3	Clean cover connection (3) with rag, grease	i The cover connection is marked by a "U-shape". Lubricant paste	*BR00.45-Z-1004-06A
4	Fully open tilting/sliding roof		
5	Clean outer duct at bottom (4) with rag, grease contact surface	i See arrows. Lubricant paste	*BR00.45-Z-1004-06A
6	Clean inner duct at top (5) with rag, grease contact surface	i See arrows. Lubricant paste	*BR00.45-Z-1004-06A
7	Clean guide rail (6) with rag, grease contact surface	i See arrows. Lubricant paste	*BR00.45-Z-1004-06A
8	Clean pivot arm of wind deflector (7) with rag, grease	i See cross-hatch pattern. Lubricant paste	*BR00.45-Z-1004-06A
9	Check tilting/sliding roof for proper function		
10	Remove excess lubricant		

Repair materials

Number	Designation	Order number
BR00.45-Z-1055-06A	Special sliding compound	A 000 989 36 60
BR00.45-Z-1004-06A	Synthetic grease, sliding roof 500 g, DB supply specification 6827.60	A 001 989 46 51