



P54.15-3021-09

Fuse and relay box in left of engine compartment

N10/1 Front SAM control unit with fuse and relay module

X

Direction of travel

Socket	Designation
J	<ul style="list-style-type: none"> Terminal 15 relay (N10/1kJ)
K	<ul style="list-style-type: none"> Terminal 15R relay (N10/1kK)
LL	Valid for wiper park position heater: <ul style="list-style-type: none"> Backup relay (N10/1kL)
M	<ul style="list-style-type: none"> Circuit 50 starter relay (N10/1kM)
N	<ul style="list-style-type: none"> Engine circuit 87 relay (N10/1kN)
O	<ul style="list-style-type: none"> Fanfare horn relay (N10/1kO)
P	Valid for engine 272: <ul style="list-style-type: none"> Secondary air injection relay (N10/1kP)
Q	<ul style="list-style-type: none"> Backup relay (N10/1kQ)
R	<ul style="list-style-type: none"> Chassis circuit 87 relay (N10/1kR)