


P88.20-2642-09

- 1 Electrical connector
- 2 Front bumper
- 3 Radiator grille
- 4 Screw

- 5 Screw
- B14 Outside temperature display temperature sensor

 
- E5/1 Left front fog lamp
- E5/2 Right fog lamp
- X26/27 Front PTS separation point (with code (220) Parktronic system (PTS))

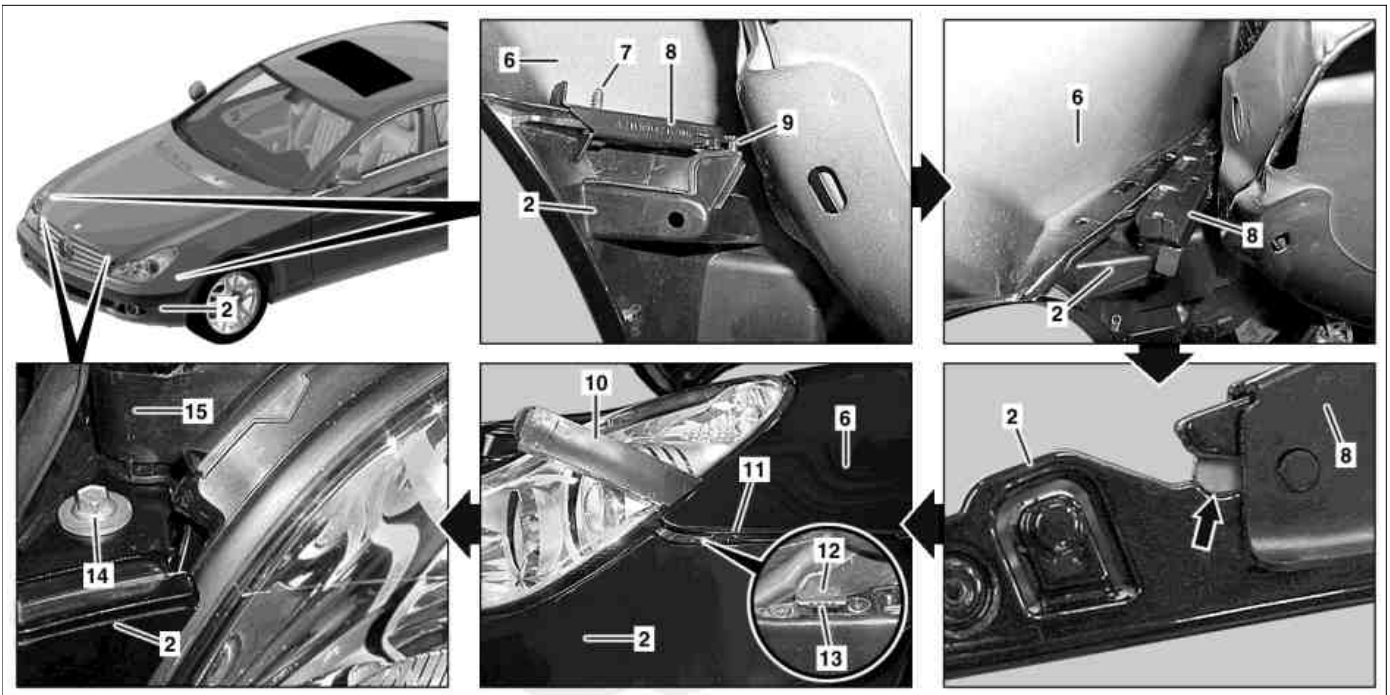

P88.20-2643-09

Shown on left side of bumper

- 2 Front bumper
- 6 Left front fender
- 7 Screw

- 8 Terminal strip
- 9 Guide bolts
- 10  Mounting wedge
- 11 Adhesive foil

- 12 Retaining clamp
- 13 Clip
- 14 Screw
- 15 Housing



P88.20-2644-07

6 Left front fender
11 Adhesive foil
16 Adhesive foil


17 Mount
18 Right front fender
19 Mount

E1 Left front headlamp unit
E2 Right front headlamp unit

	Remove/install		
1	Open engine hood		AR88.40-P-1000TX
2	Remove front section of fender liner from left front fender (6) and right front fender (18)		AR88.10-P-1310TX
3	Unscrew bolts (4) from radiator grille (3)	Radiator grille (3) remains on front bumper (2).	
4	Slightly pivot radiator grille (3) toward front, reach behind radiator grille (3) and unscrew bolts (5) from front crossmember		
5	Unclip outside temperature display temperature sensor (B14) from front bumper (2)		
6.1	Disconnect front PTS separation point (X26/27)	Only with code (220) Parktronic system (PTS)	
7	Disconnect electrical connector (1) from left front fog lamp (E5/1) and right front fog lamp (E5/2)		
8	Unscrew bolt (7) from left and right terminal strip (8)		
9	Pivot left and right terminal strip (8) into guide pins (9) and press toward front into catch point (arrow)	Left and right terminal strip (8) remains on front bumper (2).	
10	Lift left front fender (6) and right front fender (18) out of retaining clip (12) with assembly wedge (10)	Installation: Ensure that clip (13) is seated correctly on left and right retaining clip (12). 	*110589035900
11	Remove bolt (14)		
12	Remove front bumper (2) toward front with aid of helper	Carefully remove front bumper (2) with aid of helper, otherwise adhesive foils (11, 16) and paint can be damaged. Installation: Install front bumper (2) at side into mounts (17, 19) and lugs for front bumper (2) into housing (15) of left front lamp unit (E1) and housing (15) of right front lamp unit (E2).	
13.1	Disassemble front bumper (2) and assemble	Only when replacing front bumper (2).	AR88.20-P-2050TX
14	Install in the reverse order		
15	Check gaps on front bumper (2), adjust if necessary	See: ↓ Gap dimensions on hoods, doors and lids Gap dimension between engine hood and bumper "Dimension C". 	AR60.00-P-0700-01Y *BE60.00-P-1001-01O *129589032100
16.1	Check Parktronic system (PTS) for proper function	Only with code (220) Parktronic system (PTS) Switch off ignition, PTS control unit performs self-test automatically	
17	Check adjustment for left front fog lamp (E5/1) and right front fog lamp (E5/2), correct if necessary Check and correct the adjustment of the headlamps		AP82.10-P-8260TX
18	Close engine hood		


Test values for gap dimensions on hoods, doors and lids

Number	Designation			Model 219
BE60.00-P-1001-01O	Gap dimension	Engine hood to fender	Dimension "A" mm	3.5 (±0.5)
		Engine hood to headlamp	Dimension "B" mm	4.0 (±0.5)
		Engine hood to bumper	Dimension "C" mm	4.0 (±0.5)
		See picture	AR60.00-P-0700-01Y	

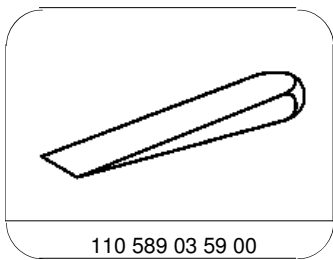

110 589 03 59 00

Mounting wedge

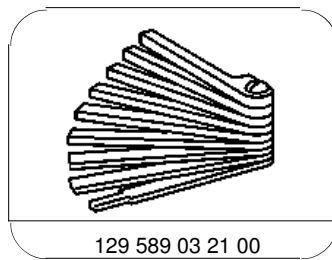

129 589 03 21 00

Feeler gauge