


ENGINES 272, 273/

- 1 Electrical connector
- 2a Oil pan bottom section
- 3 Bolts
- S43 Oil level check switch

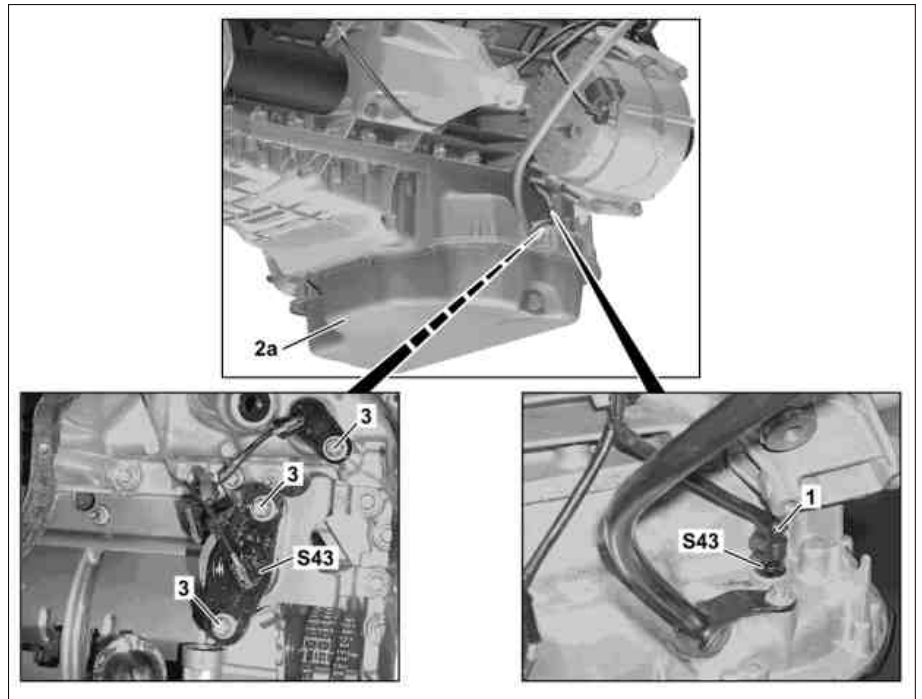

P01.45-2223-06

Remove/install			
1	Remove oil pan bottom section (2a)		
2	Disconnect electrical connector (1) at oil level check switch (S43)		
3	Remove bolt (3)	Nm	*BA18.40-P-1001-02B
4	Remove oil level check switch (S43) from oil pan	i	Installation: Install new O-ring.
5	Install in the reverse order		
6	Connect STAR DIAGNOSIS and read fault memory		Stored faults which may be caused by removed cables or by a simulation, must be processed and erased in the fault memories after completing the work.
AD	Connect STAR DIAGNOSIS and read out fault memory		AD00.00-P-2000-04A

Nm Oil sensor

Number	Designation	Engine 272	Engine 273
BA18.40-P-1001-02B	Bolt, oil level check switch to oil pan	Nm 14	14