


### Assignment of fuse and relay box in left engine compartment

1-27 Fuses  
K40/2 Driver-side fuse and relay module

A-J Relays  
X Direction of travel

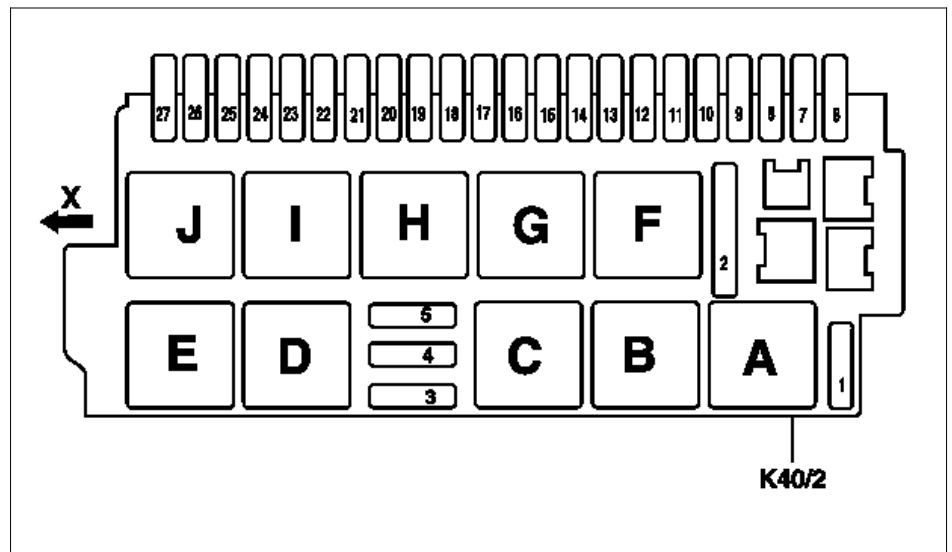

P54.15-2316-05

Fuse	Terminal	Cable ID (fused)	Fused function	Rating in amperes (A)
f1	30	-	<ul style="list-style-type: none"> <li>Wiper park position heater relay (K40/2kA)</li> </ul>	20
f2	30	-	<ul style="list-style-type: none"> <li>High pressure and return flow pump relay (K40/2kF)</li> </ul>	40
f3	30	-	<ul style="list-style-type: none"> <li>Steering column forward/back adjustment relay 1 (K40/2kD)</li> <li>Steering column forward/back adjustment relay 2 (K40/2kE)</li> </ul>	15
f4	30	-	<ul style="list-style-type: none"> <li>Steering column height adjustment relay 1 (K40/2kl)</li> <li>Steering column height adjustment relay 2 (K40/2kJ)</li> </ul>	15
f5	15R	-	<ul style="list-style-type: none"> <li>Wiper On and Off relay (K40/2kH)</li> </ul>	40
f6	15	-	-	-
f7	15	-	-	-
f8	30	RD 0.75	<ul style="list-style-type: none"> <li>Central gateway control unit (N93)</li> </ul>	5
f9	30	PKWH 2.5	<ul style="list-style-type: none"> <li>Left door control unit (N69/1)</li> </ul>	40
f10	15	BKVT 0.75 RDGN 0.75	<ul style="list-style-type: none"> <li>Left front lamp unit (E1)</li> <li>Right front lamp unit (E2)</li> <li>Xenon headlamp control unit (E1n1, E2n2)</li> <li>ARMADA airbag control unit (N2/10)</li> </ul>	10 7.5
f11	15R	BKYE 1.0	<ul style="list-style-type: none"> <li>Circuit 15R/30 cutoff relay (K75)</li> </ul>	30
f12	15R	-	Spare	-
f13	30	RDGN 1.5	<ul style="list-style-type: none"> <li>ABC control unit (N51/2)</li> </ul>	15
f14	15R	BKGN 0.75	<ul style="list-style-type: none"> <li>Windshield washer fluid pump (M5/1)</li> </ul>	7.5
f15	30	RDGN 1.0	<ul style="list-style-type: none"> <li>Data link connector (X11/4)</li> </ul>	10
f16	15R	PKYE 1.0	<p><b>Valid for code (855) TELE AID:</b></p> <ul style="list-style-type: none"> <li>D2B telephone and TELE AID transmitter/receiver (A35/17)</li> </ul> <p><b>Valid for code (853) standard MB telephone:</b></p> <ul style="list-style-type: none"> <li>D2B telephone transmitter/receiver (A35/13)</li> </ul>	5 5
f17	15R	RDYE 0.5	<ul style="list-style-type: none"> <li>Vehicle-sensitive seat belt lock sensor (A60)</li> </ul>	5
f18	15R	-	Spare	-

f19	15	BKYE 1.00	<b>Valid for engines 112, 113, SL 55 AMG:</b> Circuit 15 connector sleeve (fused) (Z3/29): <ul style="list-style-type: none"> <li>● Cylinder 1 ignition coil (T1/1)</li> <li>● Cylinder 2 ignition coil (T1/2)</li> <li>● Cylinder 3 ignition coil (T1/3)</li> <li>● Cylinder 4 ignition coil (T1/4)</li> <li>● Cylinder 5 ignition coil (T1/5)</li> <li>● Cylinder 6 ignition coil (T1/6)</li> <li>● Cylinder 7 ignition coil (T1/7)</li> <li>● Cylinder 8 ignition coil (T1/8)</li> </ul>	15
f20	15	BKGN 0.75	<ul style="list-style-type: none"> <li>● Data link connector (X11/4)</li> </ul>	7.5
f21	15R	BKYE 0.5	<ul style="list-style-type: none"> <li>● Instrument cluster (A1)</li> </ul>	5
f22	30	RDYE 0.5	<ul style="list-style-type: none"> <li>● Instrument cluster (A1)</li> </ul>	5
f23	30	RDWH 1.0 RDWH 1.0	<ul style="list-style-type: none"> <li>● AAC [KLA] control and operating unit (N22)</li> <li>● Coolant circulation pump (M13)</li> </ul>	10
f24	30	RDWH 0.5	<ul style="list-style-type: none"> <li>● Stop lamp switch (S9/1)</li> </ul>	5
f25	30	RDYE 0.75	<ul style="list-style-type: none"> <li>● Alarm signal horn (H3)</li> </ul>	7.5
f26	30	RDBU 0.5	<ul style="list-style-type: none"> <li>● Lower control panel control unit (N72/)</li> </ul>	5
f27	30	RDVT 2.5	<ul style="list-style-type: none"> <li>● Left front seat adjustment control unit with memory (N32/1)</li> </ul>	30