


K40/4 Passenger-side fuse and relay module

X Direction of travel

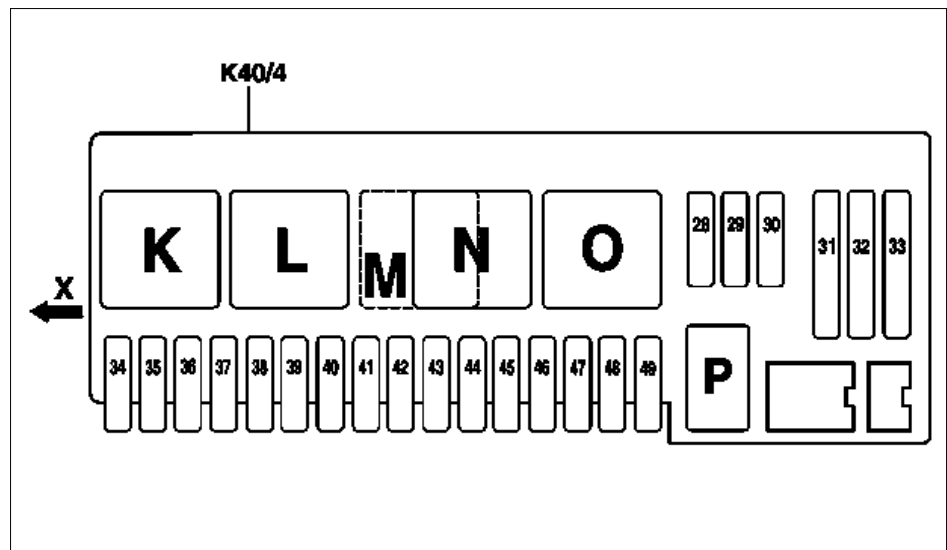

P54.15-2317-05

Fuse	Terminal	Cable ID (fused)	Fused function	Fuse rating in amperes (A)
f28	30	-	<ul style="list-style-type: none"> Fanfare horn relay (K40/4kP) 	15
f29	30	-	<ul style="list-style-type: none"> Spare 	-
f30	30	-	<ul style="list-style-type: none"> Spare 	-
f31	30	-	<ul style="list-style-type: none"> Spare 	-
f32	30	4.0 RDWH	<p>Valid for engine 273, 275.981 (AMG):</p> <ul style="list-style-type: none"> Module box separation point (X35/15) <p>Valid for engine 156:</p> <ul style="list-style-type: none"> Electric air pump (M33) 	50
f33	30	4.0 RD	<ul style="list-style-type: none"> SBC hydraulic unit (A7/3) 	50
f34	87	0.75 YE	<ul style="list-style-type: none"> SBC hydraulic unit (A7/3) SBC pedal value sensor (B37/1) 	5
f35	30	2.5 RDVT	<p>Valid for engine 156, 275.981 (AMG):</p> <ul style="list-style-type: none"> Engine oil additional fan relay (K25) 	20
f36	87	0.5 YE	<ul style="list-style-type: none"> ESP, SPS [PML] and BAS control unit (N47-5) 	5
f37	87	0.75RDBK 0.75RDBK 1.0 RDBK	<ul style="list-style-type: none"> Electronic selector lever module control unit (N15/5) <p>Valid for code (423) Automatic 5-speed transmission (NAG):</p> <ul style="list-style-type: none"> ETC control unit (N15/3) <p>Valid for code (427) automatic 7-speed transmission:</p> <ul style="list-style-type: none"> Electric controller unit (VGS) (Y3/8) 	10
f38	30	0.75 RDVT	<ul style="list-style-type: none"> Overhead control panel control unit (N70) 	7.5
f39	30	2.5 RDWH	<ul style="list-style-type: none"> Right door control unit (N69/2) 	40
f40	15	-	<ul style="list-style-type: none"> Spare 	-
f41	30	0.75 RDWH	<p>Valid for engine 156:</p> <ul style="list-style-type: none"> AMG DRIVE UNIT control unit (N145) 	5
f42	30	2.5 RDGN	<ul style="list-style-type: none"> Right front seat adjustment control unit with memory (N32/2) 	30
f43	30z	2.5 RDBU 4.0 RDBU	<p>Valid without engine 156:</p> <ul style="list-style-type: none"> Front passenger-side fuse and relay module (K40/4) <p>Valid for engine 156:</p> <ul style="list-style-type: none"> Front passenger-side fuse and relay module (K40/4) 	20 30
f44	30z	2.5 RDGN	<ul style="list-style-type: none"> Front passenger-side fuse and relay module (K40/4) 	20
f45	87	0.75 BKBN	<p>Valid for code (219) Distronic (DTR):</p> <ul style="list-style-type: none"> DTR controller unit (A89) 	5
f46	87	0.5 RDYE	<p>Valid for code (487) Active Body Control (ABC):</p> <ul style="list-style-type: none"> ABC control unit (N51/2) 	5
f47	15	1.5 BKVT	<ul style="list-style-type: none"> Left front lamp unit (E1) 	10
f48	15	1.5 BKGN	<ul style="list-style-type: none"> Right front lamp unit (E2) 	10
f49	15	0.5BKBU	<ul style="list-style-type: none"> C-AAC [K-KLA] multifunction sensor (B31) <p>Valid for engine 275.981:</p> <ul style="list-style-type: none"> Engine oil additional fan unit (A27/1) 	5