

P77.30-2109-08

1 Side flap
2 Side flap cover

3 Rear shelf main flap
4 Bolts

A Gap dimension

◀	Checking		
1	Fully open Vario roof using Vario roof switch		
2	Check gap (A) between rear shelf main flap (3) and side flap cover (2) with feeler gauge.		*BE77.30-P-1003-01A *129589032100
	Adjust		
3	Remove left and right side flap cover (2).		AR77.30-P-6379R
4	Loosen bolts (4)		
5	Lay side flap cover (2) down onto side flap (1) and uniformly adjust gap (A) over entire length of joint.		*BE77.30-P-1003-01A *129589032100
6	Remove side flap cover (2) and tighten bolts (4).	Nm	*BA77.30-P-1009-01B
7	Lay side flap cover (2) down onto side flap (1) and check gap (A) with feeler gauge, repeat adjustment if necessary.		*BE77.30-P-1003-01A *129589032100
8	Install left and right side flap cover (2)		AR77.30-P-6379R
9	Check gap (A) with feeler gauge, repeat adjustment if necessary.		*BE77.30-P-1003-01A *129589032100


Test values for Vario roof gap dimensions

Number	Designation	Model 230
BE77.30-P-1003-01A	Gap between rear shelf and side flap	Dimension "A" mm 5,0
	See picture	-

Nm Soft top

Number	Designation	Model 230

BA77.30-P-1009-01B	Bolt, side flap to hinge	Nm	10
--------------------	--------------------------	----	----

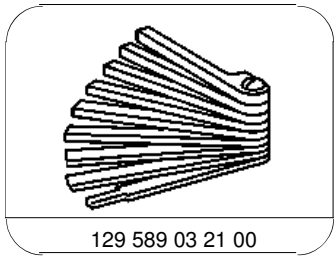

Feeler gauge