


Assignment of passenger-side fuse and relay module

28-49 Fuses

K40/4 Passenger-side fuse and relay module

K-P Relay

X Direction of travel

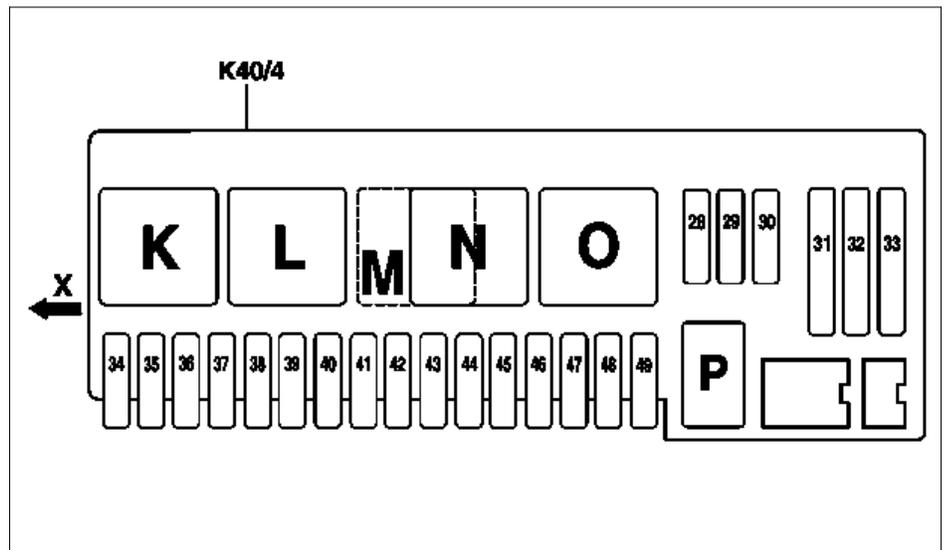

P54.15-2317-05

Position	Designation
K	● Engine electronics and chassis relay (K40/4kK)
L	● Starter relay (K40/4kL)
M	–
N	● Air pump or reserve relay
O	–
P	● Fanfare horn relay (K40/4kP)