

RVC [UVS] hydraulic unit

A7/5

Oil level

Α

2 3

Filler plug Oil reservoir

⚠ Danger!	<b>Risk of injury</b> to skin or eyes caused by hydraulic fluid spraying out under high pressure. <b>Risk of poisoning</b> caused by swallowing hydraulic fluid.	Depressurize the hydraulic system completely before starting any work on the system. Wear protective clothing and safety glasses.	AS00.00-Z-0013-01A
1	Open and close Vario roof with Vario roof switch	iThe hydraulic system can be bled by opening and closing. Keep Vario roof completely closed after bleeding.	
2	Open trunk lid		
3	Remove spare tire cover from trunk		
4	Check oil level (A) on oil reservoir (3) of the RVC [UVS] hydraulic unit (A7/5)	i Vario roof is closed and trunk lid open.	
5	Loosen RVC [UVS] hydraulic unit (A7/5) until oil filler screw (2) is accessible so that hydraulic oil can be refilled.	i Do not disconnect electrical and hydraulic lines.	AR77.37-P-3500R
6	Correct oil level (A) on oil reservoir (3) of the RVC [UVS] hydraulic unit (A7/5)	(b) Use only "Aral Vitamol ZH-M" hydraulic oil. When using other hydraulic oil, the hydraulic system of the Vario roof can be damaged.	AR77.37-P-3501-01RA
		Nm	*BA77.37-P-1005-01A
			*BF77.37-P-1001-01A
7	Install RVC hydraulic unit (A7/5)		AR77.37-P-3500R
8	Lay spare tire cover into trunk and close trunk lid.		

## Mm Hydraulic convertible top

Number	Designation	Model 230 as of vehicle ident. no. 112117
BA77.37-P-1005-01A	Filler screw on hydraulic unit Nm	1.0

## Soft top hydraulic system

Number	Designation	Model
		230 as of vehicle ident. no. 112117

© Daimler AG, 10/12/17, G/07/10 / ar77.37-p-3501ra / Check oil level of hydraulic unit, correct MODEL 230.### ## as of 112117 except CODE (P99) Special model "AMG Black Series"

BF77.37-P-1001-01A	Filling capacity	Soft top hydraulic system oil reservoir	Liters	0.18
		Specifications for Operating Fluids	Sheet	BB00.40-P-0343-00 A