


F4 Load compartment fuse and relay box

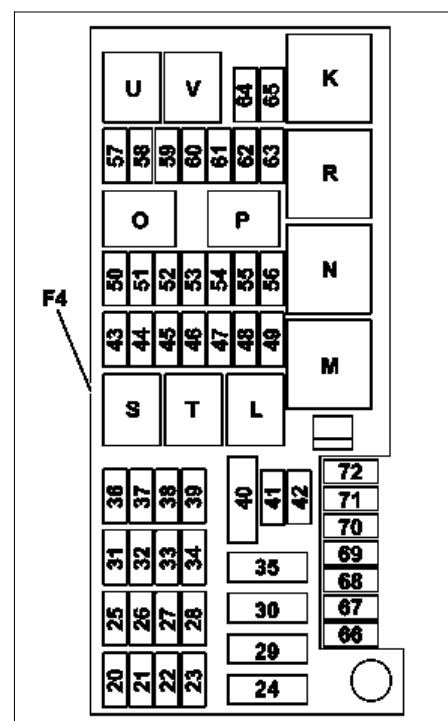

P54.15-3151-03

| Relays | Designation |
|--------|--|
| K | <ul style="list-style-type: none"> Relay, circuit 15R sockets (with power-down) (F4kK) (power supply of electric seat adjustment) |
| L | Valid for code (550) Trailer hitch: <ul style="list-style-type: none"> Trailer circuit 30X relay (F4kL) |
| M | <ul style="list-style-type: none"> Heated rear window relay (F4kM) |
| N | <ul style="list-style-type: none"> Circuit 15 relay (F4kN) |
| O | <ul style="list-style-type: none"> Fuel pump relay (F4kO) |
| P | <ul style="list-style-type: none"> Rear wiper relay (F4kP) |
| R | <ul style="list-style-type: none"> Circuit 15R relay (F4kR) |
| S | <ul style="list-style-type: none"> Reserve 1 (changer) (F4kS) (power supply for front socket) |
| T | <ul style="list-style-type: none"> Reserve 2 (normally open contact) (F4kT) (power supply for center and rear sockets) |
| U | Valid for code (550) Trailer hitch: <ul style="list-style-type: none"> Trailer relay terminal 30 (F4kU) |
| V | <ul style="list-style-type: none"> Spare relay 2 (F4kV) |