
AR83.30-P-6521P Remove and install desiccant cartridge 203 with CODE (580) Automatic air conditioning MODEL Desiccant cartridge at side MODEL 203 with CODE (581) Comfort automatic air conditioning Desiccant cartridge at side 209

MODEL

Desiccant cartridge at side

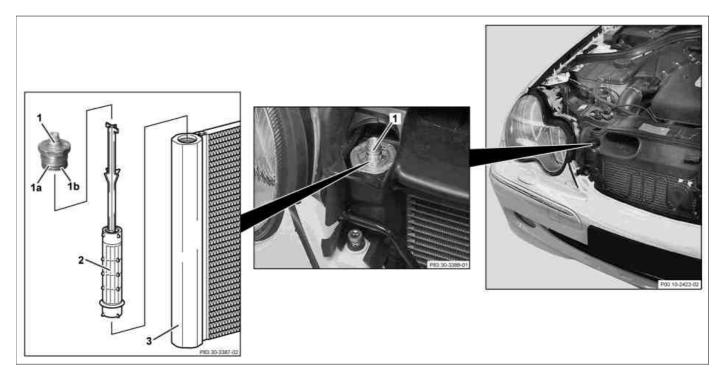

## Shown on model 203

Plug 1

1b Sealing ring З Capacitor

Sealing ring 1a

2 Desiccant cartridge

| XX   | Remove/install  |  |  |  |
|--|---|--|--|--|
| A Danger!<br>Risk of explosion caused by welding<br>soldering work on closed air conditioni<br>system. Risk of poisoning caused by<br>inhaling overheated refrigerant vapors<br>of injury to skin and eyes caused by<br>contact with liquid refrigerant. |   | Never perform welding work on or near a<br>closed air conditioning system. No smoking<br>or open flames. Wear safety glasses and<br>protective gloves. Work only in well<br>ventilated areas. Carry out repair work on<br>the air conditioning system circuit only after<br>the system has been discharged.  | AS83.00-Z-0001-01A                     |  |
|  | Procedure for a damaged or leaky air<br>conditioning system   |  | AH83.30-N-0004-01A                     |  |
|  | Protect air conditioning circuit and<br>components from moisture when carrying out<br>repair work         |  | AH83.30-P-0005-01P                     |  |
| i  | Notes on handling refrigerant R134a   | All models with R134a refrigerant  | AH83.30-N-0003-01A                     |  |
| 1  | Connect air conditioning service unit and<br>drain air conditioning system (recycling),<br>evacuate, fill | When filling air conditioning system add<br>suctioned-off oil quantity to refrigerant circuit<br>(new refrigerant compressor oil). Observe<br>additional oil quantity after replacing parts ↓<br>Correct oil level in air conditioning after<br>changing parts.<br>For air conditioning service unit see GOTIS<br><u>http://gotis.aftersales.mercedes-benz.com</u> 📺 | AR83.30-P-5252P<br>*BF83.30-P-1001-01B |  |
| 2  | Disconnect air conditioning service unit  |  |  |  |
| 3.1  | Remove engine compartment paneling  | Vehicles with gasoline engine<br>Only front section of engine compartment<br>paneling.   | AR61.20-P-1105P                        |  |
| 3.2  | Remove bottom section of soundproofing  | Vehicles with diesel engine<br>i Only front section of soundproofing.  | AR94.30-P-5300P                        |  |
| 4  | Unscrew plug (1) from condenser (3)   | <b>i</b> Installation: Install new seal rings (1a, 1b) and moisten with refrigerant compressor oil.  |  |  |

26.6.07

P83.30-3389-09

© Daimler AG, 5/26/16, G/07/10 / ar83.30-p-6521p / Remove and install desiccant cartridge Page 1 of 2 MODEL 203 with CODE (580) Automatic air conditioning Desiccant cartridge at side MODEL 209 with CODE (581) Comfort automatic air conditioning Desiccant cartridge at side MODEL 209

|   |  | Nm   | *BA83.30-P-1006-01D |
|---|--|--|---------------------|
|   |  | 3  | *203589001000       |
| 5 | Pull desiccant cartridge (2) out of condenser (3). | Check desiccant cartridge (2) packaging<br>for damage. Desiccant cartridges (2) with<br>damaged packaging must be disposed of.<br>The desiccant cartridge (2) must be installed<br>no more than 20 minutes after opening the<br>packaging. Installation: Avoid tilting desiccant<br>cartridge (2), risks of cracks and fracture. |                     |
| 6 | Install in the reverse order                       |  |                     |
| ⊴ | Check  |  |                     |
| 7 | Check air conditioning system for leakage          |  | AR83.30-P-1761P     |

## Nm Air conditioning system

| Number             | Designation           | Model<br>203, 209 |
|--------------------|-----------------------|-------------------|
| BA83.30-P-1006-01D | Plugs at capacitor Nm | 20                |

## Air conditioning system

| Number             | Designation  |  |       | Model<br>203<br>Drier at side | Model<br>209<br>Drier at side |
|--------------------|--------------|--|-------|-------------------------------|-------------------------------|
| BF83.30-P-1001-01B | Refrigerants | Filling capacity                       | g     | 750                           | 750                           |
|                    |              | Specifications for<br>Operating Fluids | Sheet | BB00.40-P-0361-00A            | BB00.40-P-0361-00A            |

