


MODEL 203, 209, 211

- 1 Plug  
2 Nut  
3 Accelerator pedal  
4 Bracket

B37 Accelerator pedal sensor

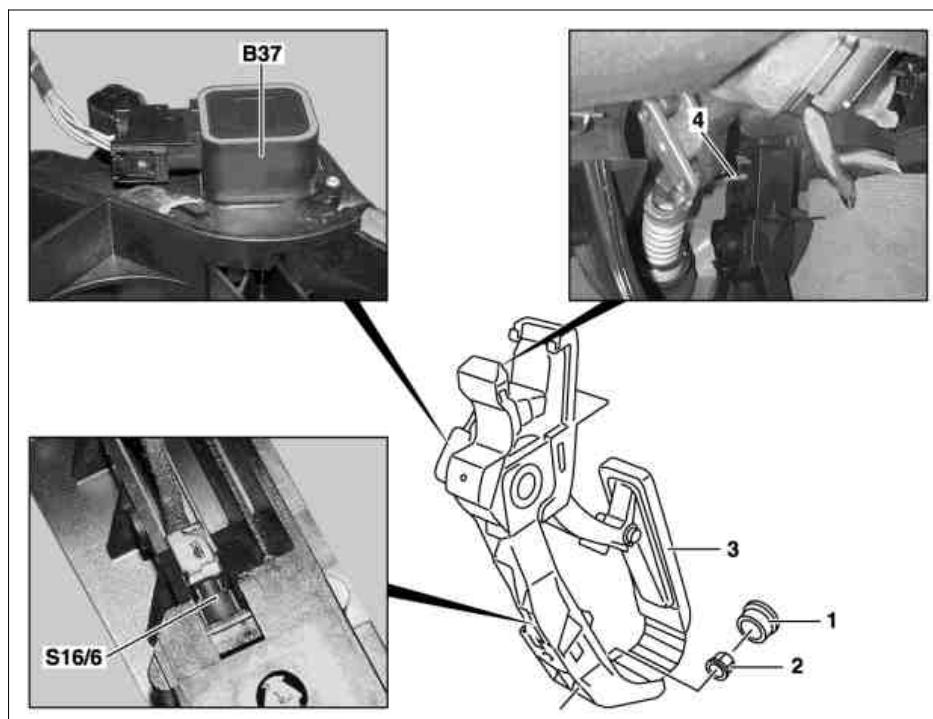







S16/6 Kickdown switch



P30.12-2003-06

## Modification notes

17.9.03	Operation step for unclamping ground strap for battery taken away	Step 1	
17.9.03	Operation step for disconnecting connector on kickdown switch limited	Step 5.1	

 	Remove/install		
1	Remove plug (1)		
2	Unscrew nut (2)	 <b>Installation:</b> Install new nut (2).	
3	Pull out accelerator pedal (3)	 The accelerator pedal (3) must not be disassembled.  <b>Installation:</b> Ensure that recess of accelerator pedal (3) is located in bracket (4) of firewall.	
4	Unplug electrical connector for pedal value sensor (B37)	 <b>Installation:</b> Pay attention to correct installation of lines.	
5	Unplug electrical connector from kickdown switch (S16/6)	Vehicles with kickdown switch  <b>Installation:</b> Pay attention to correct installation of lines.	
6	Remove accelerator pedal (3)		
7	Install in the reverse order		
8	 <b>AD</b> Read out fault memory and erase if required Connect STAR DIAGNOSIS and read out fault memory	STAR DIAGNOSIS diagnosis system	AD00.00-P-2000-04A <a href="#">*WH58.30-Z-1048-13A</a>

## Commercially available tools

Number	Designation	
WH58.30-Z-1048-13A	STAR DIAGNOSIS diagnosis system, Compact Passenger Car	6511 1801 00