


**Modification notes**

17.6.03	Method for adjusting shift cable modified	All steps	
---------	---	-----------	--

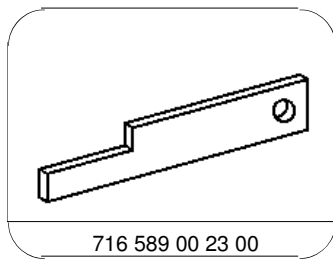


716 589 00 23 00

Setting gauge


- 1 Press in catch (1) of shift cable at underside of vehicle until lock (2) holds the catch (1) in clamped position.




P26.60-2191-02

 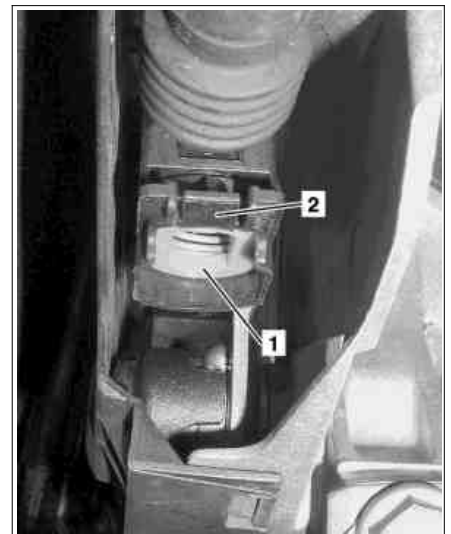


 



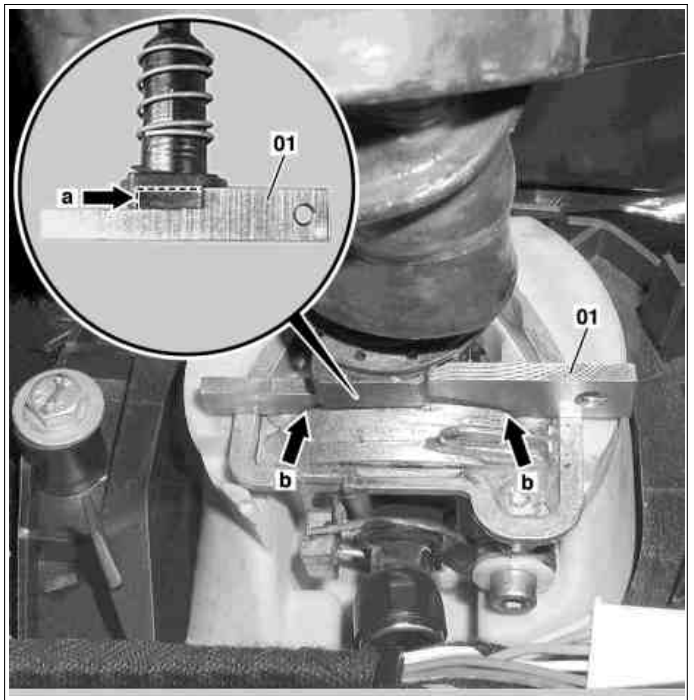
P26.60-2192-02

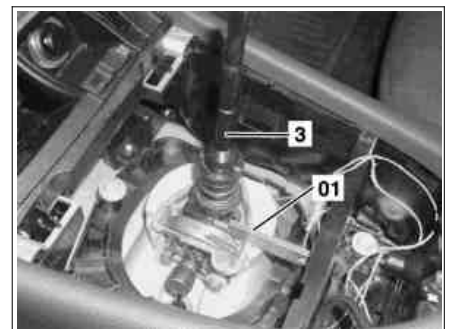- 2 Press gearshift lever (3) to the right and raise.
- 3  Fit setting guage (01) with recess at the top and release gearshift lever (3).




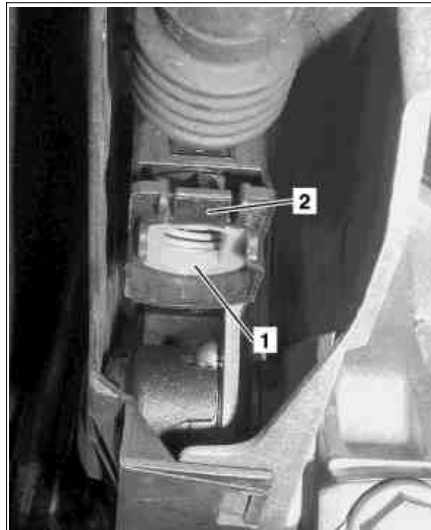
P26.60-2193-01

- 4  Push setting guage (01) forwards until it touches the stop of the lock for the reverse gear (a).  
 Ensure that the  setting guage (01) touches the housing at the front and back (b).
- 5 Press the gearshift lever (3) to fix the basic position to the left on the  setting guage (01) and hold.  
 Hold the gearshift lever (3) in this position until a second person has released the lock (2) on the underside of the vehicle.




P26.60-2194-12

- 6 Allow a second person to press the lock (2) of the shift cable on the underside of the vehicle until the catch (1) is released.
- 7  Remove the setting guage (01).



P26.60-2192-02

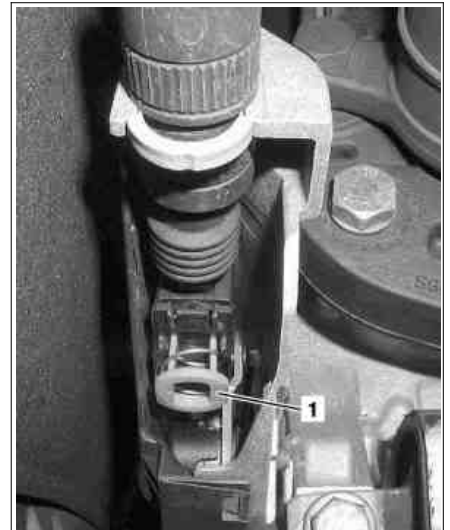

P26.60-2191-02