
Illustrated on model 203

- 33 Range selector lever
- 63 Shift rod
- 97 Intermediate lever
- 98 Rod head 99 Bolt
- 99 DOIL
- N15/5 Electronic selector lever module control unit

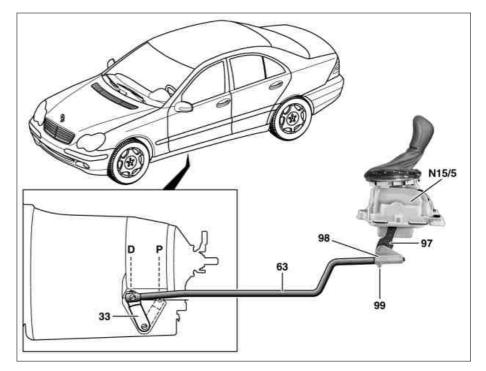

P27.10-2096-06

	Adjust			
⚠ Danger!	Risk of death caused by vehicle slipping or toppling off of the lifting platform.			
1	Move selector lever to position "D".	i Have a helper hold selector lever in position "D" throughout the entire adjustment work.		
2	Loosen bolt (99)			
3	Move range selector lever (33) into position "D"			
4	Tighten bolt (99)	 The vehicle must be horizontal, otherwise correct adjustment is not guaranteed and shift problems may occur. Press against rod head (98) to tighten. Do not twist shift rod (63) or rod head (98). 	*BA27.60-P-1001-04A	
5	Perform a function test			

Nm Tightening torques for shift rod

Number	Designation			Transmission 722.6	Transmission 722.9	
BA27.60-P-1001-04A	Bolt in rod head	M8×10	Nm	12	12	