


P82.62-2195-09


A2/72 Window antenna amplifier module 2

A2/73 Amplifier module 3, window antenna

A2/71 Amplifier module 1, window antenna

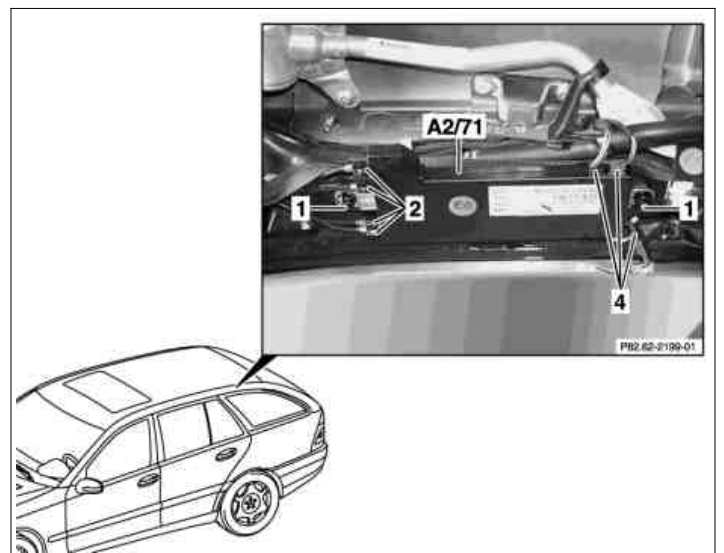

P82.62-2200-11

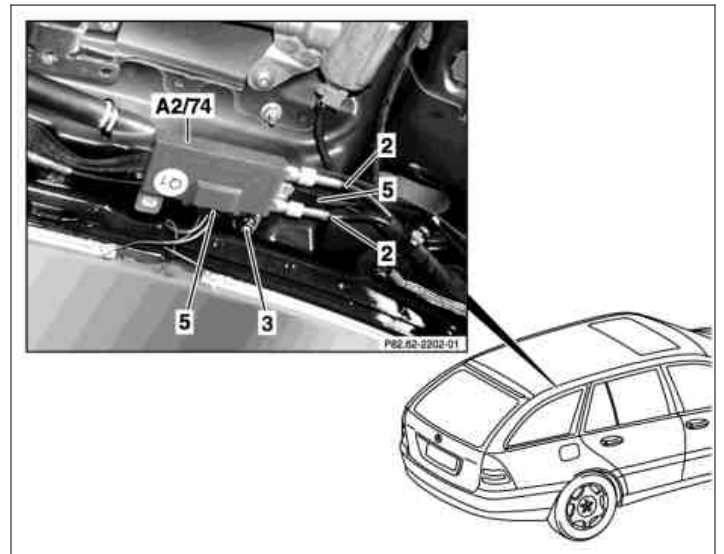

P82.62-2201-11

	Remove/install		
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1.1	Remove tailgate window	Only if removing window antenna amplifier module 2 (A2/72) and window antenna amplifier module 3 (A2/73).	AR67.20-P-3550PA
1.2	Remove rear roof frame trim	Only if removing window antenna amplifier module 1 (A2/71) and window antenna amplifier module 4 (A2/74).	AR68.30-P-4470PA
2	Remove amplifier module of the window antenna	Amplifier module 1, window antenna (A2/71) Amplifier module 2, window antenna (A2/72) Amplifier module 3, window antenna (A2/73) Amplifier module 4, window antenna (A2/74)	AR82.62-P-8300-01P AR82.62-P-8300-02P AR82.62-P-8300-03P AR82.62-P-8300-04P
3	Install in the reverse order		