

Illustrated for code (287a) Through-loading feature

- 1 Bolt on belt end fitting
- 2 Bolt, C-pillar paneling
- 3 C-pillar paneling
- 4 Edge guard
- 5 Seat belt




P68.30-2256-12

	Remove/install		
1.1	Remove rear seat cushion		AR91.12-P-1020P
1.2	Release rear seat cushion and fold toward front	With code (287a) Through-loading feature	
2	Remove screw on belt end fitting (1).	Screw on belt end fitting Torx bit set	*BA91.40-P-1001-01A *000589011000
3	Remove edge guard (4) in area of C-pillar paneling (3)		
4	Remove SRS airbag cover		
5	Unscrew bolt (2) from C-pillar paneling (3)	External torx set	*001589760900
6	Unclip C-pillar paneling (3) at top toward center of vehicle and pull out rear shelf guide toward front		
7	Remove C-pillar paneling (3)	Installation: Observe installation position of seat belt (5).	
8	Install in the reverse order		


Seat belts/emergency tensioning retractors

Number	Designation	Model
BA91.40-P-1001-01A	Screw on belt end fitting	Nm 30

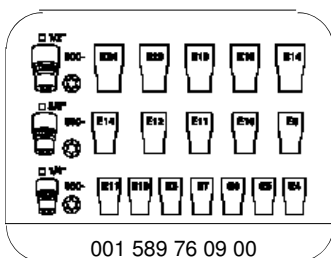

001 589 76 09 00

External Torx set

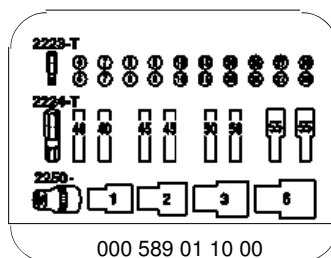

000 589 01 10 00

Torx bit set