


**MODEL 203, 209 with CODE (819) CD changer****Shown on model 203.0 with code (330) CD holder**

- 1 Stowage compartment (with code (330) CD holder or with code (331) Cassette compartment)
- 2 Bolt
- A2/6 CD player with changer (in glove compartment)

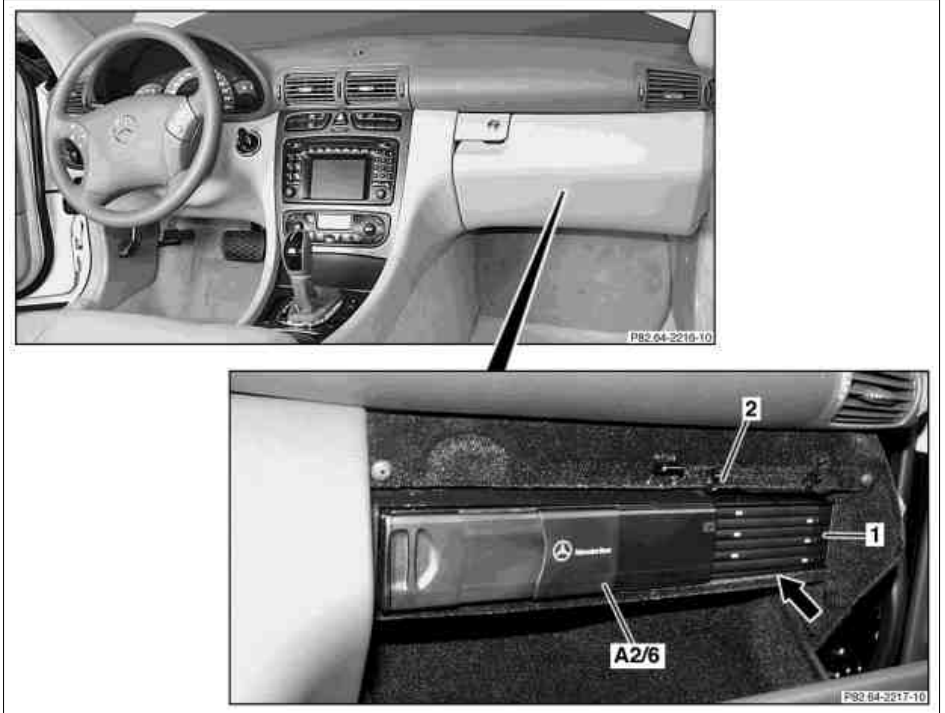


P82.64-2218-06

**Modification notes**

24.5.06	"Disconnect/connect ground line on battery" removed		
---------	---	--	--

	Remove/install		
1.1	Insert release panel in the middle of stowage compartment (1) as far as the stop (arrow)	For vehicles with code (330) CD holder or with code (331) Cassette compartment Push release panel approx. 15 mm downwards until the catch hooks of the stowage compartment (1) are released.	
WF	Unlocking tool for CD compartment/cassette compartment		WF58.50-P-8264-02P
2.1	Insert pulling hooks next to release panel, turn pulling hooks through 90° and pull stowage compartment (1) out to the front	For vehicles with code (330) CD holder or with code (331) Cassette compartment 	*140589023300
3	Unscrew bolt (2)		
4	Take out CD player with changer (in glove compartment) (A2/6)		
5	Detach fiber optic cable coupling from CD player with changer (in glove compartment) (A2/6) and place caps on fiber optic cable coupling and equipment connector.	Fiber optic cables must not be kinked, routed around sharp edges or bent to a radius of less than 25 mm, otherwise the fiber optic cable core will be yellowed and broken. Yellowed or broken fiber optic cables weaken the light. Do not remove caps prematurely, as dirty or scratched surfaces reduce the light.	AR82.95-P-0005-01A
6	Disconnect electrical connector from CD player with changer (in glove compartment) (A2/6)		
7	Install in the reverse order		

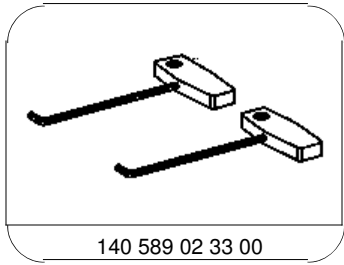

140 589 02 33 00

Pulling hook