


MODEL 203


- 1 Engine hood lock
- 4 Engine hood control cable A
- 5 Connector
- 6 Engine hood control cable B
- 6a Handle
- 9 Grommet

N10/1 Front SAM control unit with fuse and relay module

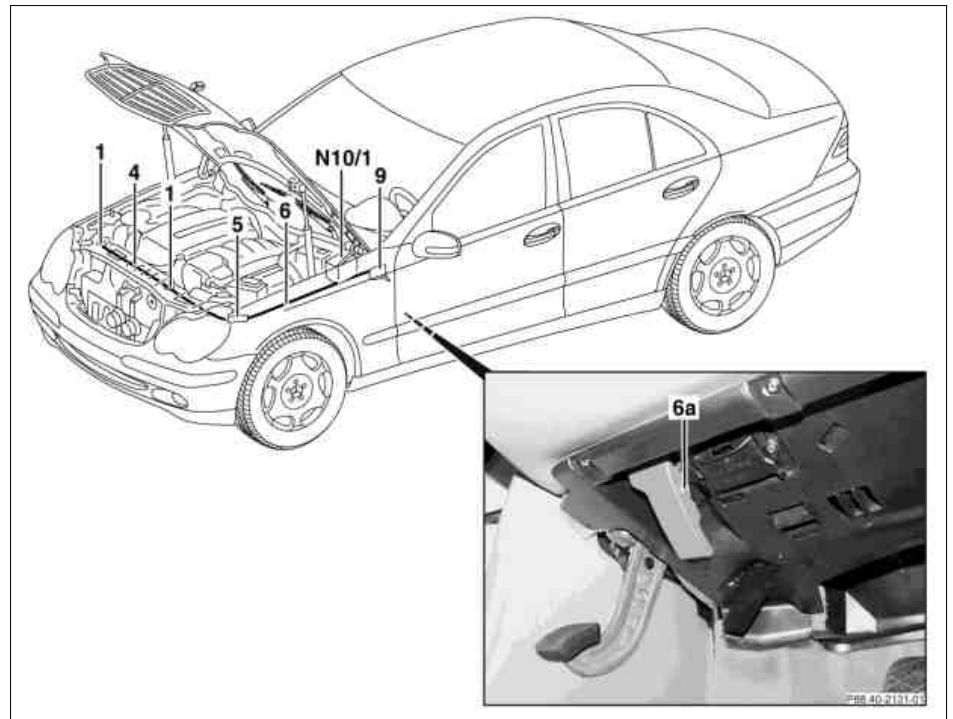

P88.40-2132-06

- 1 Engine hood lock
- 2 Bolts for engine hood lock
- 4 Engine hood control cable A
- 5 Connector
- 6 Engine hood control cable B
- 7 Clips
- 8 Radiator cross member

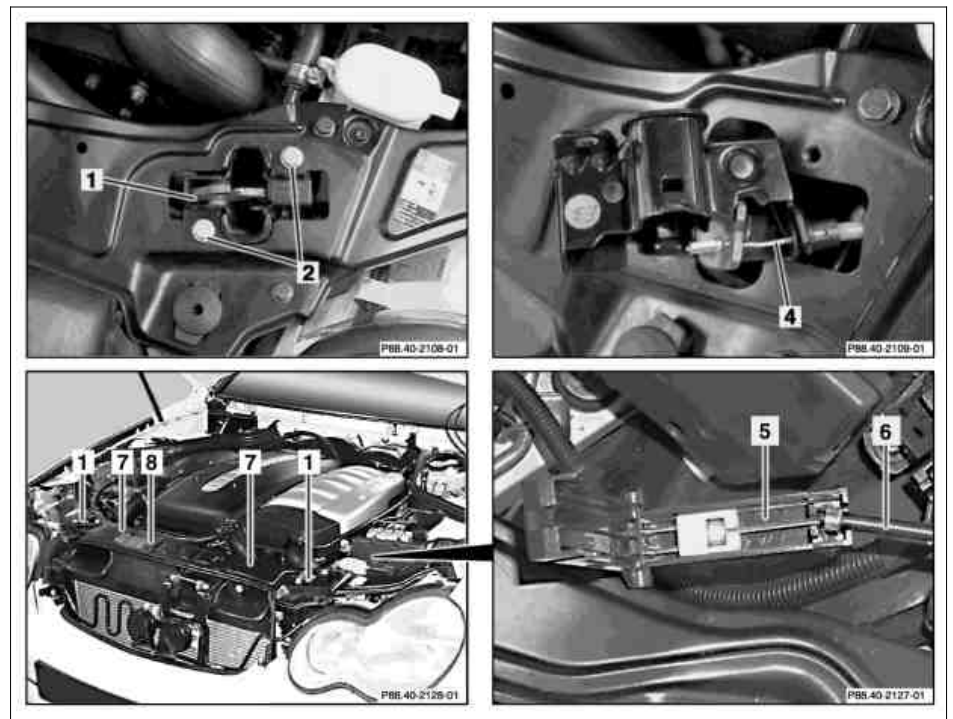

P88.40-2126-06

☒ ☒	Remove/Install		
<p>⚠ Danger!</p> <p>1</p>	<p>Risk of injury to fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/tailgate or sliding roof.</p> <p>Open engine hood</p>	<p>When moving components, ensure that no body parts or limbs are within the operating range of moving parts.</p> <p>i Move engine hood to upright position.</p>	<p>AS00.00-Z-0011-01A</p> <p>AR88.40-P-1000P</p>
<p>2</p>	<p>Remove left cover below instrument panel</p>		<p>AR68.10-P-1500P</p>
<p>3</p>	<p>Remove engine hood lock (1)</p>		<p>AR88.40-P-3200P</p>

4	Open connector (5) and unhook rear engine hood control cable B (6)		
5	Unhook clips (7) from radiator cross member (8)		
6	Remove engine hood control cable A (4) with connector (5)		
7	Remove front SAM control unit with fuse and relay module (N10/1)	i Lay down to side in connected state.	AR54.21-P-1260P
8	Unhook engine hood control cable B (6) from handle (6a) below instrument panel on left		
9	Expose engine hood control cable B (6) in engine compartment, remove	i Installation: Ensure that grommet (9) is seated properly on bulkhead.	
10	Install in the reverse order		
11	Perform function check		