


MODEL 203.7 with CODE (413) Panoramic sliding roof

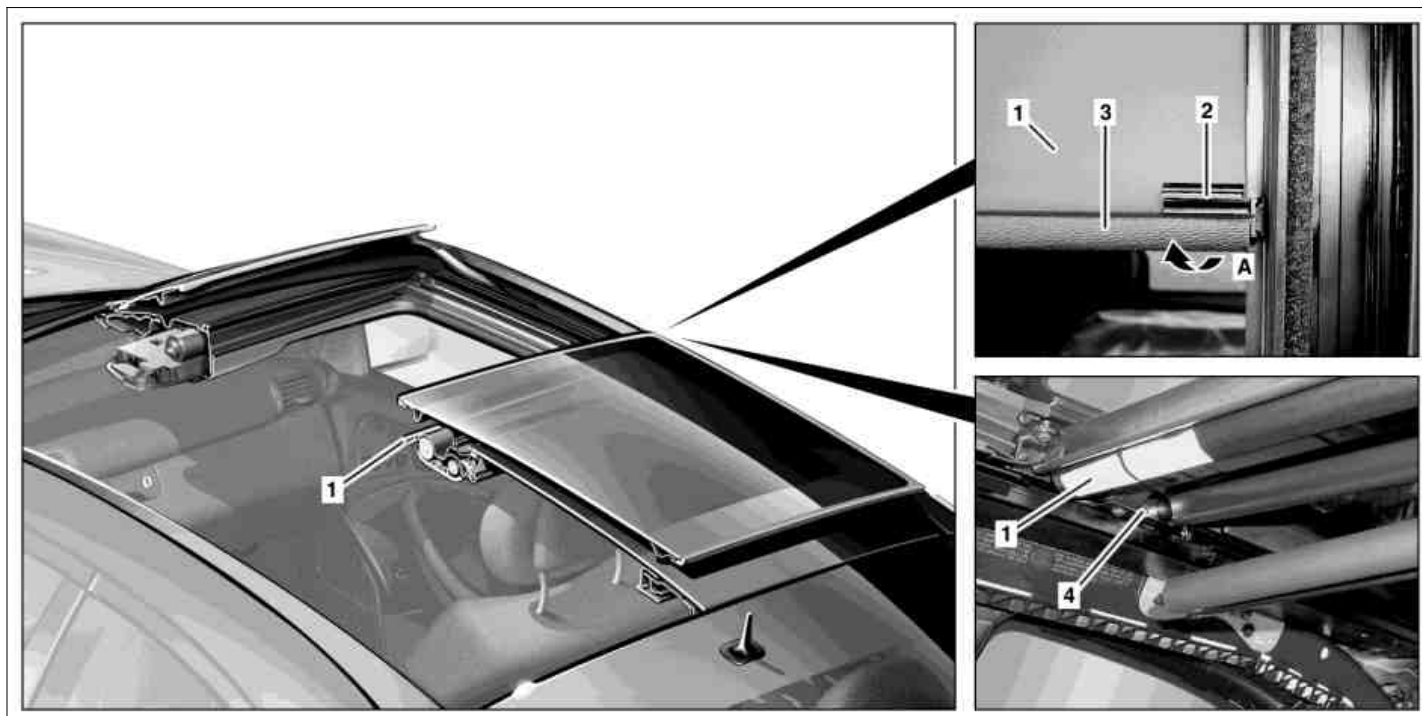


P77.21-2172-09

- 1 Front roller sun blind
- 2 Roller sun blind coupling

- 3 Terminal strip


 


- 4 Roller blind bearing

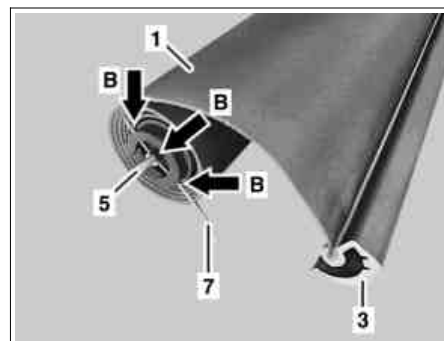- 1 Front roller sun blind
- 3 Terminal strip
- 5 Sun blind shaft
- 7 Fuse



P77.21-2174-01

	<p>Removing</p>		
<p>⚠ Danger!</p>	<p>Risk of injury caused by fingers being pinched or crushed when removing, installing or aligning hoods, doors, trunk lids, liftgates or sliding roof</p>	<p>Keep body parts and limbs well clear of moving parts.</p>	<p>AS00.00-Z-0011-01A</p>
<p>1</p>	<p>Open front roller sun blind (1) half way</p>		
<p>2</p>	<p>Loosen front headliner and shim with spacer until mount of front roller sun blind (1) is accessible</p>		<p>AR68.30-P-4300PB</p>
<p>3</p>	<p>Slightly press left and right roller sun blind coupling (2) together and unclip terminal strip (3) on front roller sun blind (1) from left and right roller sun blind coupling (2) by turning in direction of arrow (arrow A)</p>		
<p>4</p>	<p>Roll up front roller sun blind (1), unhook roller sun blind shaft (5) from left roller sun blind bearing (4), move so that holes coincide (arrows B) on right side of roller sun blind shaft (5) and front roller sun blind (1) and insert retainer (7) into holes (arrows B)</p>	<p>i Aid of helper required Use steel wire or needle with a diameter of approx. 0.8 mm as retainer (7). The retainer (7) ensures that the tension of the front roller sun blind (1) is maintained. Tension by turning 20 times, if required.</p>	

5	Unhook front roller sun blind (1) from right roller sun blind bearing (4) and remove		
	Install		
6	Hook roller sun blind shaft (5) of front roller sun blind (1) into right roller sun blind bearing (4)		
7	Press front roller sun blind (1) against stop, simultaneously pull retainer (7) out of roller sun blind shaft (5) and hook roller sun blind shaft (5) into left roller sun blind bearing (4)	 Aid of helper required Secure front roller sun blind (1) against unwinding.	
8	Roll out front roller sun blind (1) and remove backing	 Only when installing new front roller sun blind (1).	
9	Screw in terminal strip (3) one turn upward and hook into both roller sun blind couplings (2)		
10	Turn back terminal strip (3) until terminal strip (3) arrests audibly on both sides	 Carefully turn back terminal strip (3) to prevent damaging roller sun blind couplings (2).	
11	Install headliner		AR68.30-P-4300PB
12	Close front roller sun blind (1)		