


MODEL 203.7 with CODE (413) Panoramic sliding roof

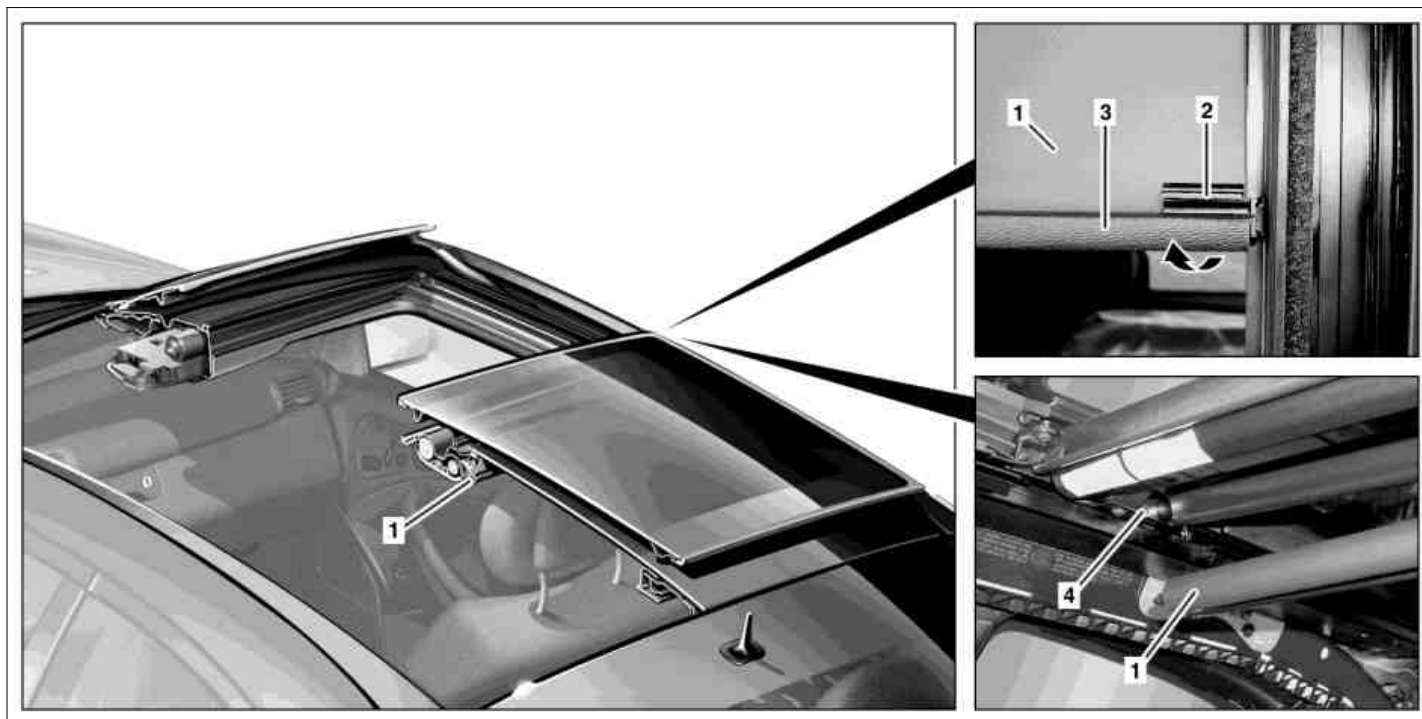


P77.21-2173-09

- 1 Rear roller sun blind
- 2 Roller sun blind coupling

- 3 Terminal strip



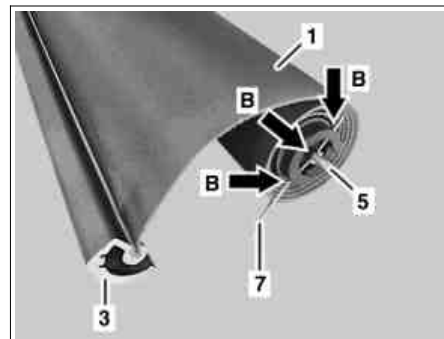

- 4 Roller blind bearing

- 1 Rear roller sun blind
- 3 Terminal strip
- 5 Sun blind shaft
- 7 Fuse



P77.21-2175-01

	<p>Removing</p>		
<p>⚠ Danger!</p>	<p>Risk of injury caused by fingers being pinched or crushed when removing, installing or aligning hoods, doors, trunk lids, liftgates or sliding roof</p>	<p>Keep body parts and limbs well clear of moving parts.</p>	<p>AS00.00-Z-0011-01A</p>
<p>1</p>	<p>Open rear roller sun blind (1) half way</p>		
<p>2</p>	<p>Loosen front headliner and shim with spacer until mount of rear roller sun blind (1) is accessible</p>		<p>AR68.30-P-4300PB</p>
<p>3</p>	<p>Slightly press left and right roller sun blind coupling (2) together and unclip terminal strip (3) on rear roller sun blind (1) from left and right roller sun blind coupling (2) by turning in direction of arrow</p>		
<p>4</p>	<p>Roll up rear roller sun blind (1), unhook roller sun blind shaft (5) from right roller sun blind bearing (4), move holes to coincide (arrows B) on left side of roller sun blind shaft (5) and rear roller sun blind (1) and insert retainer (7) into holes (arrows B)</p>	<p>i Aid of helper required. Use steel wire or needle with a diameter of approx. 0.8 mm as retainer (7). The retainer (7) ensures that the tension of the rear roller sun blind (1) is maintained. Tension by turning 20 times, if required.</p>	

5	Unhook rear roller sun blind (1) from left roller sun blind bearing (4) and remove		
	Install		
6	Hook roller sun blind shaft (5) of rear roller sun blind (1) into left roller sun blind bearing (4)		
7	Press rear roller sun blind (1) against stop, simultaneously pull retainer (7) out of roller sun blind shaft (5) and hook roller sun blind shaft (5) into right roller sun blind bearing (4)	 Aid of helper required. Secure rear roller sun blind (1) against unwinding.	
8	Roll out rear roller sun blind (1) and remove backing paper	 Only when installing new rear roller sun blind (1).	
9	Screw in terminal strip (3) one turn upward and hook into both roller sun blind couplings (2)		
10	Turn back terminal strip (3) until terminal strip (3) arrests audibly on both sides	 Carefully turn back terminal strip (3) to prevent damaging roller sun blind couplings (2).	
11	Install headliner		AR68.30-P-4300PB
12	Close rear roller sun blind (1)		