

P42.20-2062-09


Shown on pedal assembly, model 203

Modification notes

11.12.02	Check version of pedal assembly, added	Step 11	BT42.20-P-0510-01A
	<b>Remove/install</b>		
1.1	Remove rear seat cushion	Vehicles without code P98 Black Series Fold rear seat cushion forwards. Model 203.0/ 2/ 7, 209.3 with code 287 Through-loading feature Model 203.0/ 7 without code 287 Through-loading feature Model 209.4	AR91.12-P-1020P AR91.12-P-1020PC AR91.12-P-1020QA
1.2	Remove battery	Vehicles with code P98 Black Series	AR54.10-P-0005P
2.1	Remove cover panel under rear seat cushion	Vehicles without code P98 Black Series	
2.2	Remove cover panel under battery	Vehicles with code P98 Black Series	
3	Loosen adjusting nut (89) on cable slack adjuster		
4	Remove cover below instrument panel		AR68.10-P-1500P
5	Remove cover (71a) of pedal assembly (71)		
6	Unhook brake cable (85) from tensioning shackle on parking brake pedal (75)		*129589116300
7	Detach pedal assembly (71)		*BA42.20-P-1001-01A
8	Detach plug from parking brake indicator switch (S12)	To do this, raise the pedal assembly (71) slightly.	
9	Unhook release cable (79) from pedal assembly (71)	On pedal assembly (71) with friction brake: Unhook the release cable (79) from the pedal assembly (71) using the tool (010).	
WF	Tool for parking brake cable release		WF58.50-P-4220-01A
10	Remove pedal assembly (71)	Do not loosen torx bolts on the back of the pedal assembly (71). Otherwise the pedal assembly (71) will be irreparably damaged.	
11	Install in the reverse order		
	<b>Checking</b>		
12	Check version of pedal assembly (71)		
BT	Parking brake pedal assembly (71) modified		BT42.20-P-0510-01A
13	Adjust parking brake		AR42.20-P-0540A

Parking brake

Number	Designation	Model 203	Model 209
BA42.20-P-1001-01A	Bolt, foot-operated parking brake pedal assembly at front wall pillar Nm	19	12

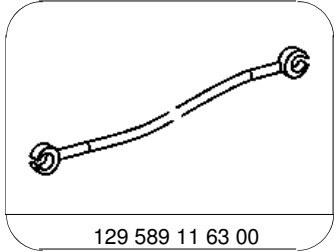

129 589 11 63 00

Snap-release tool