

Document number:

pe91.29-p-2105-97fb

Document title:

Wiring diagram of front passenger-side seat control module

Code:

A0	Color code key
F34	Interior fuse box
F34f34	Fuse 34
M27	Driver seat adjustment motor group with memory
M27	Driver seat adjustment motor group with memory
M27m1	Fore/aft motor
M27m2	Rear up/down motor
M27m3	Front up/down motor
M27m4	Head restraint up/down motor
M27m5	Backrest motor
N10/2	Rear SAM control unit with fuse and relay module
N32/2	Front passenger front seat adjustment control unit with memory
N32/2	Front passenger front seat adjustment control unit with memory
N32/2	Front passenger front seat adjustment control unit with memory
U12	Valid for left-hand drive vehicles
U13	Valid for right-hand drive vehicles
W18	Ground (left front seat crossmember)
W19	Ground (right front seat crossmember)
X30/7	Left voltage distributor (CAN) connector

Position:



