



P68.10-2323-07

	Removing		
1	Release lock (2) and pivot air nozzles (3, 4) out upward		
2	Unscrew screws (5)		
3	Release lock (1) and pivot air nozzles (3, 4) out downward		
4	Press catch lugs (6) down in air nozzle duct	Avoid damaging instrument panel.	
5	Remove air nozzle		
6	Remove connector from center air outlet illumination (E10/1)	With code (581b) convenience automatic air conditioning	
7	Lay air nozzle down		
	Installing		
8	Pick up air nozzle		
9	Connect connector of center air outlet illumination (E10/1)	With code (581b) convenience automatic air conditioning	
10	Set air nozzle on air distribution guide rod and arrest		
11	Release lock (2) and pivot air nozzles (3, 4) out upward		
12	Fully tighten screws (5)		
13	Turn adjustment wheel (7) and arrest air distribution guide rod	It should be possible for the air distribution flap to open and close completely.	