

1 Rear seat backrest З Screw at belt end fitting 4 Bolts

P91.12-2252-09


2 Center seat belt

5 Outer screws/bolts 6 Lock

XX	Remove/install		
1	Remove rear seat cushion		AR91.12-P-1020PC
2	Remove screw/bolt (3) at center rear seat belt belt end fitting	<b>i</b> Installation: Ensure that belt end fitting catches.	
		Mm Screw on belt end fitting	*BA91.40-P-1001-01A
		S Torx bit set	*000589011000
3	Remove bolts (4)		
4	Remove bolts (5)		
5	Release rear seat backrest (1) at lock (6)		
6	Detach pneumatic connection of head rests	<b>i</b> Pry off pneumatic connection with open end wrench size 7.	
7	Remove rear seat backrest (1)		
8	Install in the reverse order		

## Mm Seat belts/emergency tensioning retractors

Number	Designation	Model 203
BA91.40-P-1001-01A	Screw on belt end fitting Nm	30

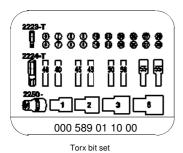

© Daimler AG, 8/15/13, G/07/10 / ar91.12-p-1620pc / Remove/install rear seat backrest MODEL 203.0 except CODE (287) Through-loading feature