



P68.50-2150-09

1 Electric roller blind
2 Rear shelf

4 Screw

5 Nut

☒ ☒	Removing, installing		
1	Remove rear shelf (2)	i Do not disassemble rear shelf (2). Disconnect electric roller blind connector.	AR68.30-P-4580P
2	Unscrew nuts (5)		
3	Unscrew screws (4)	i Remove Cotter pins	
4	Remove electric roller blind (1)	i Press electric roller blind (1) out of rear shelf (2)	
5	Install in the reverse order		