

MODEL 203.0 /2,  
203.7## #A,  
203.7## #E up to 035817

Shown on left front door on vehicle up to  
28.2.02


1 Screw

M21/1 Left electrically adjustable and  
heated outside mirror

M21/1x1 Left electrically adjustable and  
heated exterior mirror connector

M21/2 Right electrically adjustable and  
heated outside mirror

M21/2x1 Right electrically adjustable and  
heated exterior mirror connector

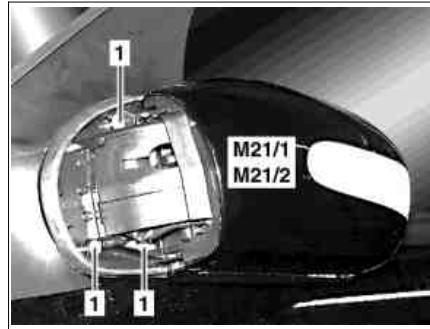

P88.70-2069-01



P88.70-2508-01


Shown on left front door on vehicle as of  
1.3.02

3 Door foil



 
4 Electrical connector

N69/1 Door control module front left

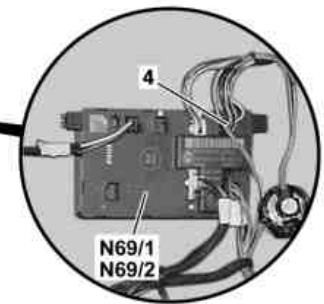N69/2 Door control module front right




P88.70-2516-04

 	Remove/install		
1	Fold left electrically adjustable and heated outside mirror (M21/1) or right electrically adjustable and heated outside mirror (M21/2) toward rear		
2	Remove front door lining	In vehicles as of 1.3.02	AR72.10-P-1000P
3	Loosen door foil (3) in area of left front door control unit (N69/1) or right front door control unit (N69/2)	In vehicles as of 1.3.02	
4	Disconnect electrical connector (4) from left front door control unit (N69/1) or right front door control unit (N69/2)	In vehicles as of 1.3.02	
5	Remove bolts (1)	 Vehicles as of 1.12.04	*BA72.10-P-1011-01A *904589021000
6	Disconnect left electrically adjustable and heated outside mirror connector (M21/1x1) or right electrically adjustable and heated outside mirror connector (M21/2x1)	In vehicles up to 28.2.02	
7	Remove left electrically adjustable and heated outside mirror (M21/1) or right electrically adjustable and heated outside mirror (M21/2)		
8	Install in the reverse order		

#### Front door

Number	Designation	Model 203	
BA72.10-P-1011-01A	Rearview mirror on front door	Nm	2.5

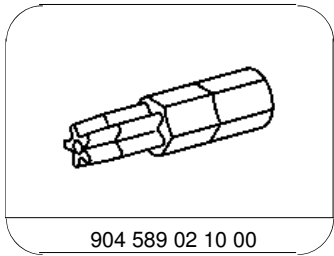

904 589 02 10 00

Screwdriver insert