


Illustrated on model 203.0

- 1 Side cover
- 2 Air nozzle lock
- 3 Screws
- 4 Catch lugs
- 5 Air nozzle
- S1 Light switch module

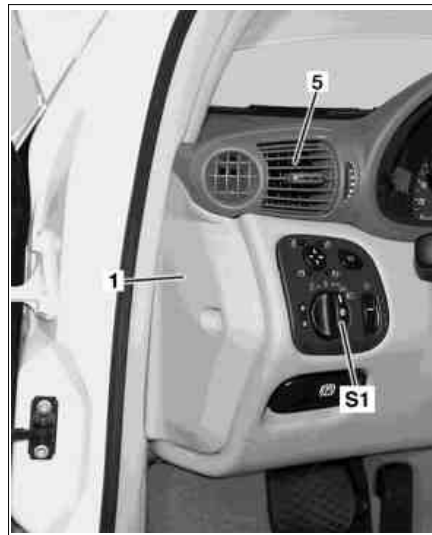


P68.10-2318-02



P68.10-2319-02

Removing, installing			
1	Remove side cover (1)		
2	Remove light switch module (S1)	<b>i</b> Left air nozzle	AR54.25-P-3270P
3	Unscrew screws (3) from air nozzle	<b>i</b> Left air nozzle Torx bit set	*000589011000
4	Unscrew screws from instrument panel bottom section on driver's side	<b>i</b> Left air nozzle	
5	Slightly fold instrument panel bottom section down on driver's side	<b>i</b> Left air nozzle	
6	Unscrew screws from glove compartment	<b>i</b> Right air nozzle Torx bit set	*000589011000
7	Fold down glove compartment	<b>i</b> Right air nozzle	
8	Unscrew screws from air nozzle	<b>i</b> Right air nozzle	
9	Loosen air nozzle lock (2) and turn downwards		
10	Press catch lugs (4) in air nozzle duct downward and remove air nozzle		
11	Remove air ducts and remove air nozzle (5)	<b>i</b> <b>Installation:</b> Install sealing felt to fit	
12	Install in the reverse order		

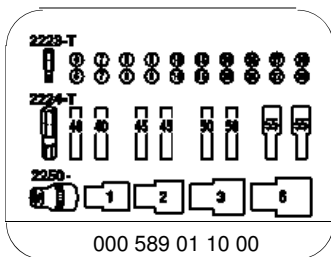

Torx bit set