


Document number: pe15.00-p-2001-99fa

Document title: Block diagram of starter, alternator, battery

Code: **Designation:** **Position:**


A1	Instrument cluster	9 F
A1p12	Gear display	8 G
A1p13	Multifunction display	8 G
A8/1	Transmitter key	3 G
G2	Generator	14 E
G2	Generator	47 G
G2	Generator	52 H
M1	Starter	48 G
M1	Starter	53 H
N10/1	Front SAM control module with fuse and relay module	49 F
N10/1	Front SAM control module with fuse and relay module	51 F
N10/1	Front SAM control module with fuse and relay module	54 G
N3/10	ME-SFI [ME] control module	12 F
N3/10	ME-SFI [ME] control module	15 F
N3/10	ME-SFI [ME] control module	19 F
N3/10	ME-SFI [ME] control module	22 F
N3/10	ME-SFI [ME] control module	25 F
N3/9	CDI control module	29 F
N3/9	CDI control module	32 F
N3/9	CDI control module	35 F
N3/9	CDI control module	39 F
N47-5	ESP and BAS control module	42 F
N47-5	ESP and BAS control module	45 F
N73	DI control module	5 F
S40/3	Clutch pedal switch	47 G
S9/1	Stop lamp switch (4-pin)	40 E
U150	Valid for engine 112	13 D
U198	Valid for engine 611	27 D
U199	Valid for engine 612	27 D
U425	Valid for C 32 AMG	17 D
U521	Valid for engine 111	10 D
U739	Valid for engine 271	20 D
U740	Valid for engine 646	33 D
U792	Valid for C 30 CDI (AMG)	30 D
U792	Valid for C 30 CDI (AMG)	54 G
U819	Valid for engine 272	23 D
U880	Valid for engine 642	37 D

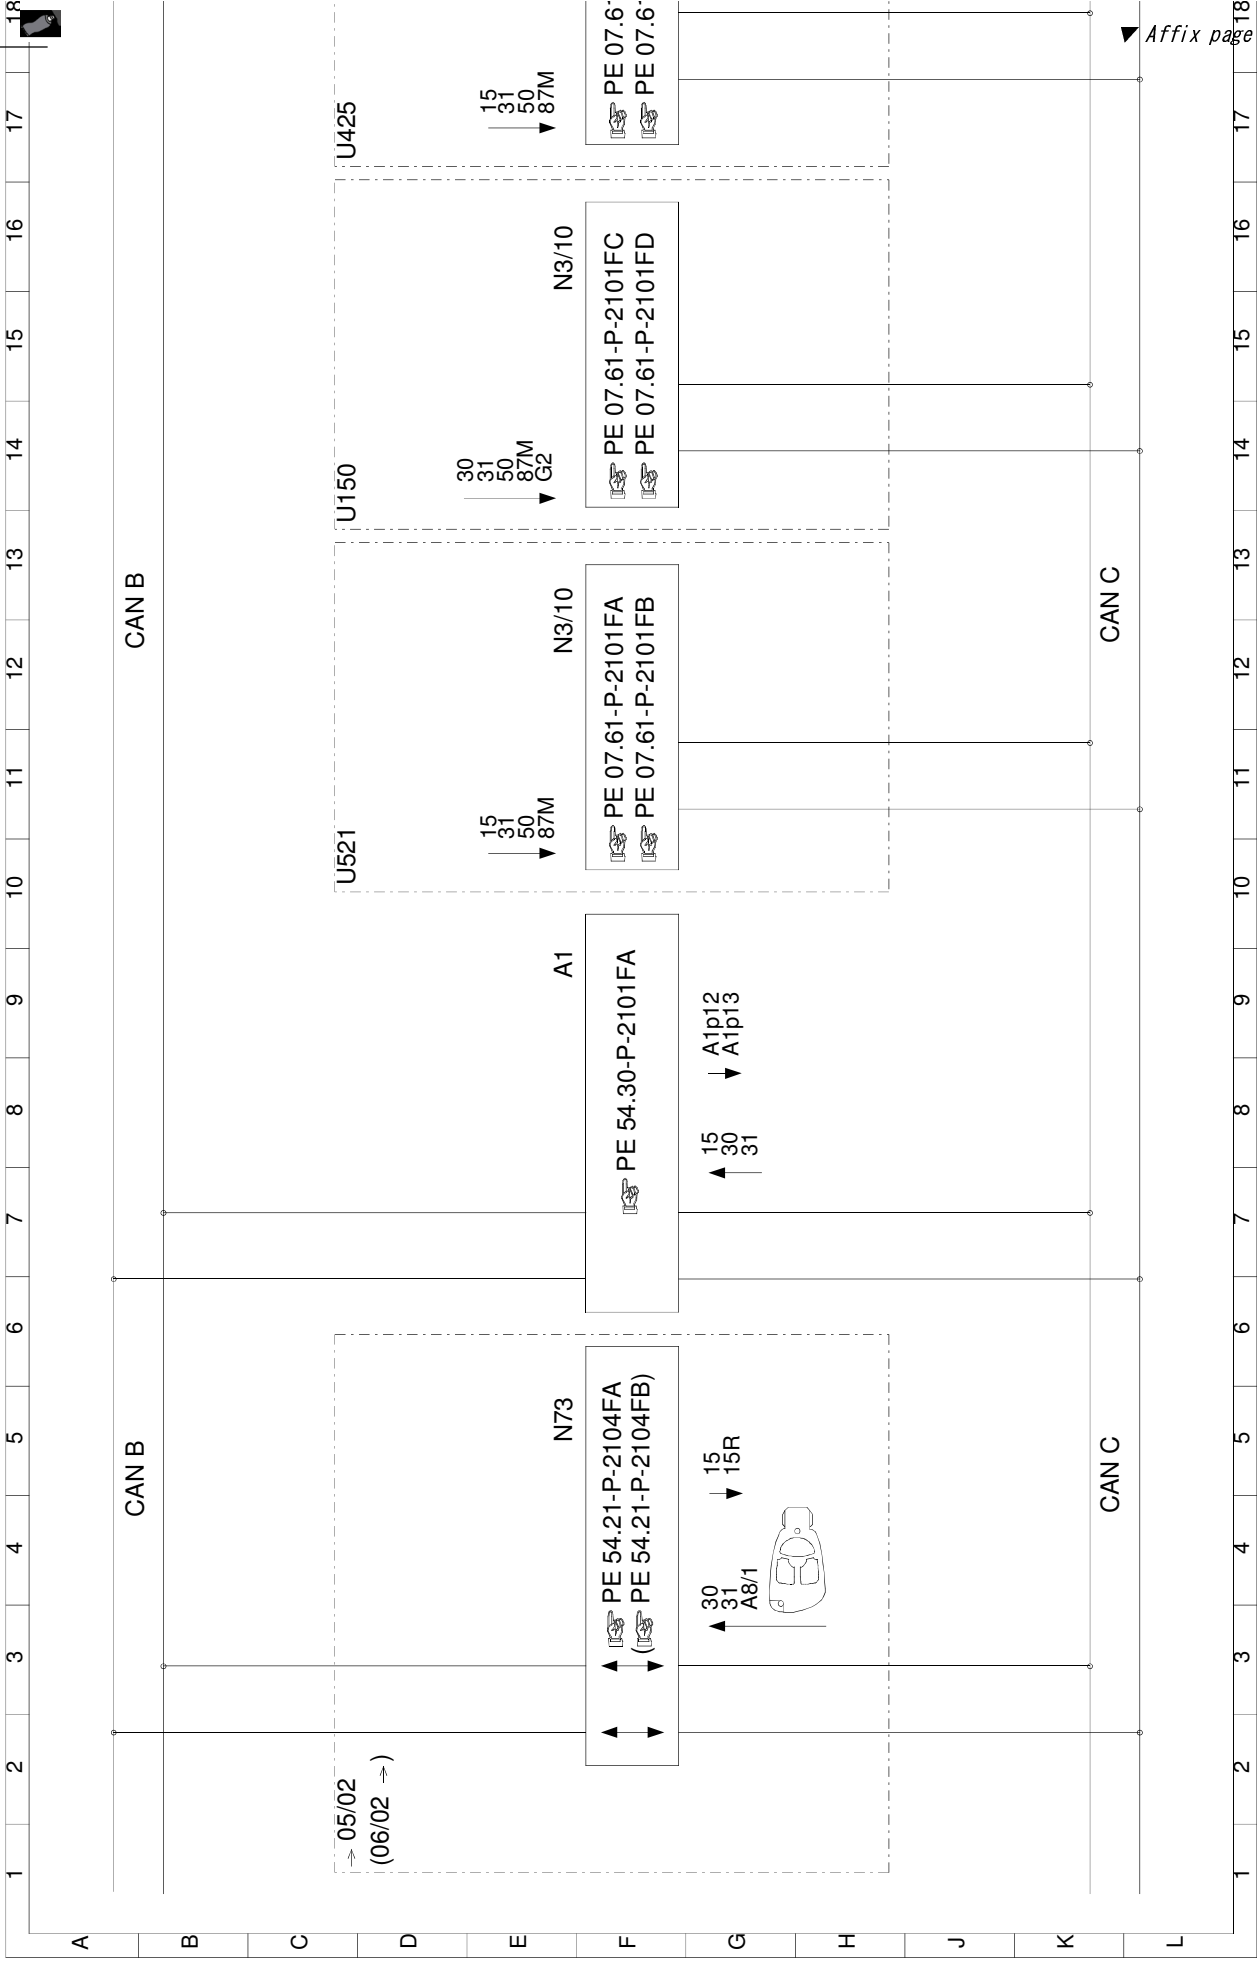

▼ Affix page 2 here ▼




CAN B CAN B

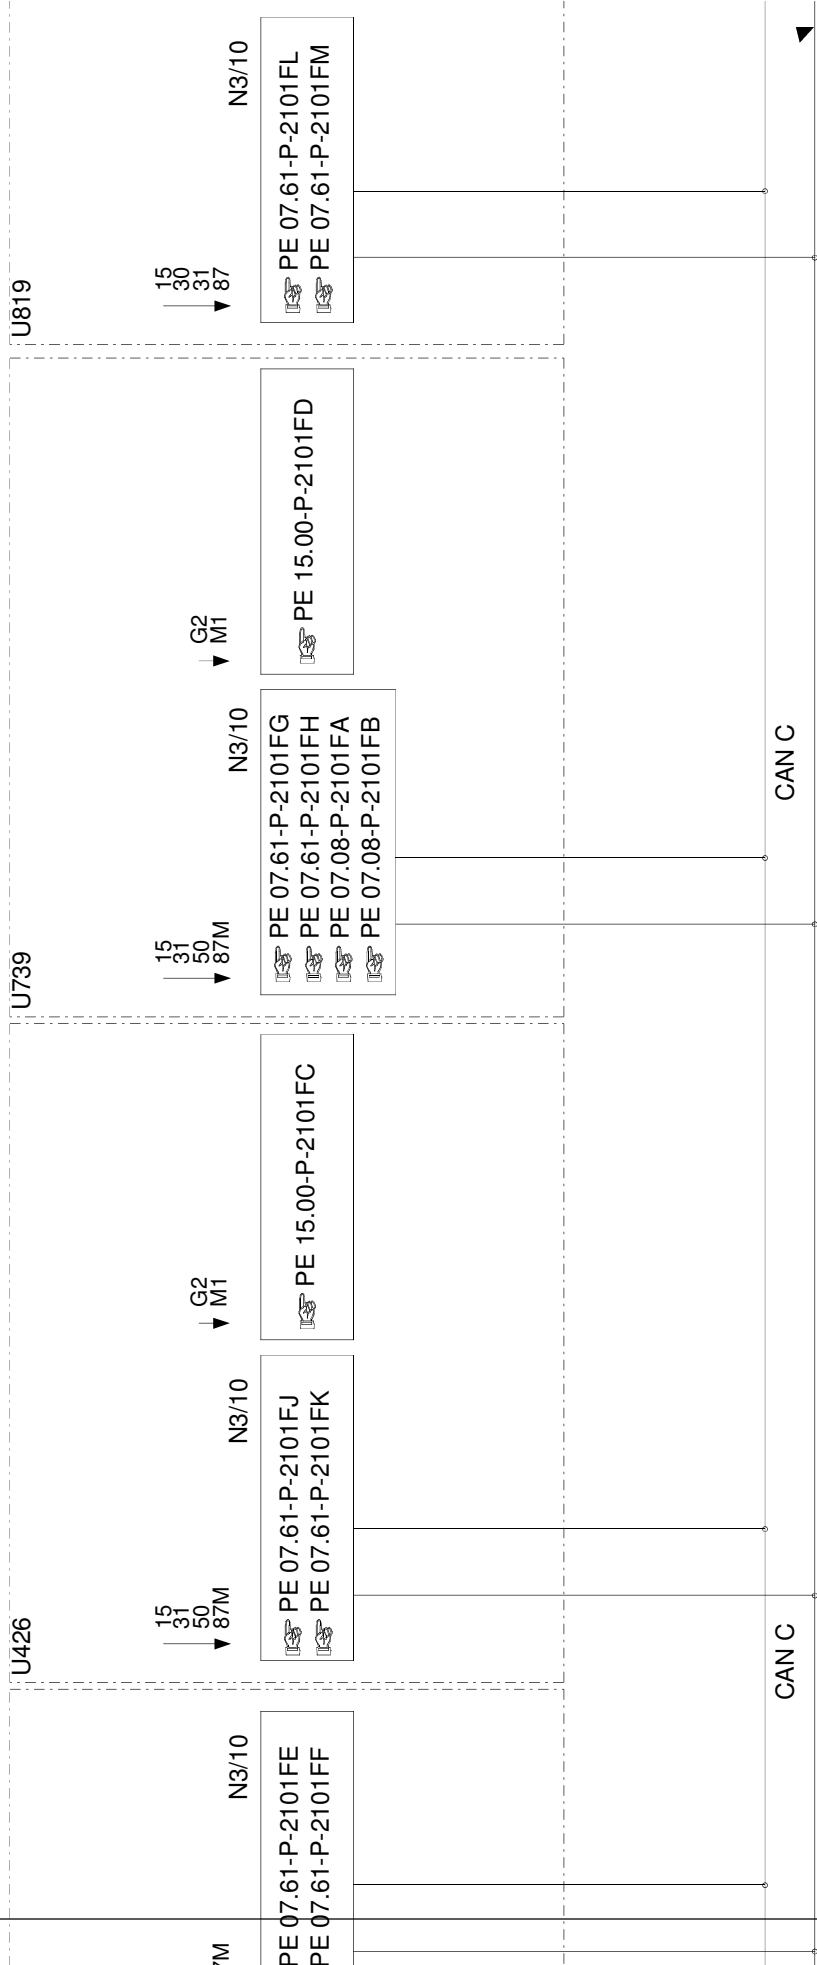

▼ Affix page 3 here ▼

Cut here

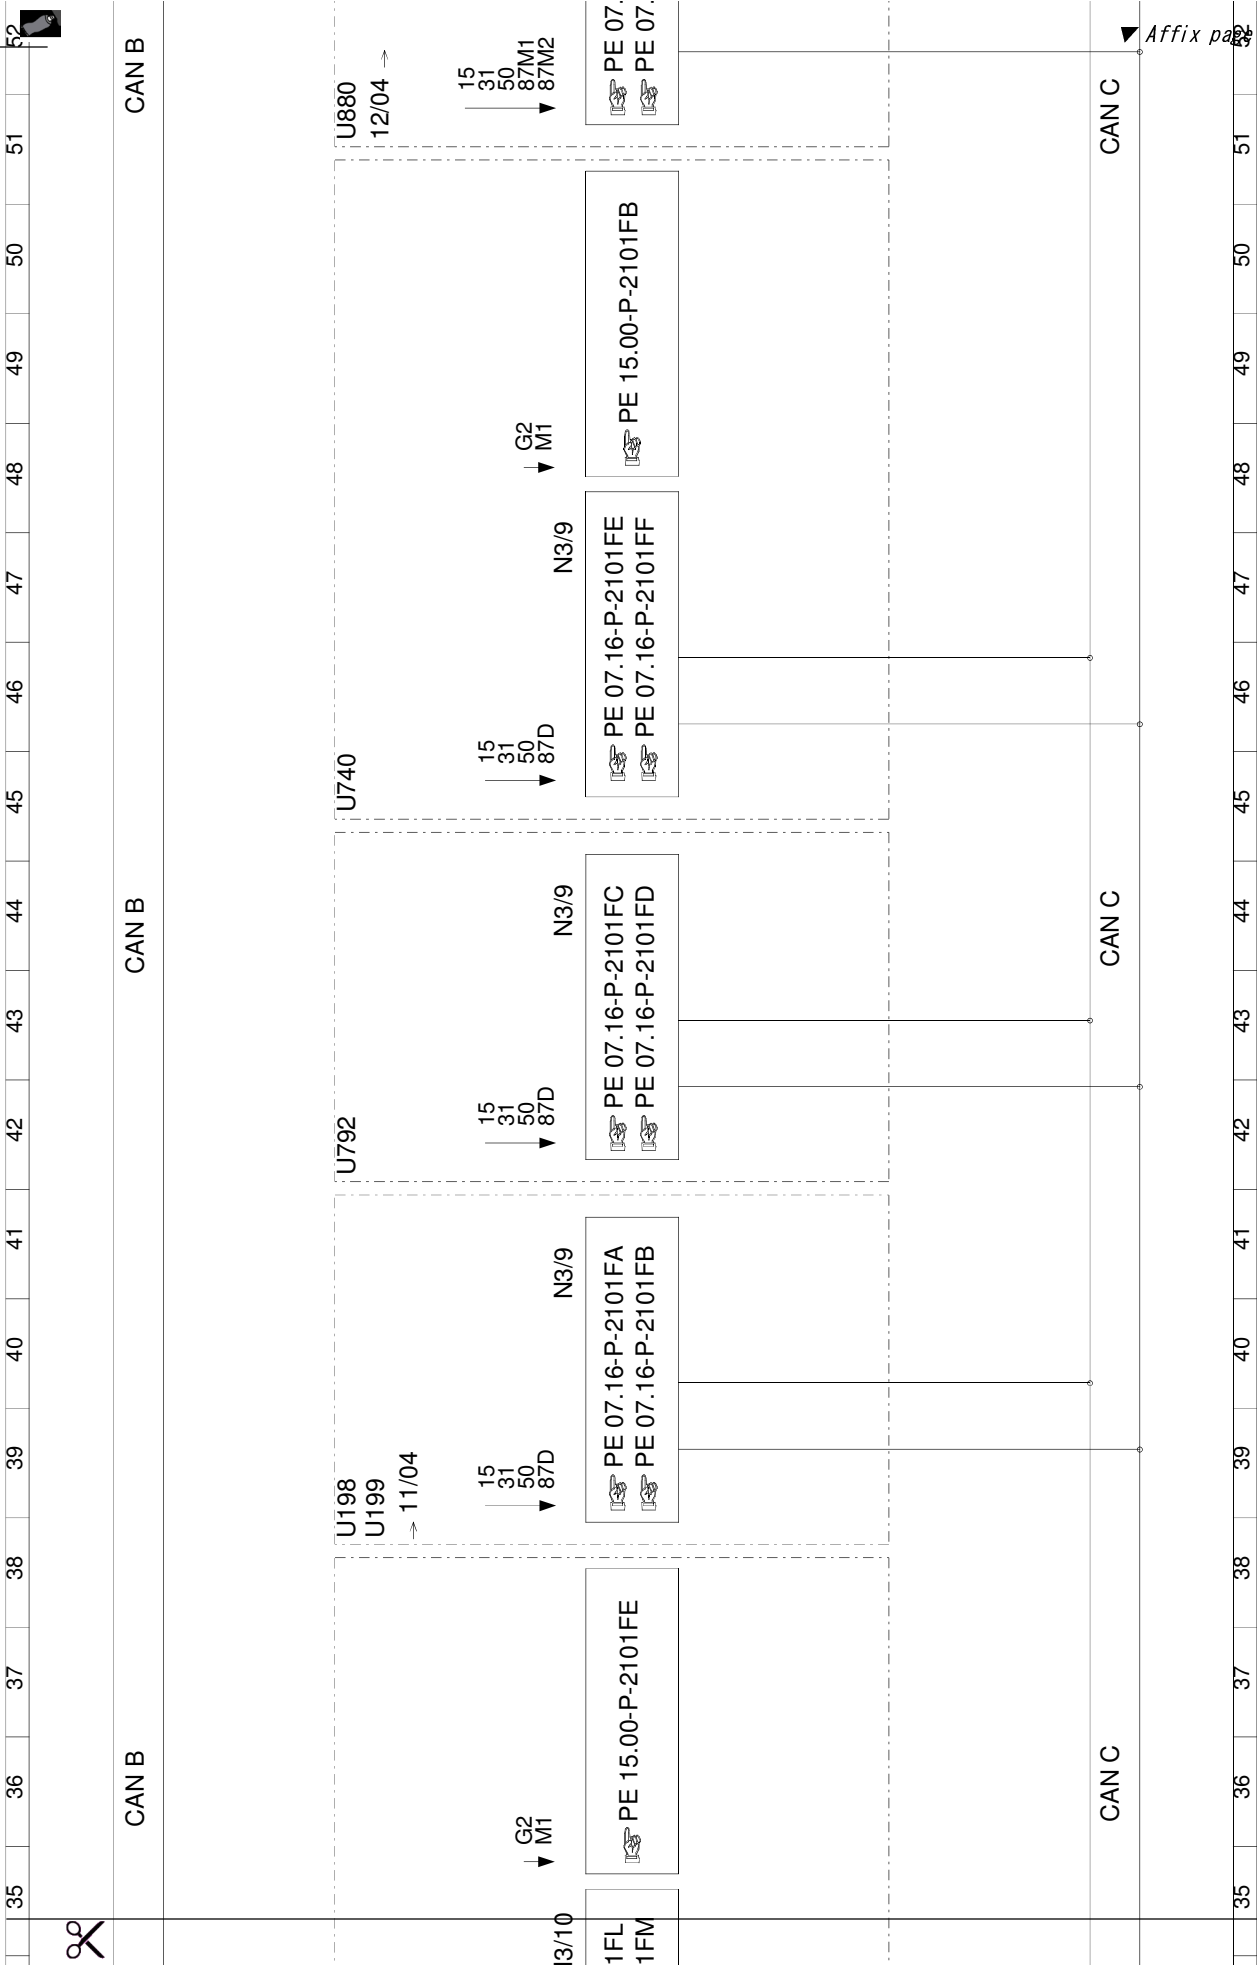




AN B

CAN B

0 4

15
31
50
87M1
87M2

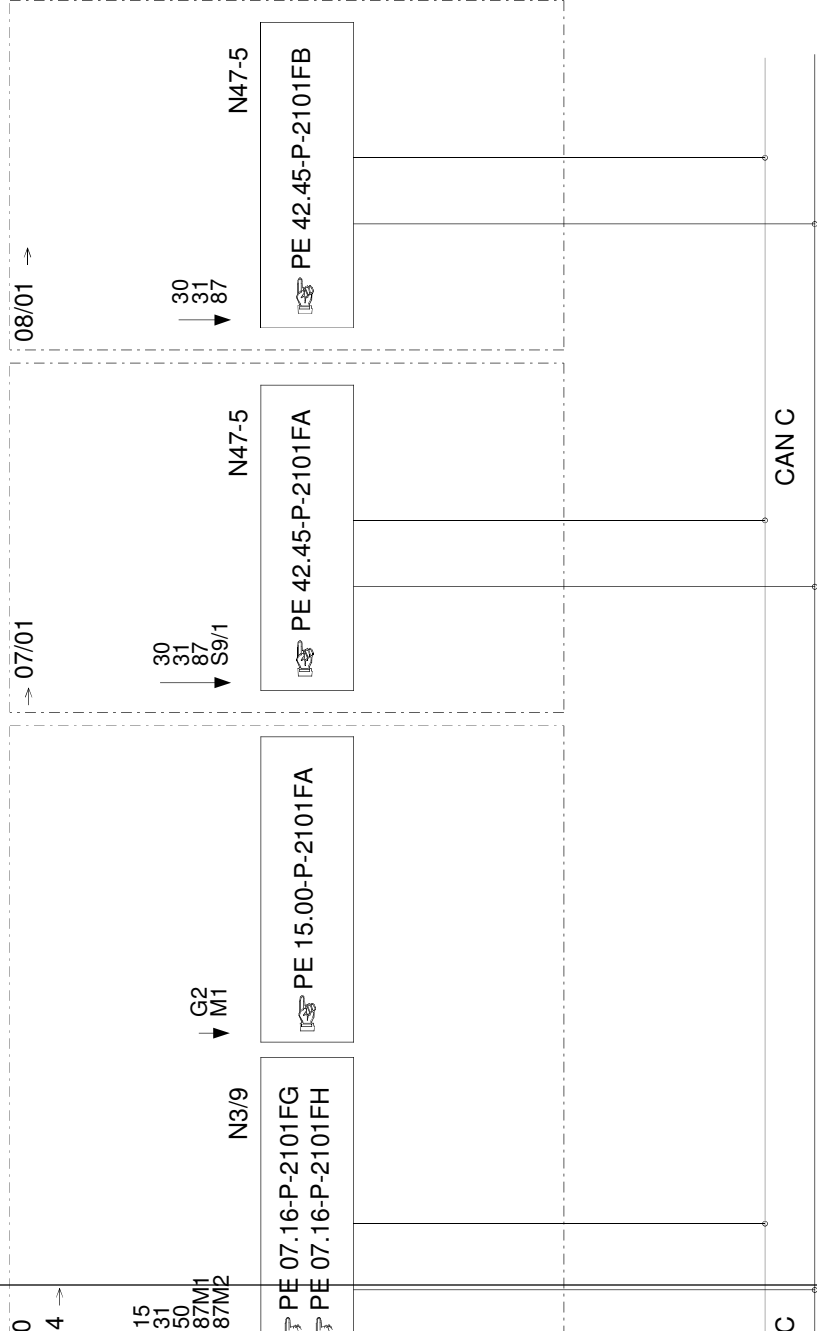

C

▼ Affix page 5 here ▼

Cut here

