



P46.15-2174-09

- 1 Jacket tube
- 2 Locking lever
- 3 Slide

- 4 Grip arm
- 5 Pin
- 6 Retaining bolt

- 7 Toggle
- 8 Lock
- 9 Locking plate

**Modification notes**

16.5.06	"Disconnect/connect ground line on battery" removed		
---------	---	--	--

	Remove/install		
<b>Danger!</b>	Risk of injury Injuries may result when performing testing or repair work on airbag or emergency tensioning retractor units.	Store airbag units with deployment side facing up; do not expose to temperatures greater than 100 °C. When working on these units, disconnect the power supply.	AS91.00-Z-0001-01A
	Notes on self-locking nuts and bolts		AH00.00-N-0001-01A
	Notes on performing repair, body work and welding on vehicles with airbags and ETR units		AH91.00-P-0002-01M
1	Position steering wheel horizontal	Front wheels in straight ahead position	
2	Remove steering wheel		AR46.10-P-0100P
3	Remove steering column switch module	See: ↓ Remove/install jacket tube: Model 203 except 203.081/084/281/284 Model 203.081/084/281/284 Model 209	AR46.10-P-0400P AR46.10-P-0400PA AR46.10-P-0400Q
4	Remove left cover below instrument panel		AR68.10-P-1500P
5	Remove absorber under instrument panel	Note the installation position of the absorber.	
6	Swivel locking handle (7) forwards (arrow) until it latches in the handle arm (4).		
7	Detach handle arm (4) from carriage (3)	Carefully pry off handle arm (4) from carriage (3).	
8	Detach clamping lever (2) from slider (3)	Pull bolt (5) out of slider (3).	
9	Detach locking plates (9) from retaining bolts (6)	<b>Installation:</b> Replace locking plates (9) (3 in total).	
10	Remove catch (8) from retaining bolt (6)		
11	Install in the reverse order		
12	Read out fault memory and erase if required Connect STAR DIAGNOSIS and read out fault memory	STAR DIAGNOSIS diagnosis system	*WH58.30-Z-1048-13A AD00.00-P-2000-04A

**Commercially available tools**

Number	Designation
WH58.30-Z-1048-13A	STAR DIAGNOSIS diagnosis system, Compact Passenger Car 6511 1801 00