

MODEL 203 with CODE (551a) Anti-theft alarm system (ATA)

Shown on Model 203.0

- 1 Screwdriver
- 2 Bracket
- 3 Connector
- B33 ATA sensor
- N10/2 Rear SAM control module with fuse and relay module



P80.50-2177-04

		Removing, installing	
☒ ☒	1.1	Remove paneling in trunk	<div style="display: flex; justify-content: space-between;"> <div> <p>i Remove left side wall paneling in trunk. Model 203.0 Model 203.7</p> </div> <div style="color: red;"> <p>AR68.30-P-4600P AR68.30-P-4600PB</p> </div> </div>
	1.2	Remove and install paneling in rear	<div style="display: flex; justify-content: space-between;"> <div> <p>i Remove left side paneling. Model 203.2</p> </div> <div> <p>AR68.30-P-4780PA</p> </div> </div>
	2	Remove rear SAM control module with fuse and relay module (N10/2)	
	3	Disconnect connector (3) from ATA inclination sensor (B33)	
	4	Remove ATA inclination sensor (B33) from bracket (2)	<p>i Press lug (2) in direction of arrow with screwdriver (1).</p>
	5	Install in the reverse order	