



MODEL 203.0

- 1 Windowbag
- 2 Bracket for windowbag to roof
- 3 Check straps

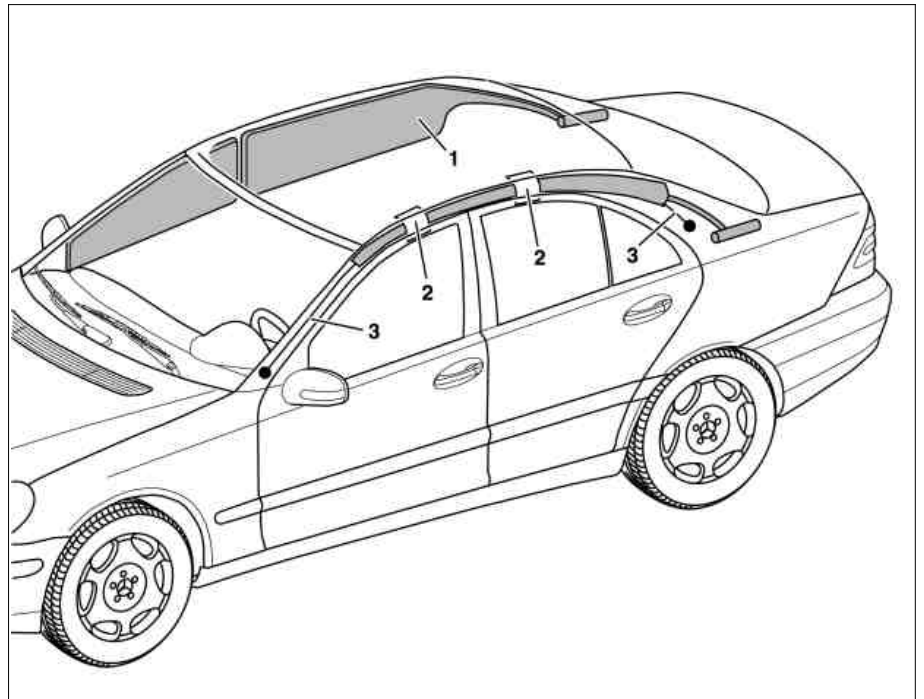

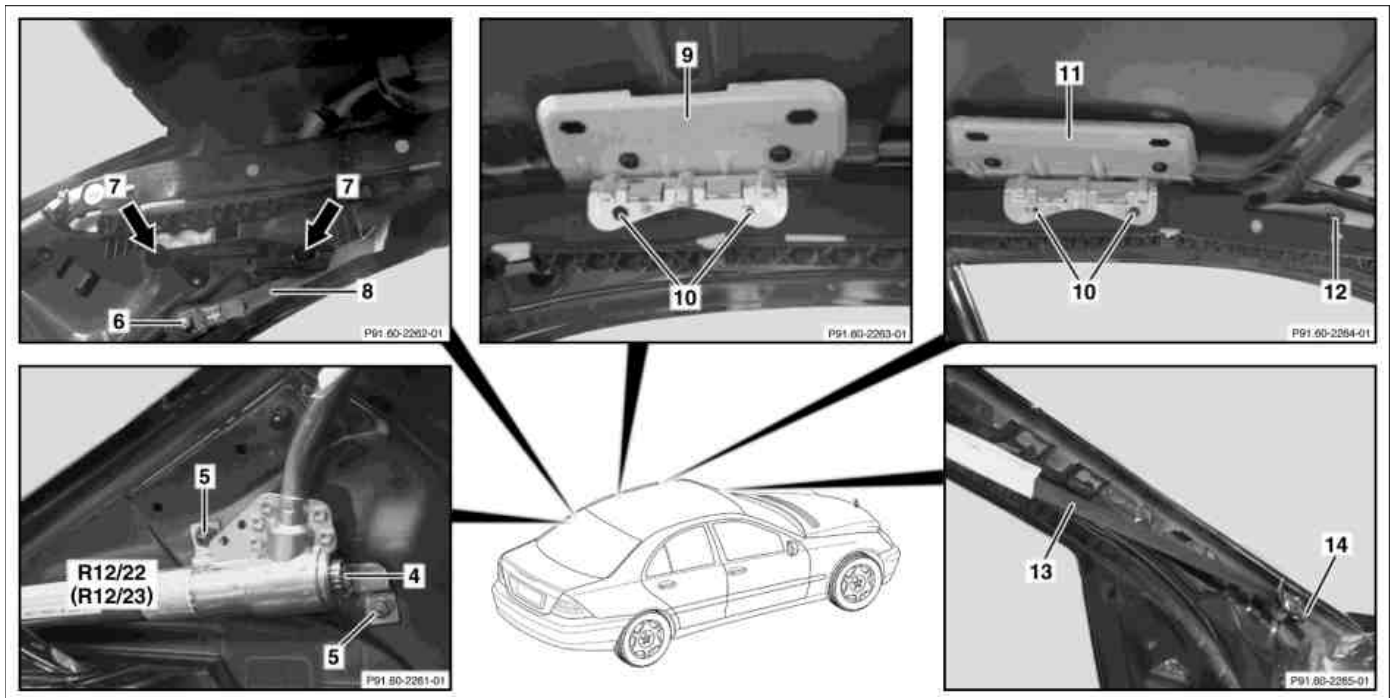


 
 
 
 
 


P91.60-2266-06



P91.60-2260-09

- | | | |
|--------------------|----------------------|-----------------------------------|
| 4 Clutch | 9 Bracket | 14 Bolt |
| 5 Nut | 10 Bolts | R12/22 Left rear windowbag squib |
| 6 Bolt | 11 Bracket | R12/23 Right rear windowbag squib |
| 7 Clips | 12 Clamp | |
| 8 Rear check strap | 13 Front check strap | |

	<p>Remove/install</p>		
<p>⚠ Danger!</p>	<p>Risk of injury caused by performing testing or repair work on airbag or emergency tensioning retractor units.</p>	<p>Store airbag unit with deployment face up, do not subject to temperatures above 100 °C. When working on these units, disconnect the power supply.</p>	<p>AS91.00-Z-0001-01A</p>
	<p>Important instructions for performing repair, body work and welding on vehicles with airbags and emergency tensioning retractor units</p>	<p>Models 203, 215, 220</p>	<p>AH91.00-P-0002-01M</p>

	Assessment of airbag and belt tensioner units in accident vehicles	Models 129 as of 1.7.93, 163, 168, 170, 202 as of 1.7.93, 203, 208, 210, 215, 220, 463, 638, 901, 902, 903, 904	AH91.00-P-0006-01B
	Legal regulations on handling and storing airbags and emergency tensioning retractors	Models 124, 129, 140, 163, 168, 170, 202, 203, 208, 210, 215, 220, 314, 316, 318, 461, 463, 638, 901, 902, 903, 904, 950, 952, 953, 954, 970, 972, 974, 975, 976	AH91.00-P-0004-01A
	Note on functional reliability of windowbag		AH91.60-P-0693-01A
1	Remove headliner		AR68.30-P-4300P
2	Release connector (4) and disconnect	 On left/right rear windowbag squib (R12/22, R12/23).	
3	Unscrew nut (5)	 Nut for windowbag inflator	*BA91.60-P-1007-01A
4	Remove bolts (6, 14)	 At rear (8) and front (13) check straps.  Screw for windowbag check strap	*BA91.60-P-1008-01A
5	Unclip clips (7)		
6	Remove screws (10)	 Screw for windowbag in the latching plate area	*BA91.60-P-1009-01A
7	Detach windowbag (1) from the brackets (9, 11)		
8	Detach clamp (12)		
9	Remove windowbag (1)  OS Notes on disposing of airbag and emergency tensioning retractor units	If the windowbag (1) is replaced, the defective unit must be disposed of properly: ↓ Make airbag units unusable	OS91.00-P-0001-01A AR91.60-P-0611A
10	Install in the reverse order		
11	 AD Read out fault memory Connect STAR diagnosis tool, read out diagnostic trouble code memory and erase		AD00.00-P-2000-04A

 Airbag

Number	Designation		Model 203
BA91.60-P-1007-01A	Windowbag gas generator nut/bolt	Nm	8
BA91.60-P-1008-01A	Screw for windowbag check strap	Nm	5
BA91.60-P-1009-01A	Screw for windowbag in the latching plate area	Nm	5