


**Fuse assignment**

21 to 42 Socket

F34 Interior fuse box

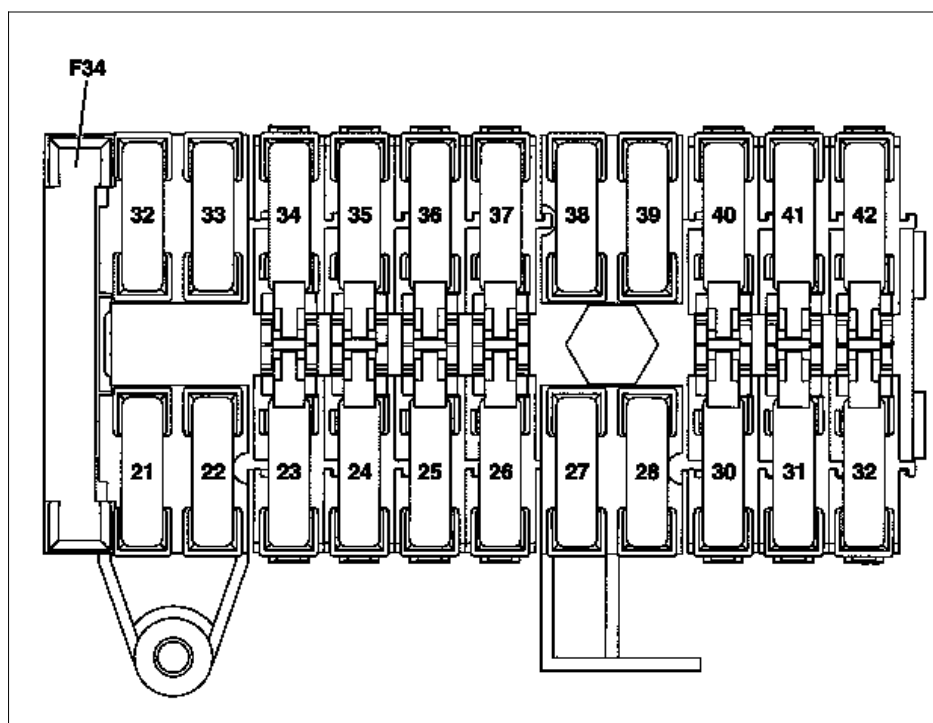

P54.15-2833-06

Bay	Fuse	circuit	Line identification (line fused)	Fused function	Rating in amperes (A)
21	F34f21	30	2.5 RDWH	<ul style="list-style-type: none"> <li>Left door control unit (N69/1/)</li> </ul>	30
22	F34f22	30	2.5 RDWH	<ul style="list-style-type: none"> <li>Right door control unit (N69/2/)</li> </ul>	30
23	F34f23	30	-	<ul style="list-style-type: none"> <li>Spare</li> </ul>	15
24	F34f24	30	0,75 RDPK	<b>Valid for code (401) Front comfort seats, incl. seat heating and seat ventilation:</b> <ul style="list-style-type: none"> <li>(N29/5) Left front seat ventilation blower regulator</li> <li>Right front seat ventilation blower regulator (N29/6)</li> </ul>	7.5
25	F34f25	30	RDGN 2.5	<ul style="list-style-type: none"> <li>Upper control panel control unit (N72/1/)</li> </ul>	30
26	F34f26	30	4,0 RDVT	<b>Valid for code (810) Sound system:</b> <ul style="list-style-type: none"> <li>Sound amplifier (A2/13/)</li> </ul>	25
27	F34f27	30	2.5 RDYE	<b>Valid for code (275) Memory package (driver seat, steering column, mirrors):</b> <ul style="list-style-type: none"> <li>Driver front seat adjustment control unit with memory and easy entry (N32/1) (up to 31.5.04)</li> </ul>	30
28	F34f28	-	-	<ul style="list-style-type: none"> <li>Spare</li> </ul>	-
29	F34f29	30	2.5 RDYE	<b>Valid for code (275) Memory package (driver seat, steering column, mirrors):</b> <ul style="list-style-type: none"> <li>Driver front seat adjustment control unit with memory and easy entry (N32/1) (as of 1.6.04)</li> </ul>	30
30	F34f30	30	RDGN 4.0	<ul style="list-style-type: none"> <li>AC recirculation unit (A32)</li> </ul>	40
31	F34f31	30	1.5 RDVT	<ul style="list-style-type: none"> <li>Electric steering lock control unit (N26/5)</li> <li>EIS [EVS] control unit (N73)</li> </ul>	20
32	F34f32	30	2.5 RDBK	<ul style="list-style-type: none"> <li>Rear control unit (N22/6)</li> </ul>	30
33	F34f33	30	2.5 RDBU	<ul style="list-style-type: none"> <li>Rear control unit (N22/6)</li> </ul>	30
34	F34f34	30	RDGN 2.5	<b>Valid for code (242) Electrically adjustable front passenger seat with memory:</b> <ul style="list-style-type: none"> <li>Front passenger front seat adjustment control unit with memory and easy entry (N32/2) (as of 1.6.04)</li> </ul>	30
35	F34f35	30	2.5 RDBK	<b>Valid for code (228) stationary heater:</b> <ul style="list-style-type: none"> <li>STH heater unit (A6)</li> </ul>	30
36	F34f36	30	-	<ul style="list-style-type: none"> <li>Spare</li> </ul>	7.5
37	F34f37	30	2.5 RD	<b>Valid for code (881) Remote trunk closing (RTC [HDFS]):</b> <ul style="list-style-type: none"> <li>TLC [HDS] control unit (N121)</li> </ul>	25

38	F34f38	30	RDGN 2.5	<b>Valid for code (242) Electrically adjustable front passenger seat with memory:</b> <ul style="list-style-type: none"> <li>● Front passenger front seat adjustment control unit with memory and easy entry (N32/2) (up to 31.5.04)</li> </ul>	30
39	F34f39	30	-	<ul style="list-style-type: none"> <li>● Spare</li> </ul>	-
40	F34f40	30	0,75 RDVT  1.5 RDVT  0,5 RDVT	<b>Valid for (USA) and (DN) (up to 31.5.04):</b> <ul style="list-style-type: none"> <li>● Trunk lid emergency release switch (S88/10)</li> </ul> <b>Valid for code (388) "Portable CTEL" UHI system:</b> <ul style="list-style-type: none"> <li>● Universal Portable CTEL Interface (UPCI [UHI]) control unit (N123/1/)</li> </ul> <b>Valid for code (854) MB portable CTEL:</b> <ul style="list-style-type: none"> <li>● Telephone interface (A34/4)</li> </ul> <b>Valid for code (853) MB standard telephone:</b> <ul style="list-style-type: none"> <li>● Telephone transmitter and receiver unit, D2B (A35/13)</li> </ul> <b>Valid for code (852) Portable CTEL preinstallation complete on dome or code (854) MB Portable CTEL:</b> <ul style="list-style-type: none"> <li>● Portable CTEL separation point (X39/37)</li> </ul> <b>Valid for (D) with code (349) E Call emergency call system:</b> <ul style="list-style-type: none"> <li>● E-call control unit (A35/8)</li> </ul> <b>Valid for code (852) Complete portable CTEL preinstallation on console, code (854) MB portable CTEL or code (388) Telephone "Handy", UPCI system:</b> <ul style="list-style-type: none"> <li>● E-net compensator (A28/3/)</li> </ul> <b>Valid for code (855) TELE AID:</b> <ul style="list-style-type: none"> <li>● Telephone transmitter/receiver unit and TELE AID [Telematic Alarm Identification on Demand] D2B (A35/17)</li> </ul>	7.5
41	F34f41	30	1,0 RDBU	<b>Valid without code (581) Comfort automatic air conditioning:</b> <ul style="list-style-type: none"> <li>● AAC [KLA] control and operating unit (N22)</li> </ul> <b>Valid for code (581) comfort automatic air conditioning:</b> <ul style="list-style-type: none"> <li>● Comfort AAC (N22/7C-AAC [K-KLA]) control and operating unit (/)</li> <li>● Rear blower motor control unit (N22/3)</li> </ul>	15
42	F34f42	30	0,5 RDYE	<ul style="list-style-type: none"> <li>● Instrument cluster (A1)</li> </ul>	7.5