



P82.20-2809-09

1 Upper trim panel

2 Bolts

N70 Overhead control panel control unit

	Remove/install		
1.1 	Transfer basic data from overhead control panel control unit (N70) to STAR DIAGNOSIS Connect STAR DIAGNOSIS and read out fault memory	When installing new overhead control panel control unit (N70). i Installation: Transfer buffered basic data to the new overhead control panel control unit (N70).	AD00.00-P-2000-04A
2	Open soft top		
3	Remove transmitter key from electronic ignition switch control unit		
4	Unclip top paneling (1) and remove		
5	Remove bolt (2)		
6	Remove the overhead control panel control unit (N70)	i Installation: Excess pressure and tensile stress on the roof switch will damage the overhead control panel control unit (N70)	
7	Disconnect connectors from overhead control panel control unit (N70)		
8	Install in the reverse order		
9 	Read out fault memory, erase if necessary Connect STAR DIAGNOSIS and read out fault memory		AD00.00-P-2000-04A