


Document number: pe91.29-p-2104-99ba
Document title: Wiring diagram of driver-side seat control module

Code:	Designation:	Position:
A0	Color code key	40 L
F34	Interior fuse box	2 L
F34	Interior fuse box	4 L
F34f27	Fuse 27	2 K
F34f29	Fuse 29	4 K
M20	Steering column adjustment motor group	17 L
M20m1	Fore/aft adjustment motor	15 L
M20m2	Height adjustment up/down motor	17 L
M27	Driver seat adjustment motor group with memory	28 L
M27m1	Fore/aft motor	24 L
M27m2	Rear up/down motor	22 L
M27m3	Front up/down motor	27 L
M27m4	Head restraint up/down motor	32 L
M27m5	Backrest motor	29 L
N32/1	Driver front seat adjustment control unit with memory and easy entry	4 A
N32/1	Driver front seat adjustment control unit with memory and easy entry	12 A
N32/1	Driver front seat adjustment control unit with memory and easy entry	20 A
N32/1	Driver front seat adjustment control unit with memory and easy entry	28 A
N32/1	Driver front seat adjustment control unit with memory and easy entry	35 A
S91/3	Driver seat backrest release microswitch	34 L
S91/4	Driver seat height release microswitch	35 L
U12	Valid for left-hand drive vehicles	3 C
U12	Valid for left-hand drive vehicles	5 E
U12	Valid for left-hand drive vehicles	13 E
U13	Valid for right-hand drive vehicles	3 C
U13	Valid for right-hand drive vehicles	9 E
U13	Valid for right-hand drive vehicles	16 E
W18	Ground (left front seat crossmember)	4 E
W19	Ground (right front seat crossmember)	4 E
X18/35	Cockpit wiring harness and FFS [RBA] connector	16 F
X30/4	Right voltage distributor (CAN) connector	10 L
X30/7	Voltage distributor (CAN) connector	6 L

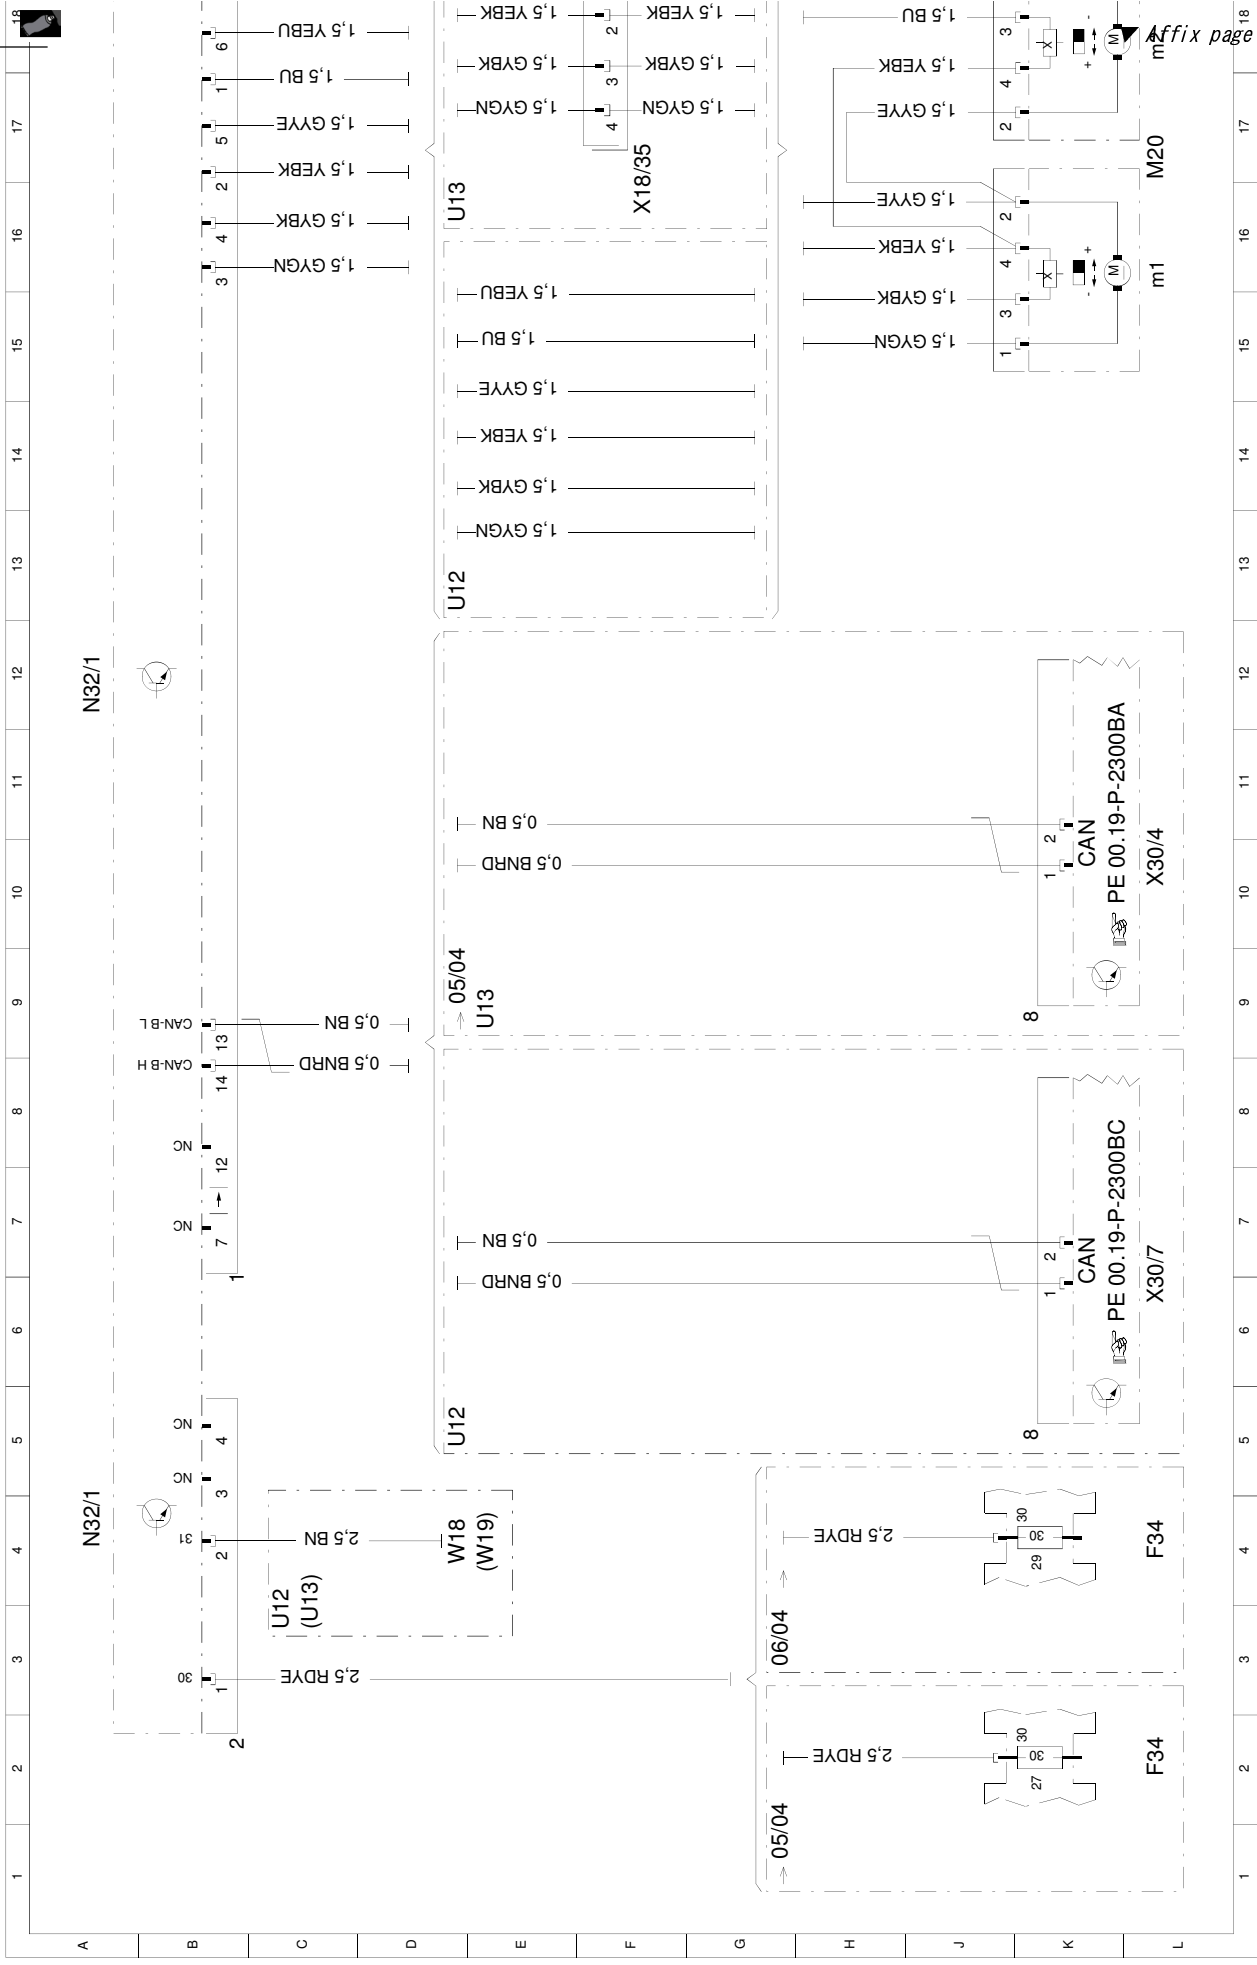


Affix page 2 here ▼

18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35



N32/1

N32/1

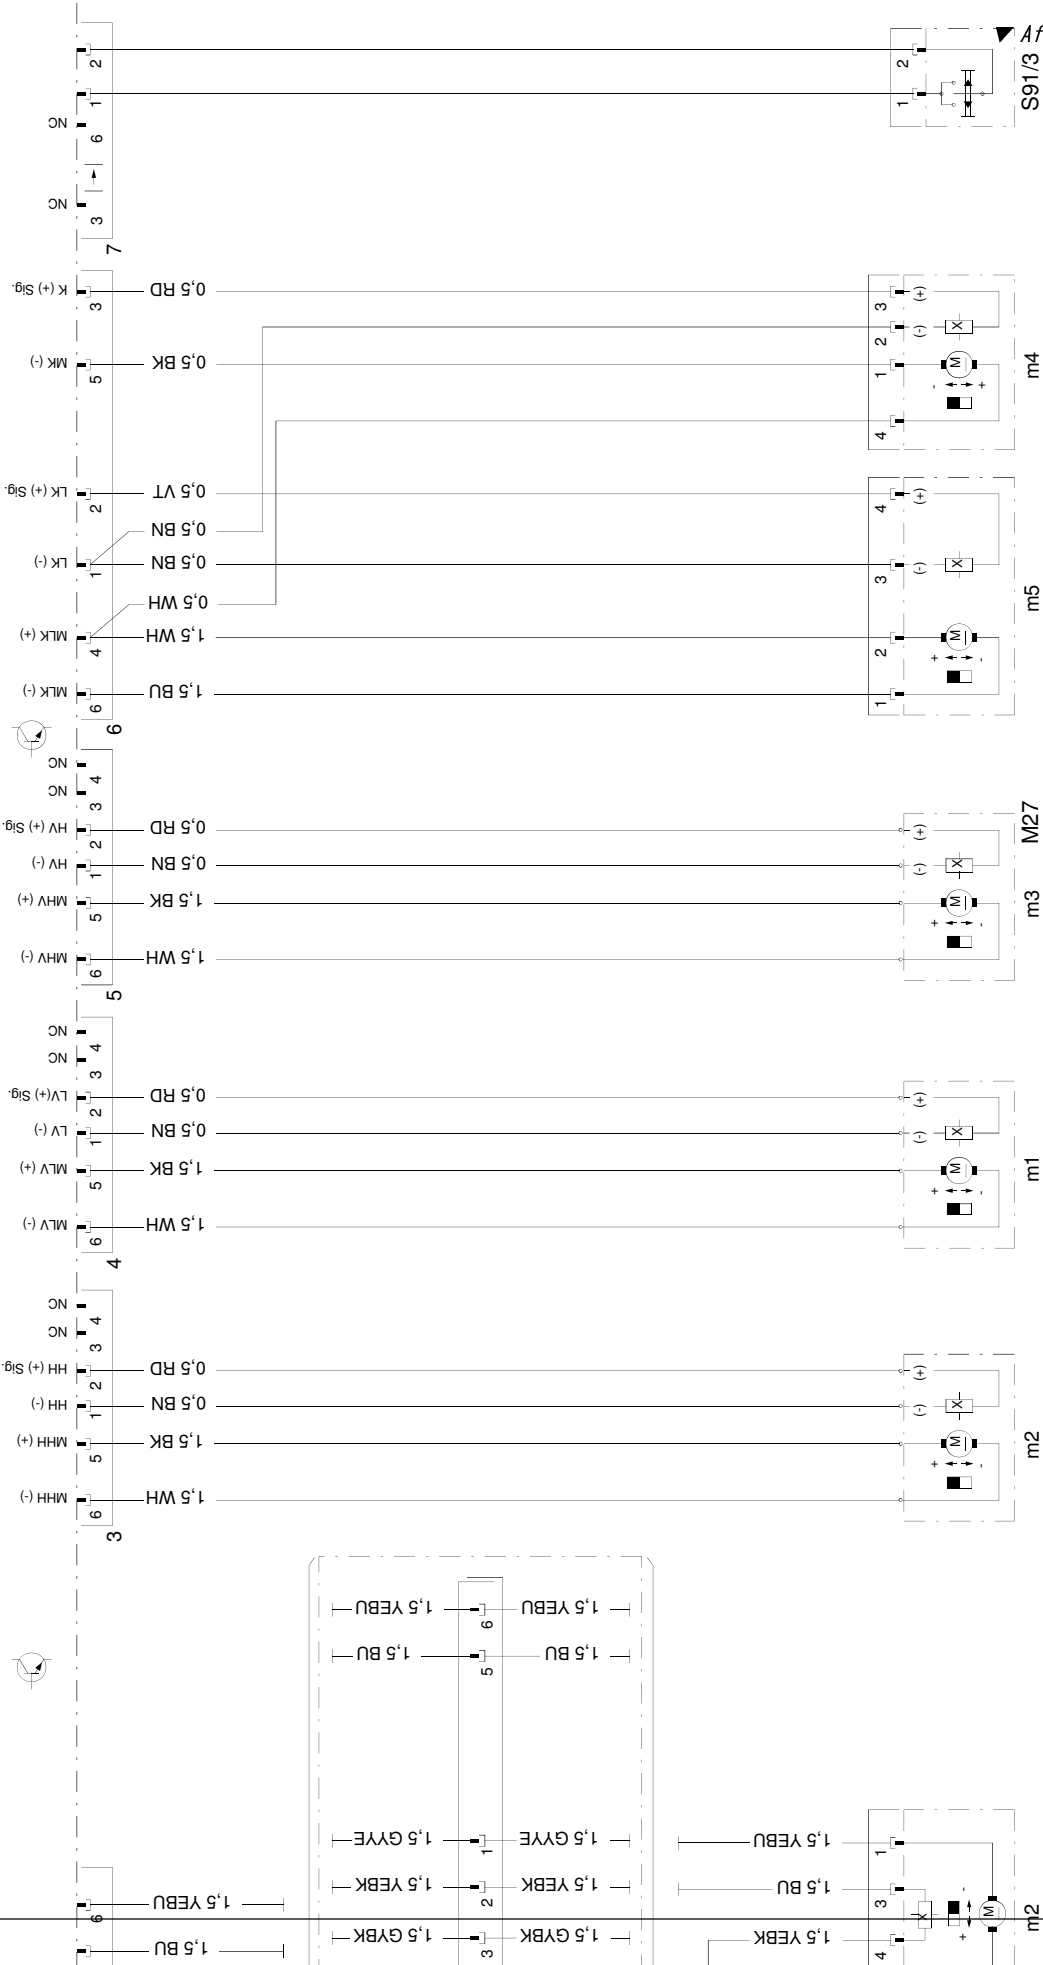

▼ Affix page 3 here ▼

Cut here

