

P91.60-2456-08

- 1 Bolts
 2 Driver airbag unit
 3 Electrical connector for multifunction steering wheel
 R12/13 Driver airbag ignition squib 1
 R12/14 Driver airbag ignition squib 2


Modification notes

3.3.04	"Disconnect/connect battery ground line" removed		
--------	--	--	--

	Remove/install		
Danger!	Risk of injury caused by performing testing or repair work on airbag or emergency tensioning retractor units.	Store airbag units with deployment side facing up; do not expose to temperatures greater than 100 °C. When working on these units, disconnect the power supply.	AS91.00-Z-0001-01A
	Notes on performing repair, body work and welding on vehicles with airbags and ETR units		AH91.00-P-0002-01M
	Assessment of airbag and belt tensioner units in accident vehicles		AH91.00-P-0006-01B
	Legal requirements on handling and storing airbags and emergency tensioning retractor units		AH91.00-P-0004-01A
1	Switch off ignition, detach transmitter key from electronic ignition switch control unit	On vehicles with Keyless Go, code 889: Press Keyless Go start/stop button repeatedly until ignition is switched off. Remove transmitter key from vehicle and store it at a location beyond its transmission range (minimum distance 2 m).	
2	Remove bolts (1)	 	*BA91.60-P-1001-01A *126589001000
3	Lift driver airbag unit (2) and release electrical connectors at driver airbag ignition squib 1 (R12/13) and driver airbag ignition squib 2 (R12/14)	Electrical connectors of driver airbag ignition squib 1 (R12/13) and of driver airbag ignition squib 2 (R12/14) are color coded. 	*203589043300
4	Disconnect multifunction steering wheel electrical connector (3)		
5	Remove driver airbag unit (2)	If the driver airbag unit (2) is replaced, it must be disposed of correctly. Refer to: ↓ Make airbag units unusable (not Notes on disposing of airbag and emergency tensioning retractor units	AR91.60-P-0611A OS91.00-P-0001-01A
6	Install in the reverse order		
7	Connect STAR DIAGNOSIS, read out and erase fault memory Connect STAR DIAGNOSIS and read out fault memory	STAR DIAGNOSIS diagnosis system	AD00.00-P-2000-04A


Nm Airbag

Number	Designation	Type 209.3	Type 209.4
BA91.60-P-1001-01A	Bolt, airbag to steering wheel	Nm 8	8

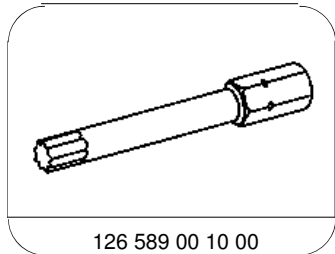

126 589 00 10 00

Screwdriver bit

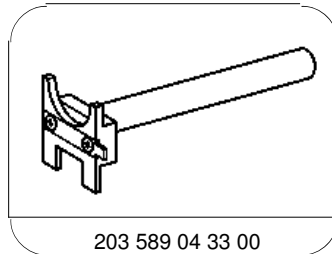

203 589 04 33 00

Removal lever