


MODEL 207.4, 209.4

**Model 207.4, shown at left side of vehicle**

- 9 Soft top compartment lid lock  
 14 Rear seat backrest  
 15 Panel  
 16 Side paneling  
 17 Seat belt  
 18 Cover  
 19 Screw


S84/22 Soft top compartment cover in catch position limit switch

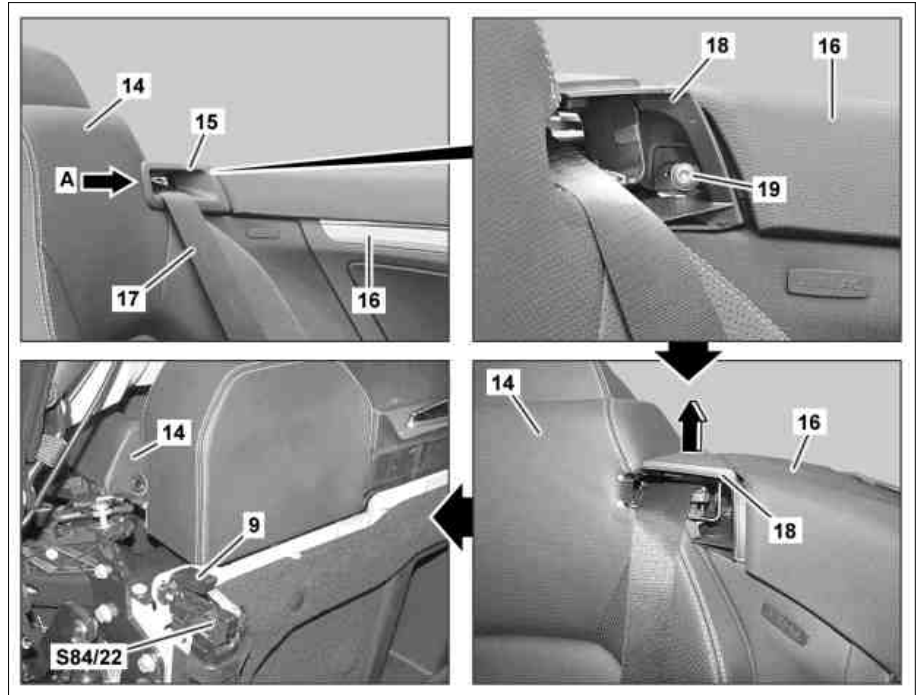


P77.30-2482-06

**Model 209.4, shown at left side of vehicle**

- 1 Expansion clip  
 2 Cover  
 3 Panel  
 4 Bolts

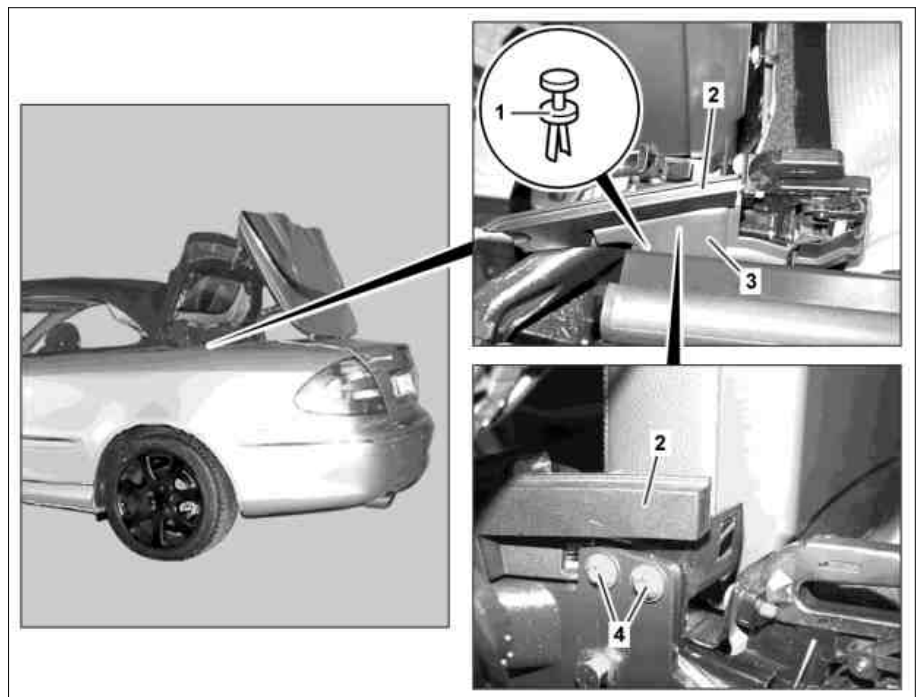

P77.30-2481-06

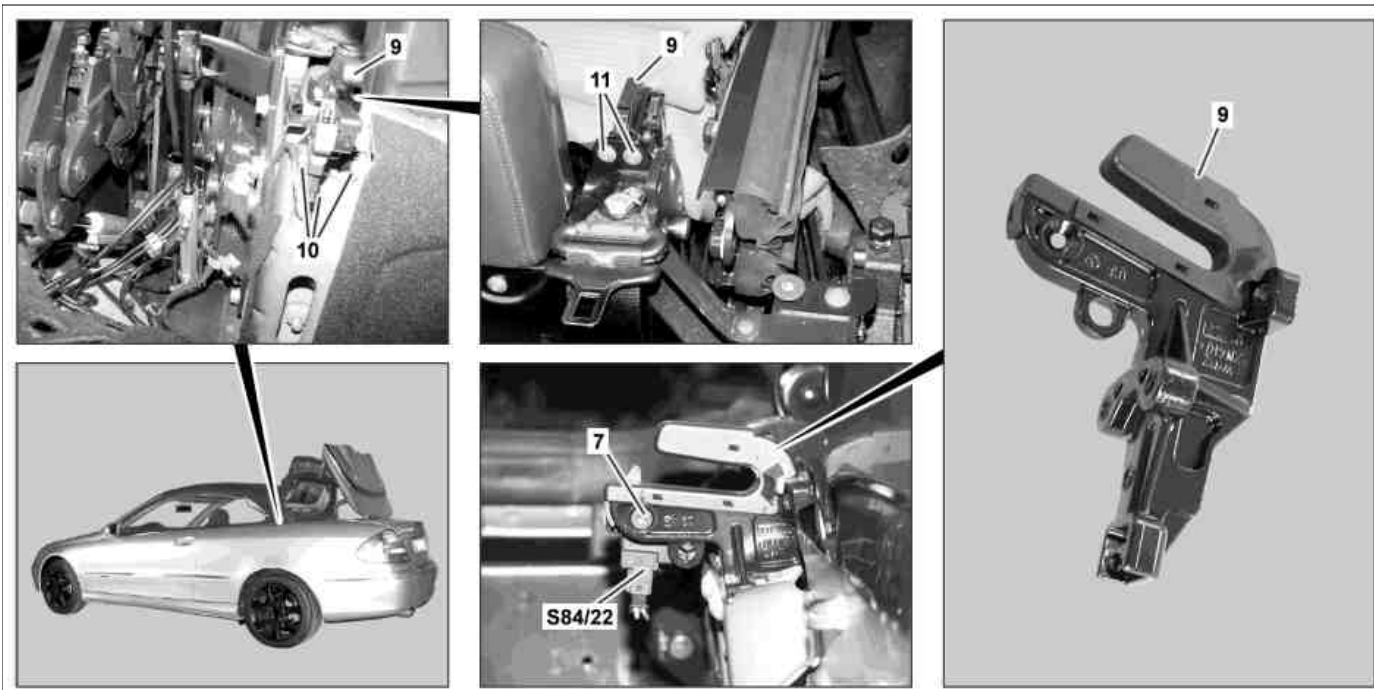

P77.30-2480-09

Shown on model 209.4, on left side of vehicle

7 Screw


 
 
 
9 Soft top compartment lid lock

10 Bolts

11 Bolts

S84/22 Soft top compartment cover in catch position limit switch

	Remove/install		
<b>Danger!</b>	<b>Risk of injury</b> when performing check and repair work in area of roll bar	Before working in the area of the roll bar, pull out the rear head restraints by hand. Keep body parts out of the area where the roll bar extends.	<a href="#">AS91.00-Z-0003-01QA</a>
<b>Danger!</b>	<b>Risk of injury</b> caused by moving parts that can <b>pinch, crush</b> or, in extreme cases, even <b>sever</b> extremities	No parts of the body or limbs should be within the operating range of the mechanism when moving components.	<a href="#">AS00.00-Z-0009-01A</a>
<b>Danger!</b>	<b>Risk of injury</b> caused by scraping or cutting body parts on sharp vehicle parts	Always wear protective gloves when working on or near sharp and non-deburred vehicle parts. Deburr repair panels.	<a href="#">AS00.00-Z-0017-01A</a>
1	Remove separation screen	Model 207.4 Model 209.4	<a href="#">AR68.50-P-3000EC</a> <a href="#">AR68.50-P-3000QA</a>
2	Unclip cover (15) from cover (18) starting at rear seta backrest (14) (arrow A).	Model 207.4  <b>Installation:</b> Ensure that cover (15) is seated correctly in cover (18).	
3	Slide cover (15) downward along seat belt (17).	Model 207.4	
4	Unscrew bolt (19)	Model 207.4	
5	Unclip cover (18) upward and remove	Model 207.4  <b>Installation:</b> Ensure that cover (18) is seated correctly below side paneling (16).	
6	Remove rear seat and rear seat backrest (14)	Model 209.4	<a href="#">AR91.12-P-1700QA</a>
7	Remove expansion clip (1) and remove cover (3)	Model 209.4	
8	Unscrew screws (4) and remove cover (2)	Model 209.4	
9	Unscrew bolt (7) from soft top compartment lid limit switch in catch position (S84/22)		
10	Unclip soft top compartment lid limit switch in catch position (S84/22) and lay down to side with electrical line connected		
11	Remove bolts (10)	Mark installation position of bolts (10). 	<a href="#">*BA77.30-P-1002-01A</a>
12	Press rear seat backrest (14) toward front in area of head restraint until bolts (11) are accessible	Model 207.4	

		<p> Do not press rear seat backrest (14) too far upward, otherwise the fastening points on the rear seat backrest (14) can be damaged.</p> <p> Support rear seat backrest (14) with suitable object so that the bolts (11) can be screwed in.</p>	
13	Remove bolts (11)	<p> Mark installation position of bolts (11).</p> <p></p>	<a href="#">*BA77.30-P-1002-01A</a>
14	Remove soft top compartment lid lock (9)		
15	Install in the reverse order		

 **Soft top**

Number	Designation		Model 207.4	Model 209.4
BA77.30-P-1002-01A	Bolt, soft top bow lock to soft top compartment lid	Nm	10 (±2)	10 (±2)