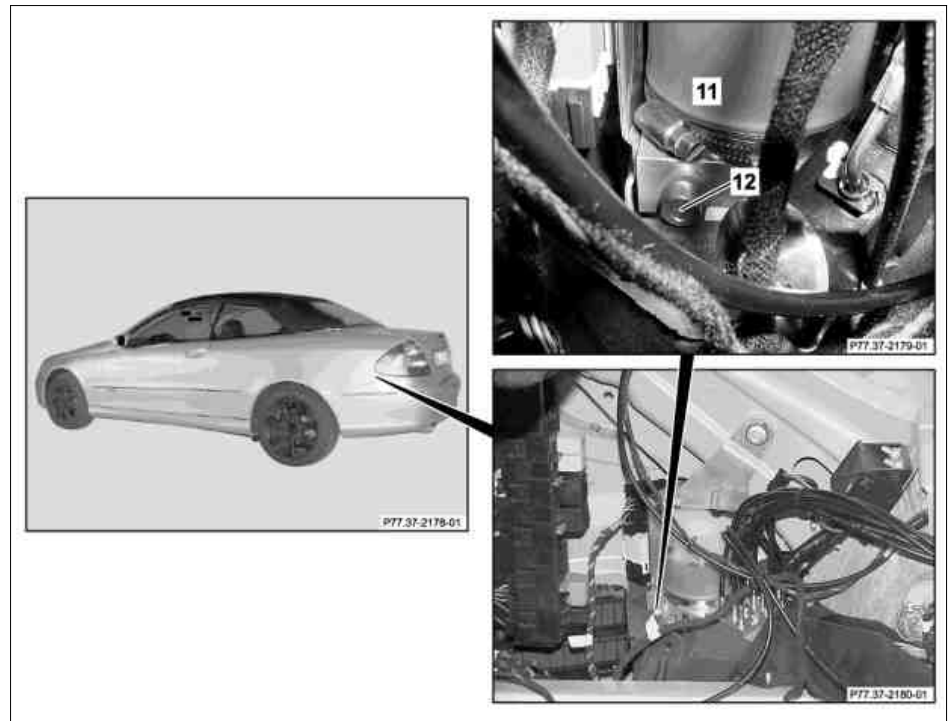
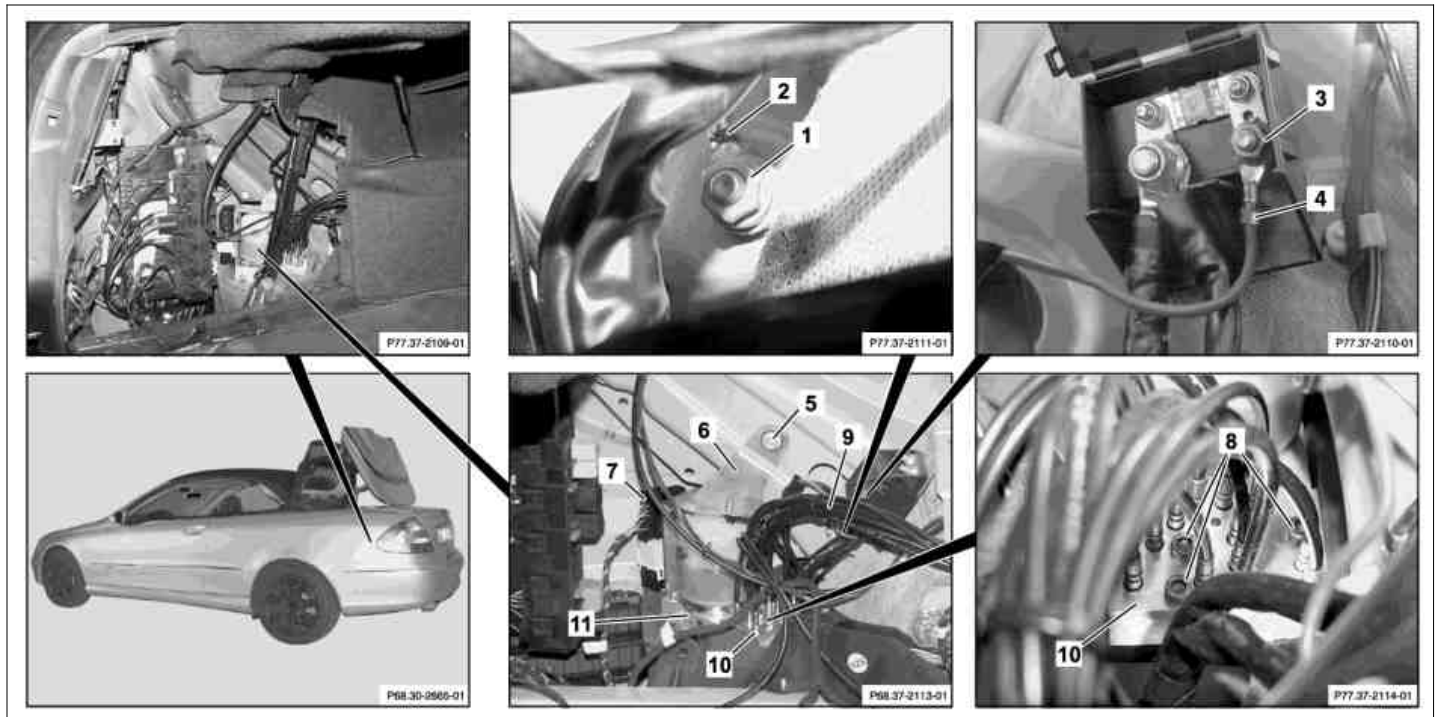


MODEL 209.4

- 11 Hydraulic pump
- 12 Bolt






 
 


 

P77.37-2181-06



P77.37-2115-09

- 1 Nut
- 2 Hydraulic pump ground cable
- 3 Nut
- 4 Hydraulic pump power supply cable
- 5 Nut
- 6 Hydraulic pump bracket
- 7 Connector
- 8 Nut
- 9 Hydraulic lines
- 10 Nut
- 11 Hydraulic pump

	<b>Remove</b>	
--	---------------	--

 <b>Danger!</b>	Risk of injury when performing check and repair work in area of roll bar	Before working in the area of the roll bar, pull out the rear head restraints by hand. Keep body parts out of the area where the roll bar extends.	AS91.00-Z-0003-01QA
 <b>Danger!</b>	<b>Risk of injury caused by moving parts that can pinch, crush or,</b> in extreme cases even <b>sever</b> extremities.	No parts of the body or limbs should be within the operating range of the mechanism when components are in motion.	AS00.00-Z-0009-01A
 <b>Danger!</b>	<b>Risk of injury</b> to skin or eyes from hydraulic fluid spraying out under pressure. <b>Risk of poisoning</b> from swallowing hydraulic fluid.	Depressurize the hydraulic system completely before starting any work on the system. Wear protective clothing and safety glasses.	AS00.00-Z-0013-01A
1	Check supply pressure of hydraulic pump (11).		AR77.37-P-4204-01QA
2	Open trunk lid		
3	Remove left side wall lining in trunk		AR68.30-P-4601QA
4	Loosen bolt (12) on hydraulic pump (11)	 Pressure is relieved from hydraulic system	
5	Remove soft top compartment lid of hydraulic cylinder	 Lay soft top compartment lid hydraulic cylinder down to side with lines connected.	AR77.37-P-4175QA
6	Disconnect plug (7) from hydraulic unit		
7	Unscrew nut (5) from hydraulic pump bracket (6).		
8	Unscrew nut (1)		
9	Remove hydraulic pump ground line (2)		
10	Unscrew nut (3)		
11	Remove hydraulic pump power supply cable (4)		
12	Disconnect hydraulic lines (9) from hydraulic pump (11)		AR77.37-P-1000-04KA
13	Remove hydraulic pump (11)		
	<b>Install</b>		
14	Install hydraulic pump (11)		
15	Connect hydraulic lines (9) to hydraulic pump (11)		AR77.37-P-1000-04KA
16	Screw on hydraulic pump bracket (6) with nut (5)		
17	Connect plug (7) to hydraulic pump (11)		
18	Install hydraulic pump ground cable (2)		
19	Tighten nut (1)		
20	Remove hydraulic pump power supply cable (4)		
21	Tighten nut (3)		
22	Tighten bolt (12) on hydraulic pump (11)		
23	Install soft top compartment lid hydraulic cylinder		AR77.37-P-4175QA
24	Check oil level of hydraulic system Hydraulic fluids (Specification 343.0)	 If necessary correct oil level Sheet 343.0  Oil filler screw to hydraulic unit reservoir	BB00.40-P-0343-00A *BA77.37-P-1003-01C
 <b>BB</b>			
25	Check hydraulic pump (11) for leakage and proper function		
26	Install left side wall lining in trunk		AR68.30-P-4601QA
27	Close trunk lid		

 **Soft top - Hydraulics**

Number	Designation	Model 209.4
BA77.37-P-1003-01C	Oil filler screw to hydraulic unit reservoir	Nm 2