

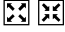 




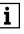 
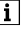 
P77.39-2080-09

## Shown on model 209.4

- 1 Electrical connector  
2 Screw  
3 Soft top bow

- 4 Safety bolt  
5 Hydraulic cylinder  
6 Soft top support

- S84/15 Soft top bow "down/up" limit switch

	Remove/install		
 <b>Danger!</b>	<b>Risk of injury</b> when performing check and repair work in area of roll bar	Before working in the area of the roll bar, pull out the rear head restraints by hand. Keep body parts out of the area where the roll bar extends.	AS91.00-Z-0003-01QA
 <b>Danger!</b>	<b>Risk of injury</b> caused by moving parts that can <b>pinch, crush</b> or, in extreme cases, even <b>sever</b> extremities	No parts of the body or limbs should be within the operating range of the mechanism when moving components.	AS00.00-Z-0009-01A
 <b>Danger!</b>	<b>Risk of injury</b> caused by scraping or cutting body parts on sharp vehicle parts	Always wear protective gloves when working on or near sharp and non-deburred vehicle parts. Deburr repair panels.	AS00.00-Z-0017-01A
1	Cover vehicle in left rear area	 To prevent scratching the paint during assembly work.	
2	Close soft top	 Leave soft top bow and soft top compartment cover in upright position	
3	Unclip safety bolt (4) and pull out hydraulic cylinder (5)		
4	Lay hydraulic line (5) down	 For better access to soft top bow up/down limit switch (S84/15).	
5	Disconnect electrical connector (1) from soft top bow up/down limit switch (S84/15)		
6	Unscrew bolt (2) from soft top bow up/down limit switch (S84/15)		
7	Unclip soft top bow up/down limit switch (S84/15) from soft top bow (3)		
8	Unclip soft top bow up/down limit switch (S84/15) from soft top support (6) and remove from vehicle		
9	Install in the reverse order		