

<b>VIN</b>	WDD1714561A001234	<b>Model series/model designation</b>	209.372
<b>Order number</b>		<b>License plate</b>	

Full list of fault codes and events

6000	Control unit A89 (DTR controller unit) is defective.
6001	Control unit A89 (DTR controller unit) is defective.
6002	Control unit A89 (DTR controller unit) is defective.
6003	Control unit A89 (DTR controller unit) is defective.
6004	Control unit A89 (DTR controller unit) is defective.
6005	Control unit A89 (DTR controller unit) is defective.
6006	Control unit A89 (DTR controller unit) is defective.
6007	Control unit A89 (DTR controller unit) is defective.
6008	Control unit A89 (DTR controller unit) is defective.
6009	Control unit A89 (DTR controller unit) is defective.
6010	Control unit A89 (DTR controller unit) is defective.
6011	Control unit A89 (DTR controller unit) is defective.
6012	Control unit A89 (DTR controller unit) is defective.
6013	Control unit A89 (DTR controller unit) is defective.
6014	Control unit A89 (DTR controller unit) is defective.
6015	Control unit A89 (DTR controller unit) is defective.
6016	Control unit A89 (DTR controller unit) is defective.
6017	Control unit A89 (DTR controller unit) is defective.
6018	Control unit A89 (DTR controller unit) is defective.
6019	Control unit A89 (DTR controller unit) is defective.
6020	Control unit A89 (DTR controller unit) is defective.
6021	Control unit A89 (DTR controller unit) is defective.
6022	Control unit A89 (DTR controller unit) is defective.
6023	Control unit A89 (DTR controller unit) is defective.
6025	Control unit A89 (DTR controller unit) is defective.
6026	Control unit A89 (DTR controller unit) is defective.
6043	Control unit A89 (DTR controller unit) is defective.
6044	Control unit A89 (DTR controller unit) is defective.
6045	Control unit A89 (DTR controller unit) is defective.
6046	Control unit A89 (DTR controller unit) is defective.
6047	Control unit A89 (DTR controller unit) is defective.
6048	Control unit A89 (DTR controller unit) is defective.
6100	Control unit A89 (DTR controller unit) is defective.
6101	Control unit A89 (DTR controller unit) is defective.
6102	Control unit A89 (DTR controller unit) is defective.
6103	Control unit A89 (DTR controller unit) is defective.
6104	Control unit A89 (DTR controller unit) is defective.
6105	Control unit A89 (DTR controller unit) is defective.
6106	Control unit A89 (DTR controller unit) is defective.
6107	Control unit A89 (DTR controller unit) is defective.
6108	Control unit A89 (DTR controller unit) is defective.

6109	Control unit A89 (DTR controller unit) is defective.
6110	Control unit A89 (DTR controller unit) is defective.
6111	Control unit A89 (DTR controller unit) is defective.
6112	Control unit A89 (DTR controller unit) is defective.
6113	Control unit A89 (DTR controller unit) is defective.
6114	Control unit A89 (DTR controller unit) is defective.
6115	Control unit A89 (DTR controller unit) is defective.
6116	Control unit A89 (DTR controller unit) is defective.
6117	Control unit A89 (DTR controller unit) is defective.
6118	Control unit A89 (DTR controller unit) is defective.
6119	Control unit A89 (DTR controller unit) is defective.
6120	Control unit A89 (DTR controller unit) is defective.
6121	Check component A89 (DTR controller unit).
6122	Check component A89 (DTR controller unit).
6123	Check component A89 (DTR controller unit).
6124	Control unit A89 (DTR controller unit) is defective.
6141	Control unit A89 (DTR controller unit) is defective.
6142	Control unit A89 (DTR controller unit) is defective.
6143	Control unit A89 (DTR controller unit) is defective.
6144	Control unit A89 (DTR controller unit) is defective.
6145	Control unit A89 (DTR controller unit) is defective.
6160	Control unit A89 (DTR controller unit) is defective.
6161	Control unit A89 (DTR controller unit) is defective.
6162	Control unit A89 (DTR controller unit) is defective.
6163	Control unit A89 (DTR controller unit) is defective.
6164	Control unit A89 (DTR controller unit) is defective.
6165	Control unit A89 (DTR controller unit) is defective.
6180	Control unit A89 (DTR controller unit) is defective.
6181	Control unit A89 (DTR controller unit) is defective.
6190	Control unit A89 (DTR controller unit) is defective.
6191	Control unit A89 (DTR controller unit) is defective.
6192	Control unit A89 (DTR controller unit) is defective.
6193	Control unit A89 (DTR controller unit) is defective.
6194	Control unit A89 (DTR controller unit) is defective.
6195	Control unit A89 (DTR controller unit) is defective.
6196	Control unit A89 (DTR controller unit) is defective.
6210	Control unit A89 (DTR controller unit) is defective.
6211	Control unit A89 (DTR controller unit) is defective.
6212	Control unit A89 (DTR controller unit) is defective.
6213	Control unit A89 (DTR controller unit) is defective.
6214	Control unit A89 (DTR controller unit) is defective.
6215	Control unit A89 (DTR controller unit) is defective.
6230	The calculated steering angle correction value is faulty.
6241	Control unit A89 (DTR controller unit) is defective.
6242	Control unit A89 (DTR controller unit) is defective.
6243	Control unit A89 (DTR controller unit) is defective.
6244	Control unit A89 (DTR controller unit) is defective.
6245	Control unit A89 (DTR controller unit) is defective.

6246	Control unit A89 (DTR controller unit) is defective.
6247	Control unit A89 (DTR controller unit) is defective.
6248	Control unit A89 (DTR controller unit) is defective.
7275	DTR : The brake torque is implausible.
7276	DTR : System 'A89 (DTR controller unit)' deactivated
Event 6024	The supply voltage of the control unit is too low (undervoltage).
Event 6040	CAN controller: CAN bus OFF
Event 6041	CAN controller: CAN bus OFF
Event 6042	CAN controller: CAN bus OFF
Event 6055	CAN communication is faulty.
Event 6231	One or more messages sent from control unit N47-5 (ESP control unit) via the CAN bus is implausible. ( Steering angle , Rotational speed )
Event 6240	The fitted tire dimensions may be unauthorized.
Event 7200	DTR : No CAN message was received from control unit Engine management.
Event 7201	DTR : The CAN communication of the engine control module is faulty.
Event 7202	DTR : Control module Motor electronics is incorrectly coded or there is a fault in the CAN communication with control module Motor electronics. ( Model series , Body version )
Event 7203	DTR : Control module Motor electronics is incorrectly coded or there is a fault in the CAN communication with control module Motor electronics. ( Engine version )
Event 7204	DTR : CAN signal 'Engine torque' from control unit Motor electronics is implausible.
Event 7205	DTR : The CAN message from control module Motor electronics is invalid or implausible. CAN signal 'Driver requested torque' from control unit Motor electronics is implausible.
Event 7206	DTR : The CAN message from control module Motor electronics is invalid or implausible. ( Engine speed )
Event 7207	DTR : The CAN message from control module Motor electronics is invalid or implausible. ( Static engine torque )
Event 7208	DTR : Control module Motor electronics is incorrectly coded or there is a fault in the CAN communication with control module Motor electronics.
Event 7209	DTR : The CAN message from control module Motor electronics is invalid or implausible. ( Kickdown )
Event 7220	DTR : No CAN message was received from control unit Transmission control module.
Event 7221	DTR : The CAN message from control module Transmission control module is invalid or implausible.
Event 7222	DTR : The CAN message from control module Transmission control module is invalid or implausible. ( Actual gear / Target gear )
Event 7223	DTR : The CAN message from control module Transmission control module is invalid or implausible.
Event 7230	DTR : No CAN message was received from control unit A1 (Instrument cluster).
Event 7240	DTR : No CAN message was received from control unit N73 (EIS [EVS] control unit).
Event 7241	DTR : The CAN message from control module EVS is invalid or implausible. ( National version )
Event 7242	DTR : The CAN message from control module EVS is invalid or implausible.
Event 7243	DTR : Control module EVS is incorrectly coded or there is a fault in the CAN communication with control module EVS. ( Modification year )
Event 7244	DTR : The CAN message from control module EVS is invalid or implausible.

Event 7245	DTR : Control module EZS is incorrectly coded or there is a fault in the CAN communication with control module EZS.
Event 7246	DTR : No CAN message was received from control unit N93 (Central gateway control unit).
Event 7250	DTR : No CAN message was received from control unit N80 (Steering column module).
Event 7251	DTR : CAN communication to control module SCM [MRM] is faulty.
Event 7252	DTR : The CAN message from control module SCM [MRM] is invalid or implausible. ( Steering angle )
Event 7253	DTR : The CAN message from control module SCM [MRM] is invalid or implausible. ( Steering angle sensor is not initialized. )
Event 7254	DTR : The CAN message from control module SCM [MRM] is invalid or implausible. ( Cruise control lever )
Event 7255	DTR : The CAN message from control module SCM [MRM] is invalid or implausible. ( Cruise control lever )
Event 7256	DTR : The CAN message from control module SCM [MRM] is invalid or implausible. ( Cruise control lever )
Event 7260	DTR : No CAN message was received from control unit N47-5 (ESP control unit).
Event 7261	DTR : CAN communication to control module ESP is faulty.
Event 7262	DTR : CAN communication to control module ESP is faulty.
Event 7263	DTR : CAN communication to control module ESP is faulty.
Event 7264	DTR : CAN communication to control module ESP is faulty.
Event 7265	DTR : The CAN message from control module ESP is invalid or implausible. ( Brake torque )
Event 7266	DTR : Fault of control module ESP
Event 7267	DTR : Fault of control module ESP
Event 7268	DTR : The CAN message from control module ESP is invalid or implausible. ( Wheel speeds )
Event 7269	DTR : The CAN message from control module ESP is invalid or implausible. ( Specified engine torque )
Event 7270	DTR : The CAN message from control module ESP is invalid or implausible. ( Wheel speeds , Rear )
Event 7271	DTR : The CAN message from control module ESP is invalid or implausible. ( Wheel speeds , Front )
Event 7273	DTR : The CAN message from control module ESP is invalid or implausible. ( Brake request of driver )
Event 7274	DTR : Control module ESP has detected undervoltage.
Event 7280	DTR : The supply voltage of the control unit is too low (undervoltage).

**Filename:** F:\Programme\Das\trees\PKW\Tempomat\dtr2\menues\mndtr001.s

**Cell co-ordinate:** 5 , 24