


**Assignment of fuse and relay box in left engine compartment**

1- 27 Fuses

K40/2 Driver-side fuse and relay module

A-J Relay

X Direction of travel

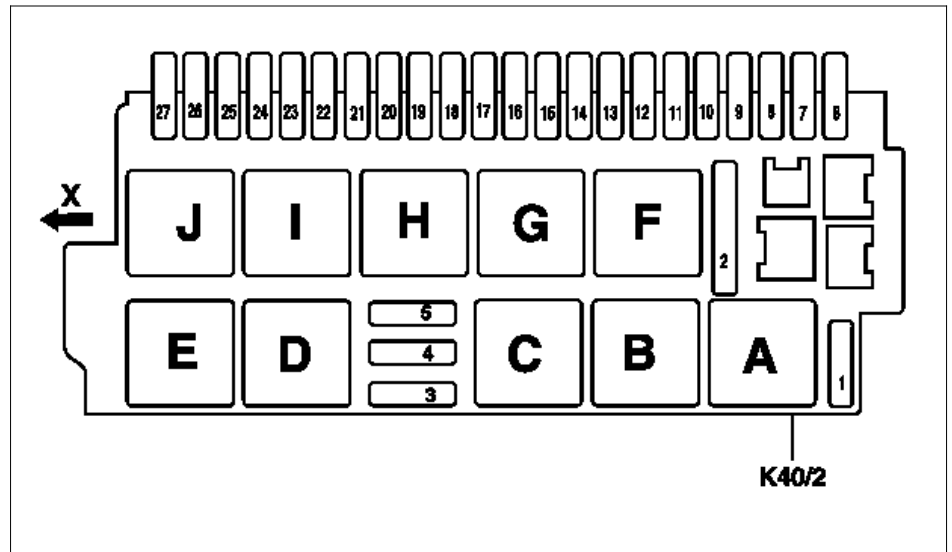

P54.15-2316-05

Fuse	Terminal	Cable ID (fused)	Fused function	Rating in amperes (A)
F1	30	-	Wiper park position heater relay (K40/2kA)	20
F2	30	-	High pressure and return flow pump relay (K40/2kF)	40
F3	30	-	<ul style="list-style-type: none"> <li>Steering column forward/back adjustment relay 1 (K40/2kD)</li> <li>Steering column forward/back adjustment relay 2 (K40/2kE)</li> </ul>	15
F4	30	-	<ul style="list-style-type: none"> <li>Steering column height adjustment relay 1 (K40/2kl)</li> <li>Steering column height adjustment relay 2 (K40/2kj)</li> </ul>	15
F5	15R	-	Wiper On and Off relay (K40/2kH)	40
F6	15	-	-	-
F7	15	-	-	-
F8	30	RD 0.75	Central gateway control unit (N93)	5
F9	30	PKWH 2.5	Left door control unit (N69/1)	40
F10	15	BKVT 0.75 BKVT 0.75 BKVT 0.75 RDGN 0.75	<ul style="list-style-type: none"> <li>Left front headlamp unit (E1)</li> <li>Right front headlamp unit (E2)</li> <li>Xenon headlamp control unit (E1n1, E2n2)</li> </ul>	10
	15	RDGN 0.75	Restraint systems control unit (N2/7)	7.5
F11	15R	BKYE 1.0	Circuit 15R/30 cutoff relay (K75)	30
F12	15R	-	Spare	-
F13	30	RDGN 1.5	ABC control unit (N51/2)	15
F14	15R	BKGN 0.75	Windshield washer fluid pump (M5/1)	7.5
F15	30	RDGN 1.0	<ul style="list-style-type: none"> <li>Data link connector (X11/4)</li> </ul>	10
F16	15R	PKYE 1.0	<b>Valid for code (855) TELE AID:</b> <ul style="list-style-type: none"> <li>D2B telephone and TELE AID transmitter/receiver (A35/17)</li> </ul>	5
	15R	PKYE 1.0	<b>Valid for code (853) MB standard telephone:</b> <ul style="list-style-type: none"> <li>D2B telephone transmitter/receiver (A35/13)</li> </ul>	5
F17	15R	RDYE 0.5	Vehicle-sensitive seat belt lock sensor (A60)	5
F18	15R	-	Spare	-

F19	15	BKYE 1.00	<b>Valid for engines 112.973, 113.963/992:</b> Fused via circuit 15 connector sleeve (Z3/29): <ul style="list-style-type: none"> <li>● Cylinder 1 ignition coil (T1/1)</li> <li>● Cylinder 2 ignition coil (T1/2)</li> <li>● Cylinder 3 ignition coil (T1/3)</li> <li>● Cylinder 4 ignition coil (T1/4)</li> <li>● Cylinder 5 ignition coil (T1/5)</li> <li>● Cylinder 6 ignition coil (T1/6)</li> <li>● Cylinder 7 ignition coil (T1/7)</li> <li>● Cylinder 8 ignition coil (T1/8)</li> </ul>	15
F20	15	BKGN 0.75	Data link connector (X11/4)	7.5
F21	15R	BKYE 0.5	Instrument cluster (A1)	5
F22	30	RDYE 0.5	Instrument cluster (A1)	5
F23	30	RDWH 1.0 RDWH 1.0	<ul style="list-style-type: none"> <li>● AAC [KLA] control and operating unit (N22)</li> <li>● Coolant circulation pump (M13)</li> </ul>	10
F24	30	RDWH 0.5	Stop lamp switch (S9/1)	5
F25	30	RDYE 0.75	Alarm signal horn (H3)	7.5
F26	30	RDBU 0.5	Lower control panel control unit (N72)	5
F27	30	RDVT 2.5	Left front seat adjustment control unit with memory (N32/1)	30