

### Assignment of fuse and relay box in left engine compartment


1-27 Fuses

K40/2 Driver-side fuse and relay module

A-J Relays

X Direction of travel

**i** Multiple designations are available for fuses for model series 230.4.

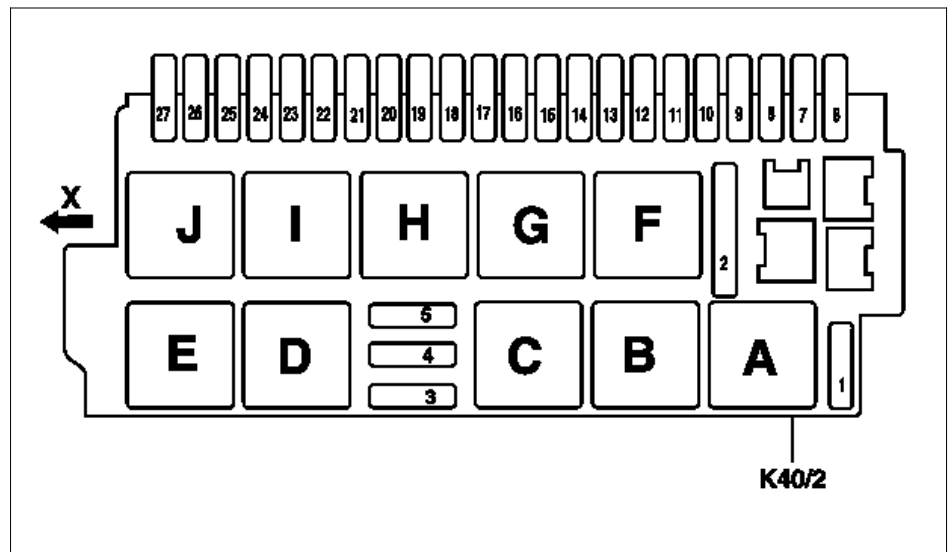

P54.15-2316-05

Fuse	Terminal	Cable ID (fused)	Fused function	Fuse rating in amperes (A)
f1	30	BK 2.5	<ul style="list-style-type: none"> <li>Wiper park position heater (R2/10)</li> </ul>	20
f2	30	-	Spare	-
f3	30	- GYGN 1,5 - GYYE 1,5	<ul style="list-style-type: none"> <li>Relay 1, jacket tube longitudinal adjustment (K40/2kD)</li> <li>Fore/aft adjustment motor (M20m1)</li> <li>Relay 2, jacket tube longitudinal adjustment (K40/2kE)</li> <li>Fore/aft adjustment motor (M20m1)</li> </ul>	15
f4	30	- GYBK 1,5 - GYWH 1,5	<ul style="list-style-type: none"> <li>Steering column height adjustment relay 1 (K40/2kl)</li> <li>Height adjustment up/down motor (M20m2)</li> <li>Steering column height adjustment relay 2 (K40/2kJ)</li> <li>Height adjustment up/down motor (M20m2)</li> </ul>	15
f5	15R	- RD 2,5 GN 2,5 -	<ul style="list-style-type: none"> <li>Wiper stage 1 and 2 relay (K40/2kG)</li> <li>Wiper motor (M6/1)</li> <li>Wiper On and Off relay (K40/2kH)</li> </ul>	40
f6	15	RDGN 0,75	<ul style="list-style-type: none"> <li>Restraint systems control unit (N2/7)</li> </ul>	7.5
f7	15	RDGN 1.5	<ul style="list-style-type: none"> <li>Rear fuse and relay module (K40/5)</li> </ul>	5
f8	30	RD 0,75	<ul style="list-style-type: none"> <li>Central gateway control unit (N93)</li> </ul>	10
f9	30	PKWH 2,5 PKWH 2,5	<p><b>Valid for left-hand drive vehicles:</b></p> <ul style="list-style-type: none"> <li>Left door control unit (N69/1)</li> </ul> <p><b>Valid for right-hand drive vehicles:</b></p> <ul style="list-style-type: none"> <li>Right door control unit (N69/2)</li> </ul>	40
f10	15	BKVT 0.75 BKVT 0.75	<ul style="list-style-type: none"> <li>Left front lamp unit (E1)</li> <li>Right front lamp unit (E2)</li> </ul>	10
f11	15R	BKYE 4.0	<ul style="list-style-type: none"> <li>Circuit 15R/30 cutoff relay (K75)</li> </ul>	30
f12	15R	BKPK 0.75 RD 0,5	<ul style="list-style-type: none"> <li>Restraint systems control unit (N2/7)</li> <li>Weight Sensing System (WSS) control unit (N110)</li> </ul>	7.5
f13	30	RDGN 1,5	<p><b>Valid for code (487) Active Body Control (ABC):</b></p> <ul style="list-style-type: none"> <li>ABC control unit (N51/2)</li> </ul>	15
f14	15R	BKGN 0.75	<ul style="list-style-type: none"> <li>Windshield washer fluid pump (M5/1)</li> </ul>	7,5
f15	30	RDGN 1.0 RDGN 0,75	<ul style="list-style-type: none"> <li>Data link connector (X11/4)</li> <li>System diagnosis control unit (N55)</li> </ul>	10

f16	15R	PKYE 1,0	<b>Valid for code (359) TELE AID emergency call system</b>	5
	15R		<b>with code (491) US-version:</b> ● Emergency call system control unit (N123/4)	5
	15R	PKYE 0,35 PKYE 0,35 PKYE 0,5	<b>Valid for code (278) complete telephone preinstallation without portable CTEL:</b> ● Telephone interface (A34/4) ● E-call control unit (A35/8) ● Frequency selector control unit (N96)	5
		PKYE 1,0	<b>Valid for code (352) COMAND operating and display system</b> <b>with code (498) Japan version:</b> ● VICS power supply separation point (X137/1)	5
f17	15R	RDYE 0.5	● Vehicle-sensitive seat belt lock sensor (A60)	5
f18	15R	-	Spare	-
f19	15	PKRD 0,75	<b>Valid for engines 272, 273:</b> ● ME-SFI [ME] control unit (N3/10)	15
f20	15	BKGN 0.75	● Data link connector (X11/4)	7,5
f21	15R	BKYE 0.5	● Instrument cluster (A1)	5
f22	30	RDYE 0.5	● Instrument cluster (A1)	5
f23	30	RDWH 1.0 RDWH 1.0	<b>Valid for code (581) Automatic air conditioning:</b> ● Coolant circulation pump (M13) ● AAC [KLA] control and operating unit (N22)	10
f24	30	RDWH 0.5 RDWH 0.5	● Stop light switch (S9/1)	5
f25	30	RDYE 0.75	● Alarm horn (H3)	7,5
f26	30	RDBU 0.5	● Lower control panel control unit (N72)	5
f27	30	RDVT 2.5	● Left front seat adjustment control unit with memory (N32/1)	30