


Assignment of fuse and relay box in left engine compartment

1-27 Fuses

K40/2 Driver-side fuse and relay module

A-J Relay

X Direction of travel

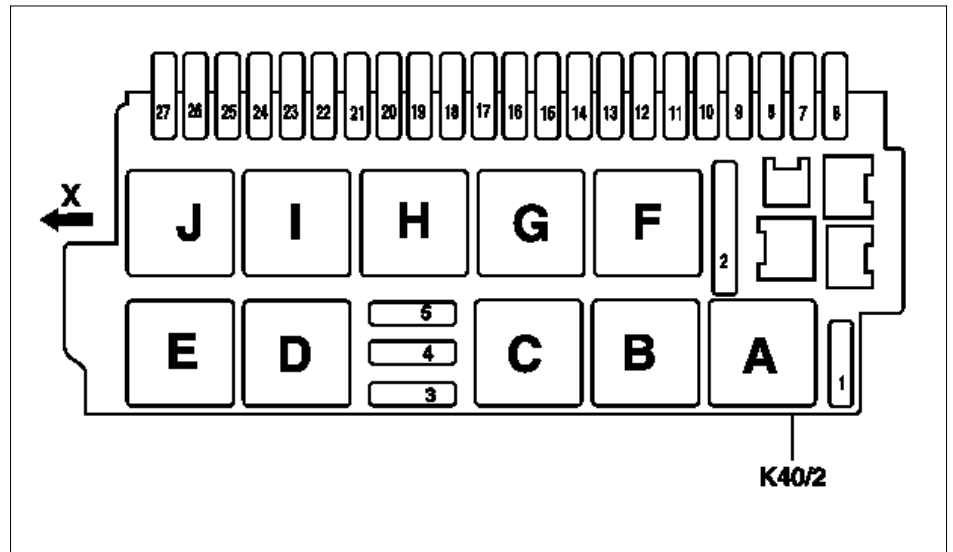

P54.15-2316-05

Fuse	Terminal	Cable ID (fused)	Fused function	Rating in amperes (A)
F1	30	-	Wiper park position heater relay (K40/2kA)	20
F2	30	-	High pressure and return flow pump relay (K40/2kF)	40
F3	30	-	<ul style="list-style-type: none"> Steering column forward/back adjustment relay 1 (K40/2kD) Steering column forward/back adjustment relay 2 (K40/2kE) 	15
F4	30	-	<ul style="list-style-type: none"> Steering column height adjustment relay 1 (K40/2kl) Steering column height adjustment relay 2 (K40/2kj) 	15
F5	15R	-	Wiper On and Off relay (K40/2kH)	40
F6	15	RDGN 0.75	Restraint systems control unit (N2/7)	7.5
F7	15	-	-	-
F8	30	RD 0.75	Central gateway control unit (N93)	5
F9	30	PKWH 2.5	Left door control unit (N69/1)	40
F10	15	BKVT 0.75 BKVT 0.75 BKVT 0.75	<ul style="list-style-type: none"> Left front headlamp unit (E1) Right front headlamp unit (E2) Xenon headlamp control unit (E1n1, E2n2) 	10
F11	15R	BKYE 1.0	Circuit 15R/30 cutoff relay (K75)	30
F12	15R	-	Spare	-
F13	30	RDGN 1.5	ABC control unit (N51/2)	15
F14	15R	BKGN 0.75	Windshield washer fluid pump (M5/1)	7.5
F15	30 30	RDGN 1.0 RDYE 2.5	<ul style="list-style-type: none"> Data link connector (X11/4) Valid for code (352a) COMAND operating and display system: <ul style="list-style-type: none"> COMAND operating, display and control unit (A40/3) 	10 20
F16	15R 15R	PKYE 1.0 PKYE 1.0	Valid for code (855) TELE AID: <ul style="list-style-type: none"> Telephone and TELE AID transmitter and receiver unit, D2B (A35/17) Valid for code (853) MB standard telephone: <ul style="list-style-type: none"> D2B telephone transmitter/receiver (A35/13) 	5 5
F17	15R	RDYE 0.5	Vehicle-sensitive seat belt lock sensor (A60)	5
F18	15R	-	Spare	-

F19	15	BKYE 1.00	Valid for engines 112.973, 113.963/992: Fused via circuit 15 connector sleeve (Z3/29): <ul style="list-style-type: none"> ● Cylinder 1 ignition coil (T1/1) ● Cylinder 2 ignition coil (T1/2) ● Cylinder 3 ignition coil (T1/3) ● Cylinder 4 ignition coil (T1/4) ● Cylinder 5 ignition coil(T1/5) ● Cylinder 6 ignition coil (T1/6) ● Cylinder 7 ignition coil (T1/7) ● Cylinder 8 ignition coil (T1/8) 	15
F20	15	BKGN 0.75	Data link connector (X11/4)	7.5
F21	15R	BKYE 0.5	Instrument cluster (A1)	5
F22	30	RDYE 0.5	Instrument cluster (A1)	5
F23	30	RDWH 1.0 RDWH 1.0	<ul style="list-style-type: none"> ● AAC [KLA] control and operating unit (N22) ● Coolant circulation pump (M13) 	10
F24	30	RDWH 0.5	Stop lamp switch (S9/1)	5
F25	30	RDYE 0.75	Alarm signal horn (H3)	7.5
F26	30	RDBU 0.5	Lower control panel control unit (N72)	5
F27	30	RDVT 2.5	Left front seat adjustment control unit with memory (N32/1)	30