


Assignment in the fuse and relay box in the right engine compartment

28-49 Fuses

K40/4 Passenger-side fuse and relay module

K-P Relay

X Direction of travel

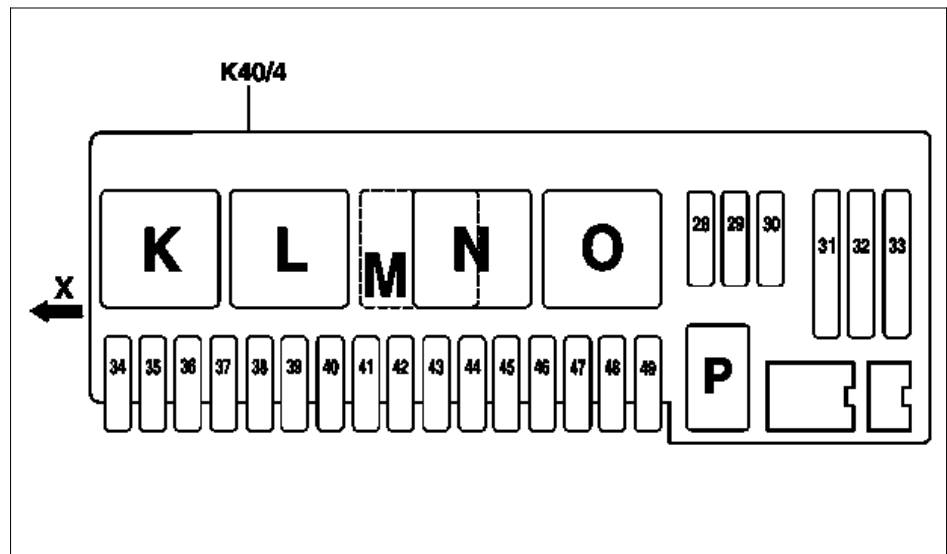

P54.15-2317-05

Fuse	Terminal	Cable ID (fused)	Fused function	Rating in amperes (A)
f28	30	-	<ul style="list-style-type: none"> Fanfare horn relay (K40/4kP) 	15
f29	30	-	<ul style="list-style-type: none"> Engine electronics and chassis relay (K40/4kK) 	10
f30	30	-	<ul style="list-style-type: none"> Engine electronics and chassis relay (K40/4kK) 	20
	30	RDGN 0.75	Valid for engines 112.973, 113.963: <ul style="list-style-type: none"> Purge control valve (Y58/1) 	20
f31	30	-	Valid for engines 112.973, 113.963: <ul style="list-style-type: none"> Air pump or reserve relay (K40/4kN) 	40
f32	30	-	Valid for engine 113.992: <ul style="list-style-type: none"> Air pump or reserve relay (K40/4kO) 	40
f33	30	RD 4.0	<ul style="list-style-type: none"> SBC hydraulic unit (A7/3) 	50
f34	87	YE 0,75	<ul style="list-style-type: none"> SBC hydraulic unit (A7/3) 	5
	87	YE 0,75	<ul style="list-style-type: none"> SBC pedal value sensor (B37/1) 	
f35	30	RDGN 4.0	<ul style="list-style-type: none"> SBC hydraulic unit (A7/3) 	40
f36	87	YE 0,5	<ul style="list-style-type: none"> ESP, SPS [PML] and BAS control module (N47-5) 	5
f37	87	RDWH 0,75	Valid for code (424) (SEQ) Sequentronic automated manual transmission: <ul style="list-style-type: none"> Gear identification switch (S16/10) 	7,5
		RDBK 0,75	Valid for code (423a) 5-speed automatic transmission (NAG): <ul style="list-style-type: none"> ETC [EGS] control module (N15/3) 	
f38	30	RDVT 0,75	<ul style="list-style-type: none"> Overhead control panel control module (N70) 	7,5
f39	30	RDBN 1,5	Valid for code (443) steering wheel heater: <ul style="list-style-type: none"> DC/DC converter control unit (N99) 	30
f40	15	RDGN 0.75	Valid for code (424) (SEQ) Sequentronic automated manual transmission: <ul style="list-style-type: none"> Automated manual transmission control module (N15/6) 	5
f41	30	RDVT 0,75	Valid for left-hand drive vehicles: <ul style="list-style-type: none"> Right door control module (N69/2) Valid for right-hand drive vehicles: <ul style="list-style-type: none"> Left door control module (N69/1) 	40
f42	30	RDGN 2.5	<ul style="list-style-type: none"> Right front seat adjustment control module with memory (N32/2) 	30

f43	30z	RDBU 2.5	Valid for engine 113.992: <ul style="list-style-type: none"> ● Camshaft Hall sensor, left cylinder bank (B6/1) ● Fuel injection valves (Y62) ● Rear fuse and relay module (K40/5) ● Electronic selector lever module control unit (N15/5) ● ME-SFI [ME] control unit (N3/10) 	40
f44	30z	RBGN 2,5	Valid for engine 113.992: <ul style="list-style-type: none"> ● Air pump switchover valve (Y32) ● Purge control valve (Y58/1) ● O2-Left sensor, upstream of catalytic converter (G3/3) ● O2-Right sensor, upstream of catalytic converter (G3/4) Valid for code (494) USA version, for engine 113.992: <ul style="list-style-type: none"> ● Activated charcoal canister shutoff valve (Y58/4) 	40
f45	87	RDBN 0,5	Valid for code (219a) Distronic (DTR): <ul style="list-style-type: none"> ● DTR control module (N63/1) 	5
	87	RDYE 0.8	Valid for code (487) Active Body Control (ABC): <ul style="list-style-type: none"> ● ABC control module (N51/2) 	5
	15	BKBU 0,5	<ul style="list-style-type: none"> ● AAC multifunction sensor (B31/1) 	5
f48	15	-	Spare	-
f49	15	BKVT 0.5	<ul style="list-style-type: none"> ● Electric suction fan engine and AC with integrated control (M4/7) 	5