


**Assignment of passenger-side fuse and relay module**

28-49 Fuses

K40/4 Passenger-side fuse and relay module

K-P Relay

X Direction of travel

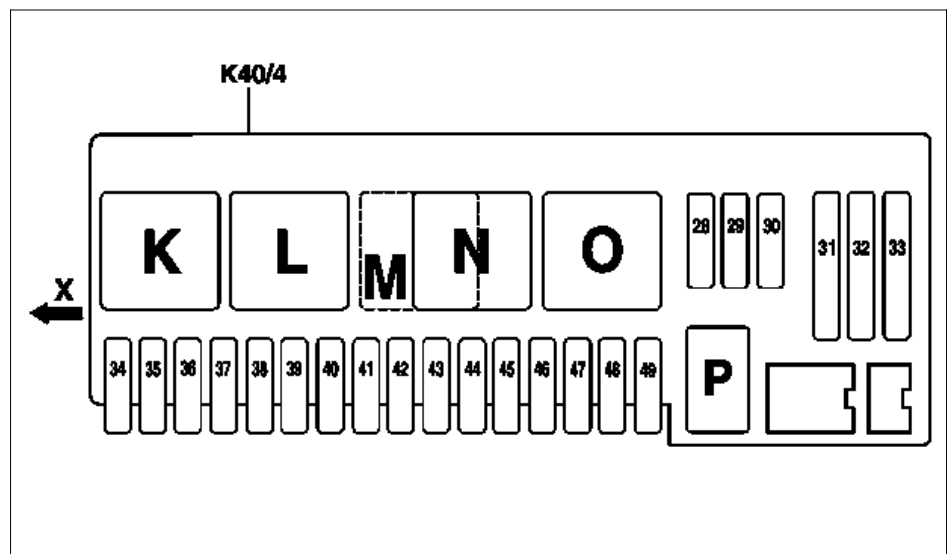

P54.15-2317-05

Position	Designation
K	<ul style="list-style-type: none"> <li>● Engine electronics and chassis relay (K40/4kK)</li> </ul>
L	<ul style="list-style-type: none"> <li>● Starter relay (K40/4kL)</li> </ul>
M	<p><b>Valid for engines 113.992, 275.951:</b></p> <ul style="list-style-type: none"> <li>● Circuit 30z relay (K40/4kM)</li> </ul>
N	<p><b>Valid for engines 112.973, 113.963:</b></p> <ul style="list-style-type: none"> <li>● Air pump or reserve relay (K40/4kN)</li> </ul>
O	<p><b>Valid for engines 113.992, 275.951:</b></p> <ul style="list-style-type: none"> <li>● Air pump or reserve relay (K40/4kO)</li> </ul>
P	<ul style="list-style-type: none"> <li>● Fanfare horn relay (K40/4kP)</li> </ul>