


Assignment of passenger-side fuse and relay module

- 28-49 Fuses
 K40/4 Passenger-side fuse and relay module
 K-P Relay
 X Direction of travel

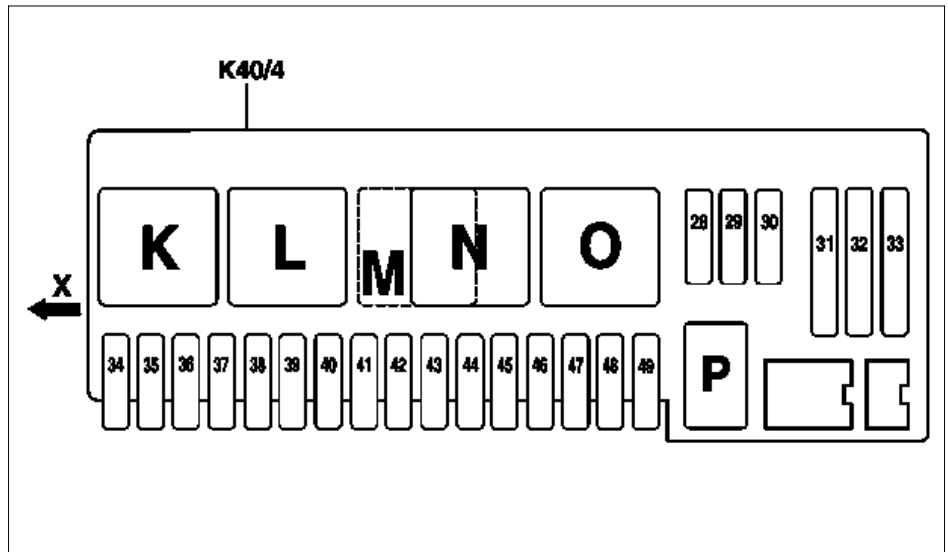

P54.15-2317-05

Position	Designation
K	<ul style="list-style-type: none"> ● Engine electronics and chassis relay (K40/4kK)
L	<ul style="list-style-type: none"> ● Starter relay (K40/4kL)
M	Valid for engines 113.992, 275.951 /981: <ul style="list-style-type: none"> ● Circuit 30z relay (K40/4kM)
N	Valid for engines 112.973, 113.963: <ul style="list-style-type: none"> ● Air pump or reserve relay (K40/4kN)
O	Valid for engines 113.992, 275.951 /981: <ul style="list-style-type: none"> ● Air pump or reserve relay (K40/4kO)
P	<ul style="list-style-type: none"> ● Fanfare horn relay (K40/4kP)