


**Assignment of passenger-side fuse and  
relay module**

28-49 Fuses

K40/4 Passenger-side fuse and relay  
module

K-P Relays

X Direction of travel

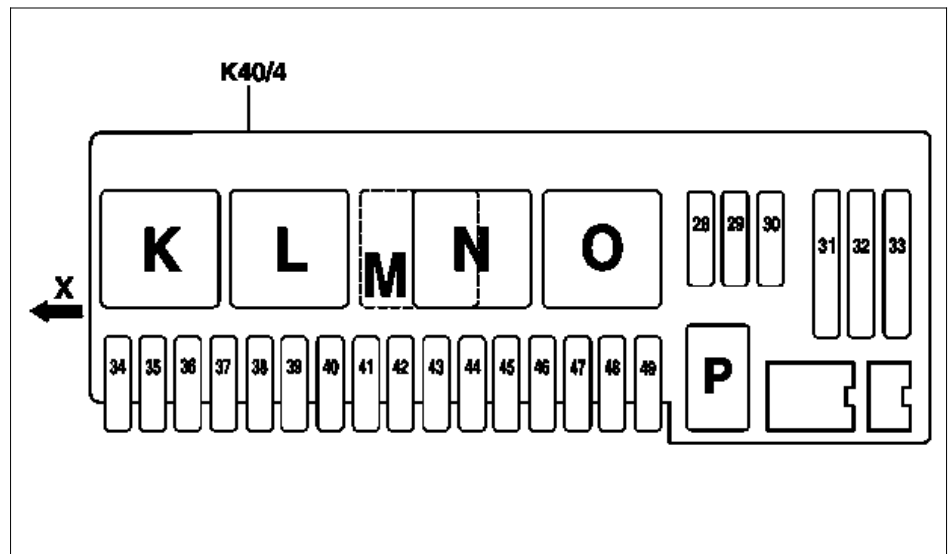

P54.15-2317-05

Position	Designation
K	<ul style="list-style-type: none"> <li>Engine electronics and chassis relay (K40/4kK)</li> </ul>
L	<ul style="list-style-type: none"> <li>Starter relay (K40/4kL)</li> </ul>
m	<b>Valid for engine 113.995 (AMG), 272, 273, 275:</b> <ul style="list-style-type: none"> <li>Circuit 30z relay (K40/4kM)</li> </ul>
N	<b>Valid for engine 113.995 (AMG):</b> <ul style="list-style-type: none"> <li>Air pump or reserve relay (K40/4kN)</li> </ul>
O	<b>Valid for engines 272, 273, 275:</b> <ul style="list-style-type: none"> <li>Air pump or reserve relay (K40/4kO)</li> </ul>
P	<ul style="list-style-type: none"> <li>Fanfare horn relay (K40/4kP)</li> </ul>